DIFFERENTIAL (Continued)

(7) Spread housing while measuring the distance with the dial indicator (Fig. 51).

CAUTION: Do not spread over 0.50 mm (0.020 in). Failure to heed caution may result in damage.

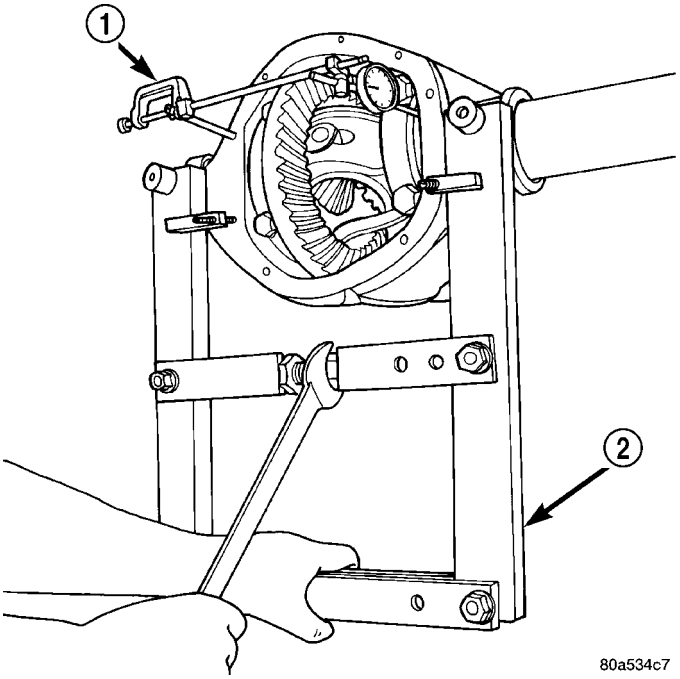

Fig. 51 SPREAD DIFFERENTIAL HOUSING

1 - INDICATOR
2 - SPREADER

(8) Remove dial indicator.

(9) Hold differential case in position while removing differential bearing caps.

(10) Remove differential from the housing (Fig. 52).

(11) Remove spreader from housing.

(12) Clean housing cavity with a flushing oil, light engine oil or lint free cloth.

NOTE: Do not use water, steam, kerosene or gasoline for cleaning.

DISASSEMBLY

(1) Remove ring gear.

(2) Drive out roll pin holding pinion gear mate shaft with a punch (Fig. 53).

(3) Remove pinion gear mate shaft from the differential case and pinion mate gears.

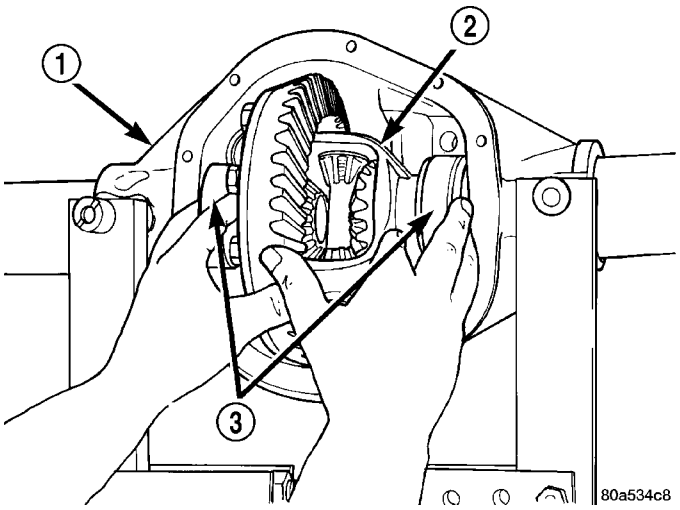

Fig. 52 DIFFERENTIAL CASE

1 - AXLE HOUSING
2 - DIFFERENTIAL CASE
3 - BEARING CUPS

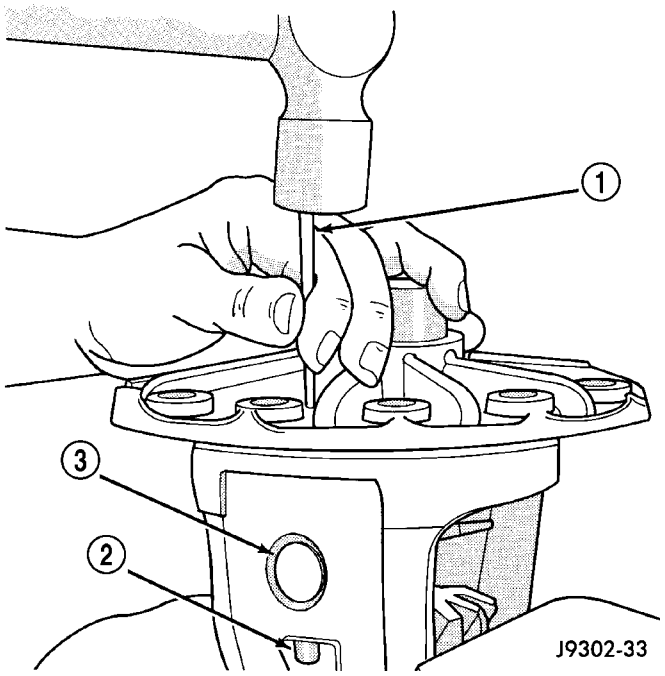

Fig. 53 MATE SHAFT ROLL PIN

1 - DRIFT
2 - LOCKPIN
3 - MATE SHAFT