DIFFERENTIAL (Continued)

(4) Rotate differential side gears and remove pinion mate gears and thrust washers (Fig. 54).

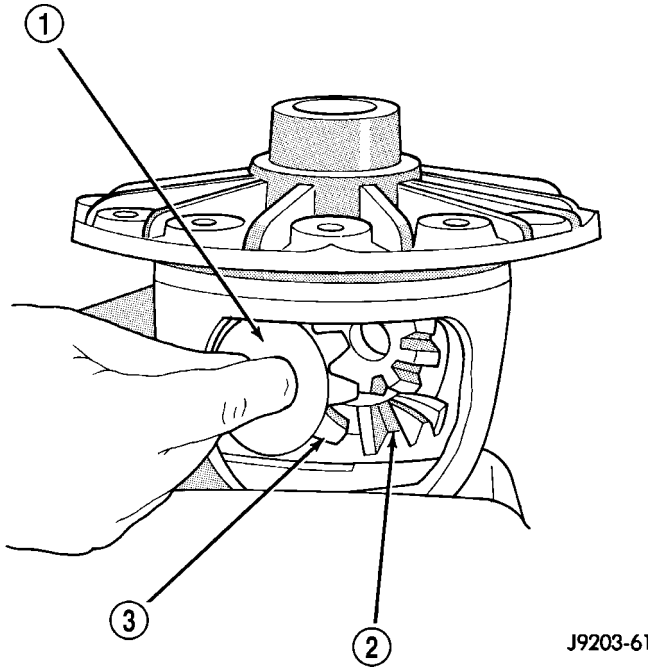

Fig. 54 PINION MATE GEAR

1 - THRUST WASHER
2 - SIDE GEAR
3 - PINION MATE GEAR

(5) Remove differential side gears and thrust washers.

ASSEMBLY

(1) Install differential side gears and thrust washers.

(2) Install pinion mate gears and thrust washers.

(3) Install pinion gear mate shaft. Align roll pin holes in shaft and the differential case.

(4) Install pinion mate shaft roll pin in the differential case (Fig. 55).

(5) Install the ring gear.

INSTALLATION

NOTE: If replacement differential bearings or differential case are being installed, differential side bearing shim requirements may change. Refer to Adjustments (Differential Bearing Preload and Gear Backlash) to determine the proper shim selection.

(1) Position Spreader W-129-B and Adapter Kit 6987, with the tool dowel pins seated in the locating holes (Fig. 56). Install holddown clamps and tighten turnbuckle finger-tight.

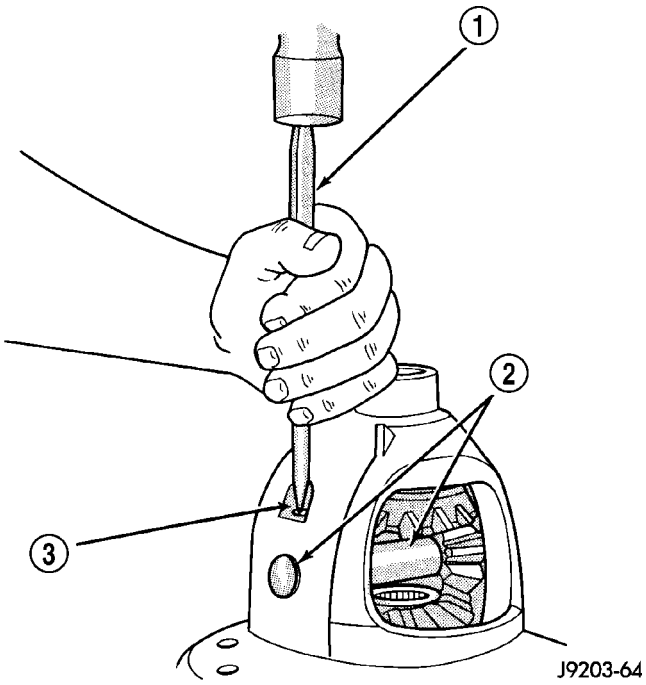

Fig. 55 MATE SHAFT ROLL PIN

1 - PUNCH
2 - PINION MATE SHAFT
3 - MATE SHAFT LOCKPIN

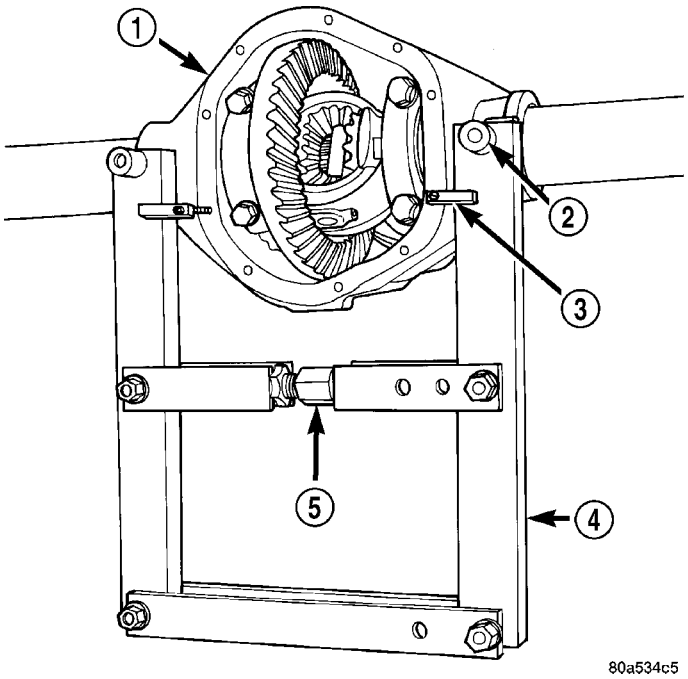

Fig. 56 SPREADER LOCATION

1 - AXLE HOUSING
2 - DOWEL
3 - SAFETY HOLD DOWN
4 - SPREADER
5 - TURNBUCKLE