DIFFERENTIAL (Continued)

(2) Install a Pilot Stud C-3288-B at the left side of the differential housing. Attach Dial Indicator C-3339 to pilot stud. Load the lever adapter against the opposite side of the housing (Fig. 57) and zero indicator.

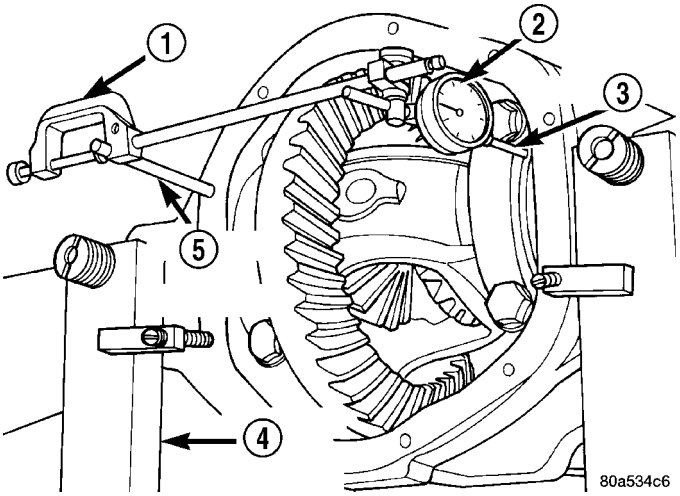


Fig. 57 DIAL INDICATOR LOCATION

1 - CLAMP
2 - DIAL INDICATOR
3 - LEVER ADAPTER
4 - SPREADER
5 - PILOT STUD

(3) Spread housing while measuring the distance with the dial indicator (Fig. 58).

CAUTION: Do not spread over 0.50 mm (0.020 in). Failure to heed caution may result in damage.

(4) Remove dial indicator.
(5) Install differential case in the housing. Tap differential case to seat bearings cups in the housing.
(6) Install bearing caps at their original locations (Fig. 59).
(7) Loosely install differential bearing cap bolts.
(8) Remove axle housing spreader.
(9) Tighten bearing cap bolts to 61 N·m (45 ft. lbs.).
(10) Install hub bearings and axle shafts.
(11) Install differential cover.

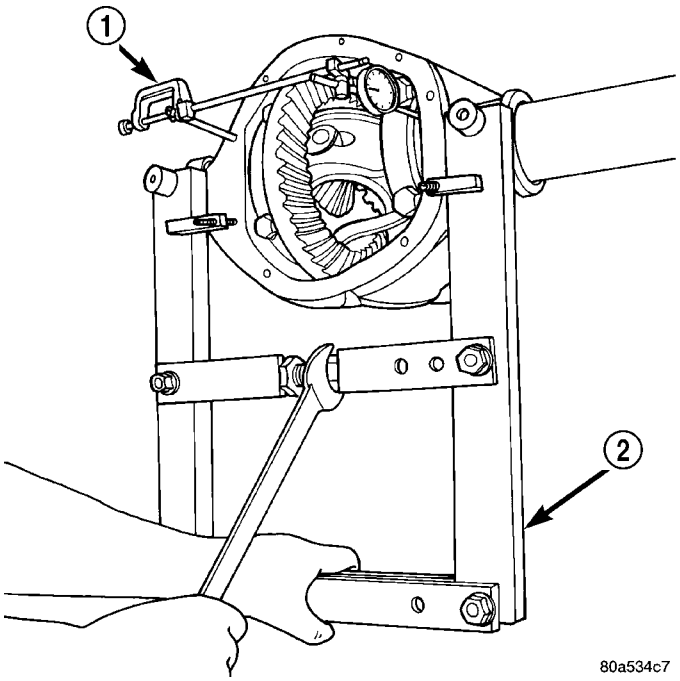


Fig. 58 SPREAD DIFFERENTIAL HOUSING

1 - INDICATOR
2 - SPREADER

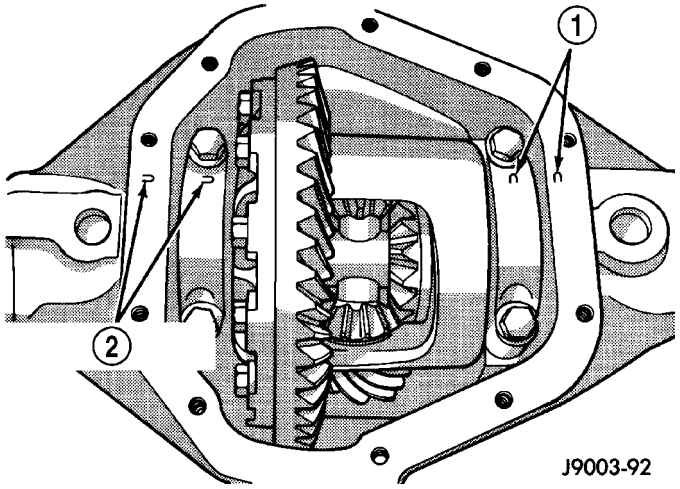


Fig. 59 BEARING CAP IDENTIFICATION

1 - INSTALLATION REFERENCE LETTERS
2 - INSTALLATION REFERENCE LETTERS