DIFFERENTIAL CASE BEARINGS

REMOVAL

(1) Remove bearings from the differential case with Puller/Press C-293-PA, C-293-39 Adapter and Plug SP-3289 (Fig. 60).

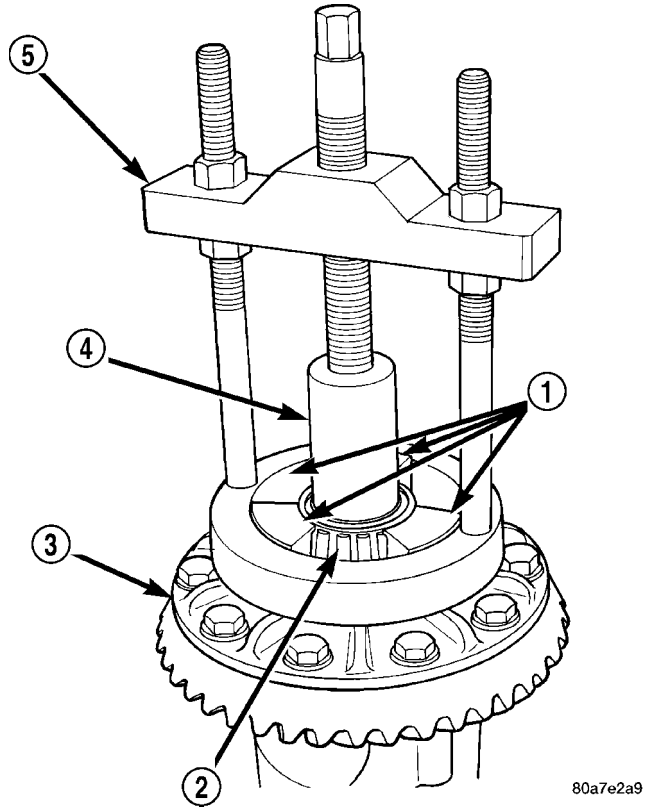

Fig. 60 DIFFERENTIAL BEARING

1 - ADAPTERS
2 - BEARING
3 - DIFFERENTIAL
4 - PLUG
5 - PULLER

INSTALLATION

NOTE: If replacement differential side bearings or differential case are being installed, differential side bearing shim requirements may change. Refer to Adjustments (Differential Bearing Preload and Gear Backlash) to determine the proper shim selection.

(1) Install differential side bearing shims onto differential case hubs.

(2) Install differential side bearings with Installer C-3716-A and Handle C-4171 (Fig. 61).

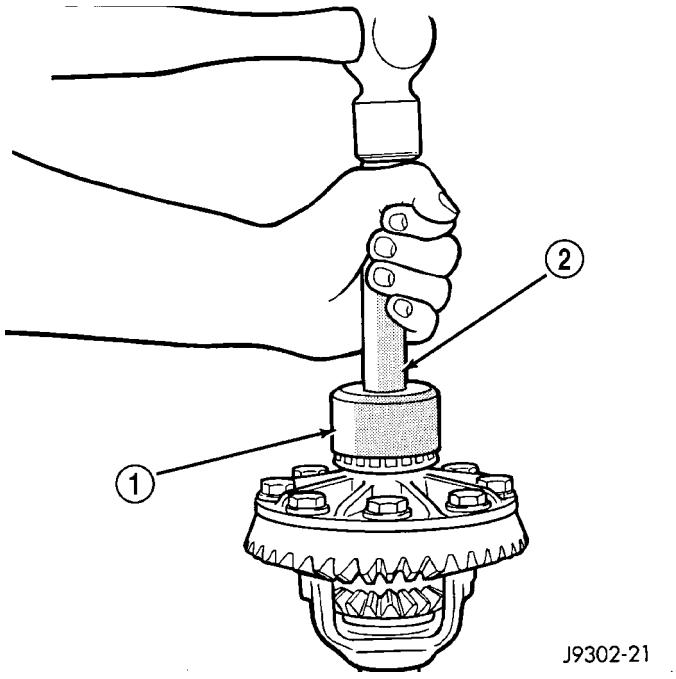

Fig. 61 DIFFERENTIAL CASE BEARING

1 - INSTALLER
2 - HANDLE