PINION GEAR/RING GEAR

REMOVAL

NOTE: The ring and pinion gears are serviced as a matched set. Never replace one gear without replacing the other matched gear.

(1) Remove differential from axle housing.
(2) Secure differential case in a vise with soft metal jaw (Fig. 62).
(3) Remove ring gear bolts from the differential case.
(4) Drive ring gear off the differential case with a dead-blow hammer (Fig. 62).

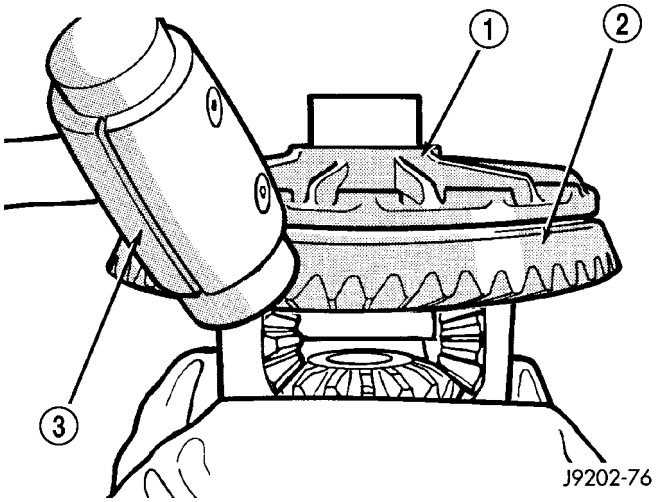


Fig. 62 RING GEAR

1 - DIFFERENTAIL CASE
2 - RING GEAR
3 - HAMMER

(5) Hold yoke with Spanner Wrench 6958 and remove the pinion nut and washer (Fig. 63).
(6) Remove pinion yoke with Remover C-452 and Flange Wrench C-3281 (Fig. 64).

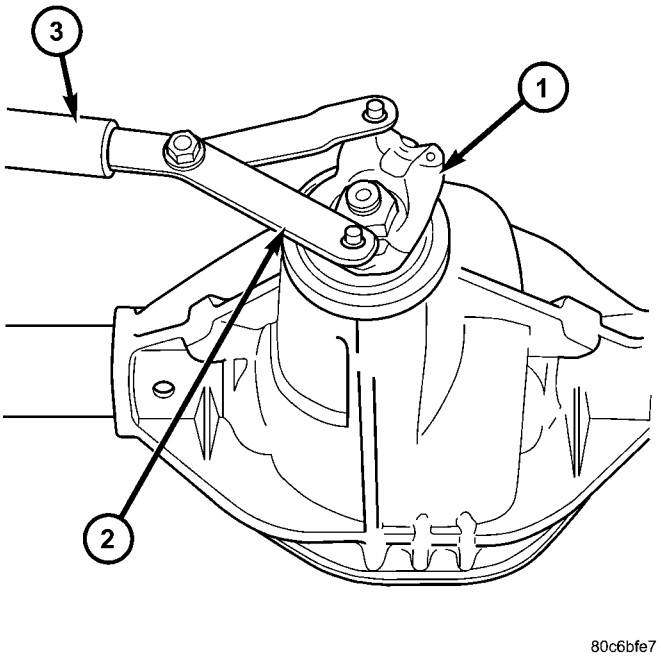


Fig. 63 YOKE SPANNER WRENCH

1 - PINION YOKE
2 - SPANNER WRENCH
3 - PIPE

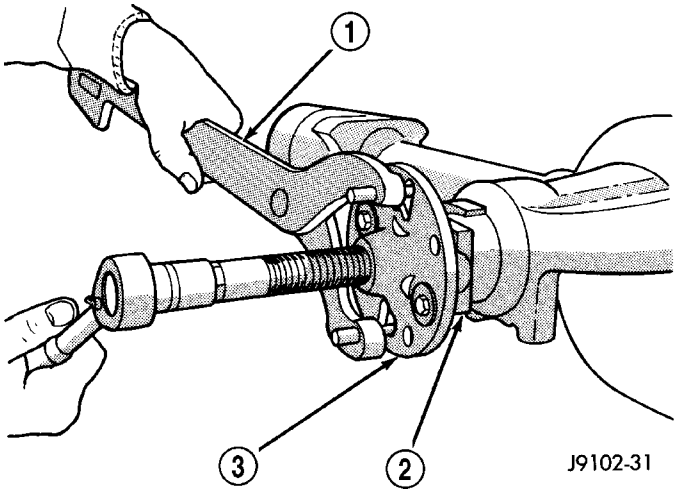


Fig. 64 PINION YOKE

1 - FLANGE WRENCH
2 - PINION YOKE
3 - REMOVER