PINION GEAR/RING GEAR (Continued)

(7) Remove pinion and collapsible spacer from the housing (Fig. 65).

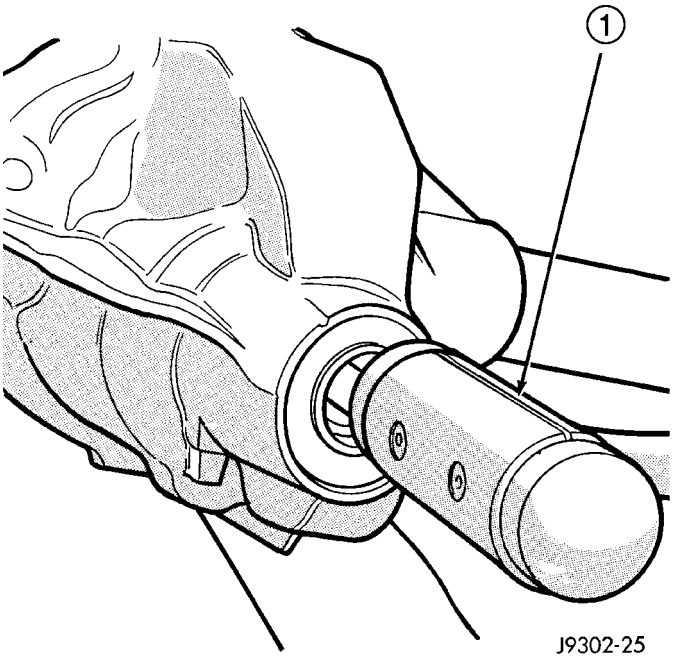


Fig. 65 PINION GEAR

1 - DEAD-BLOW HAMMER

(8) Remove front pinion bearing cup, bearing, oil slinger and pinion seal with Remover C-4345 and Handle C-4171 (Fig. 66).

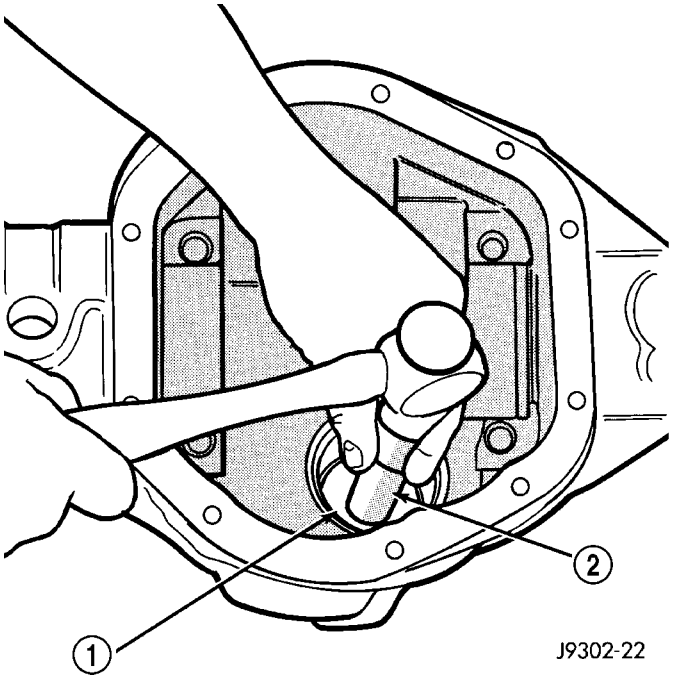


Fig. 66 FRONT BEARING CUP

1 - REMOVER
2 - HANDLE

(9) Remove rear pinion bearing cup from the housing (Fig. 67) with Remover D-149 and Handle C-4171.

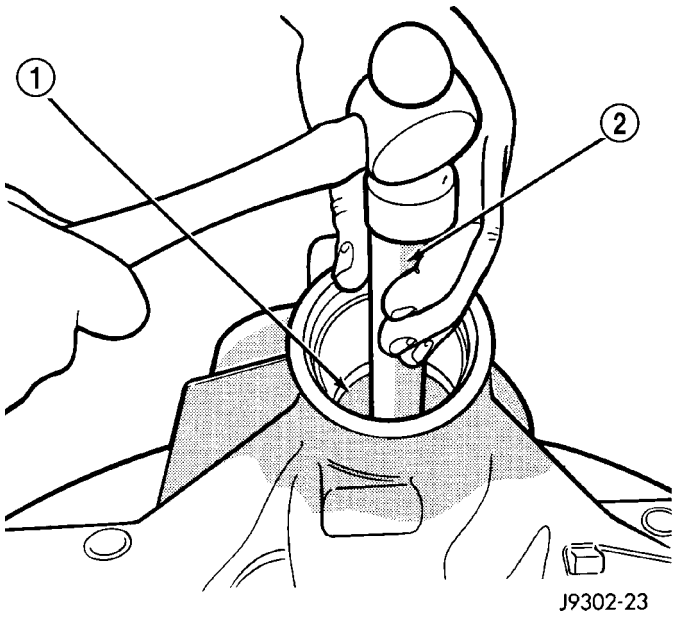


Fig. 67 REAR BEARING CUP

1 - REMOVER
2 - HANDLE

(10) Remove collapsible spacer from pinion shaft (Fig. 68).

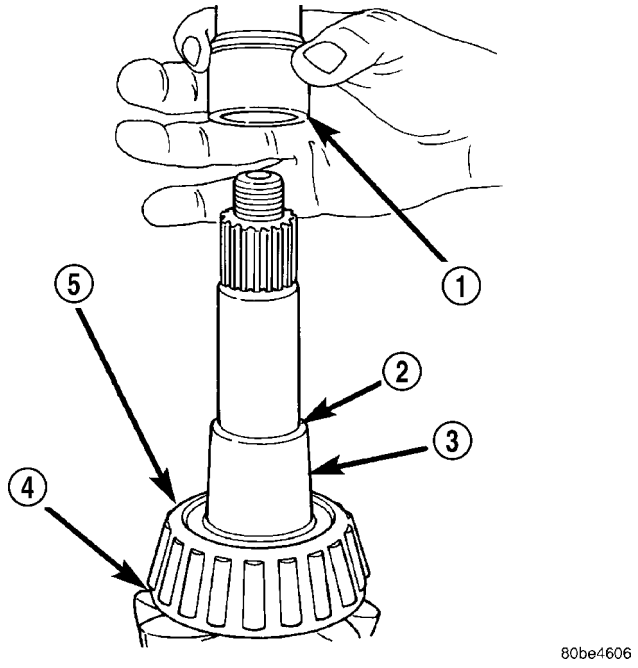


Fig. 68 COLLAPSIBLE SPACER

1 - COLLAPSIBLE SPACER
2 - SHOULDER
3 - PINION
4 - PINION DEPTH SHIM
5 - REAR BEARING