PINION GEAR/RING GEAR (Continued)

(3) Install front pinion bearing, and oil slinger.

(4) Apply a light coating of gear lubricant on the lip of pinion seal and install seal with an appropriate installer (Fig. 72).

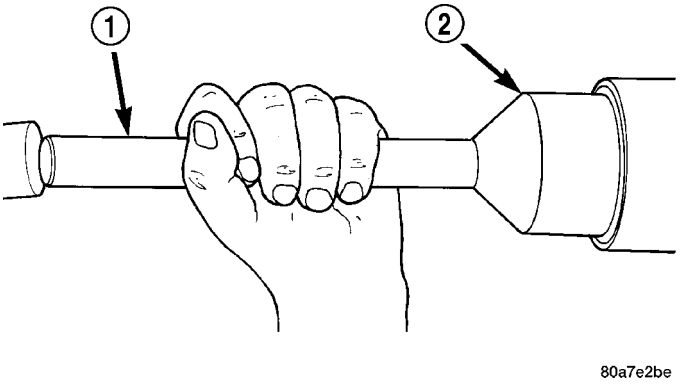

Fig. 72 PINION SEAL INSTALLER

1 - HANDLE
2 - INSTALLER

(5) Install rear pinion depth shim/oil slinger and bearing on the pinion shaft with Installer W-262 and a press (Fig. 73).

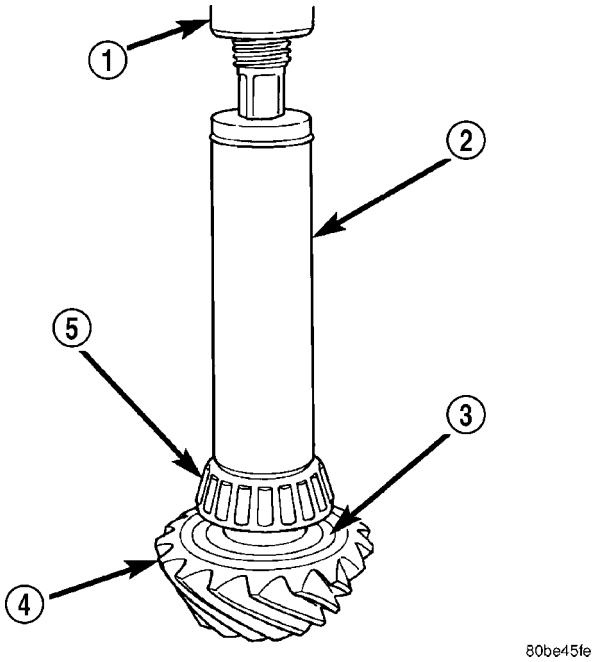

Fig. 73 REAR PINION BEARING

1 - PRESS
2 - INSTALLATER
3 - PINION DEPTH SHIM/OIL SLINGER
4 - DRIVE PINION
5 - REAR PINION BEARING

(6) Install **new** collapsible spacer on pinion shaft and install pinion into the housing (Fig. 74).

(7) Install yoke with Installer W-162-B, Cup 8109 and Spanner Wrench 6958 (Fig. 75).

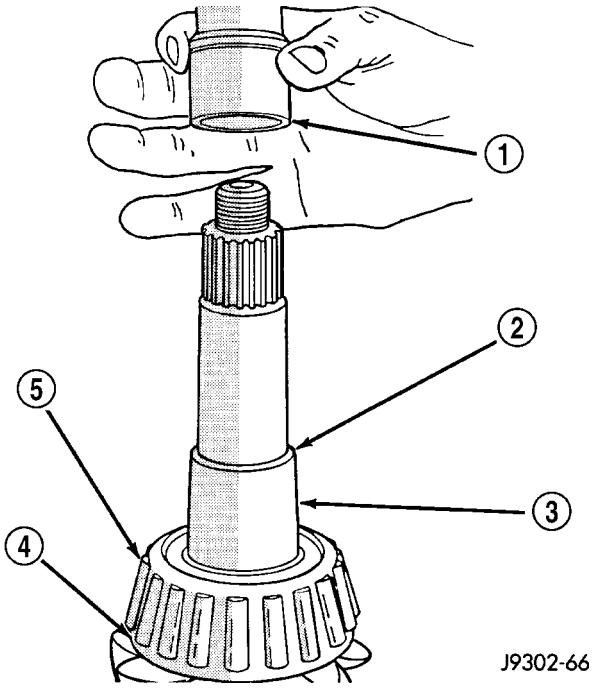

Fig. 74 COLLAPSIBLE PRELOAD SPACER

1 - COLLAPSIBLE SPACER
2 - SHOULDER
3 - PINION GEAR
4 - OIL SLINGER
5 - REAR BEARING

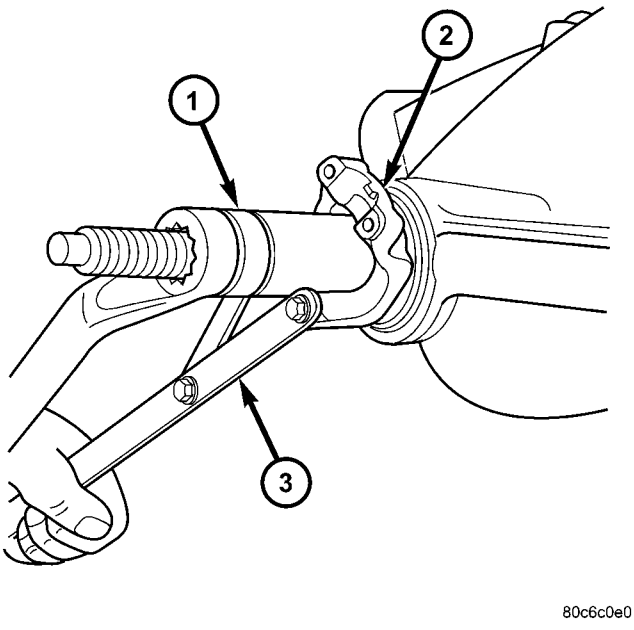

Fig. 75 PINION YOKE INSTALLER

1 - INSTALLER
2 - PINION YOKE
3 - SPANNER WRENCH

(8) Install pinion washer and a **new** nut onto the pinion. Tighten the nut to 216 N·m (160 ft. lbs.).