FRONT AXLE - 216FBI (Continued)

REMOVAL

(1) With vehicle in neutral, position vehicle on hoist.
(2) Position a lift under the axle and secure to the axle.
(3) Remove brake components.
(4) Remove vent hose from axle shaft tube.
(5) Remove propeller shaft.
(6) Remove stabilizer bar links at the axle (Fig. 1).

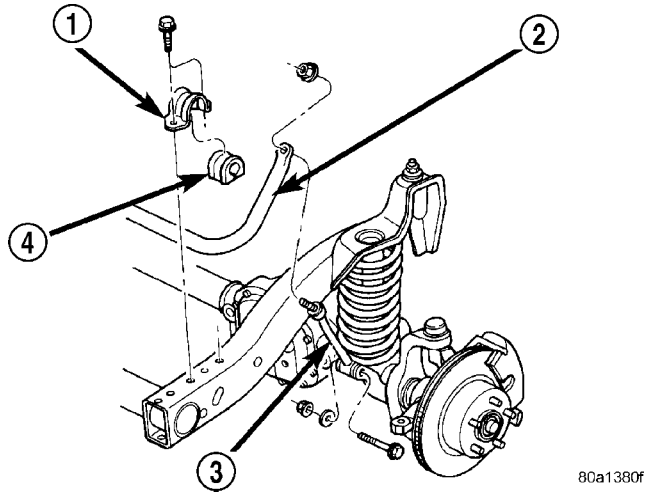

Fig. 1 STABILIZER BAR

1 - RETAINER
2 - STABILIZER BAR
3 - LINK
4 - BUSHING

(7) Remove shock absorbers from axle brackets (Fig. 2).
(8) Remove track bar from axle bracket (Fig. 3).
(9) Remove tie rod and drag link from steering knuckle.
(10) Remove steering damper from axle bracket.
(11) Remove upper and lower suspension arms from axle brackets.
(12) Lower lift enough to remove the axle. The coil springs will drop with the axle.
(13) Remove coil springs from the axle.

INSTALLATION

CAUTION: The weight of the vehicle must be supported by the springs before suspension arms and track bar fasteners can be tightened. Failure to heed caution may result in damage.

(1) Install springs and retainers and tighten retainer bolts to 21 N·m (16 ft. lbs.).

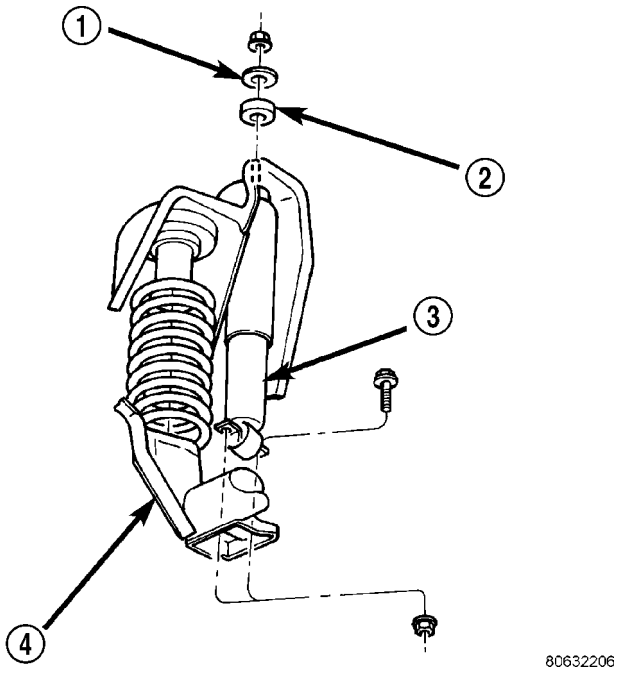

Fig. 2 COIL SPRING AND SHOCK ABSORBER

1 - RETAINER
2 - GROMMET
3 - SHOCK
4 - FRONT AXLE

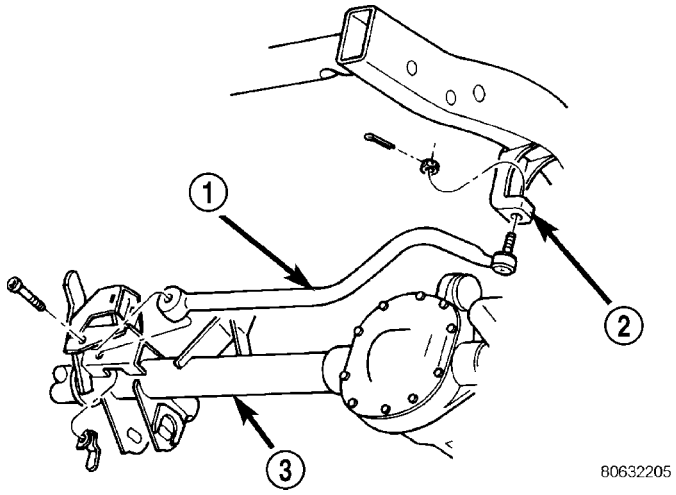

Fig. 3 TRACK BAR

1 - TRACK BAR
2 - FRAME BRACKET
3 - FRONT AXLE

(2) Position axle under vehicle and align it with the spring pads.