SINGLE CARDAN UNIVERSAL JOINT

REMOVAL

CAUTION: Clamp only the narrow forged portion of the yoke in the vise. Failure to heed caution may result in damage.

(1) Remove axle shaft.
(2) Remove bearing cap retaining snap rings (Fig. 34).

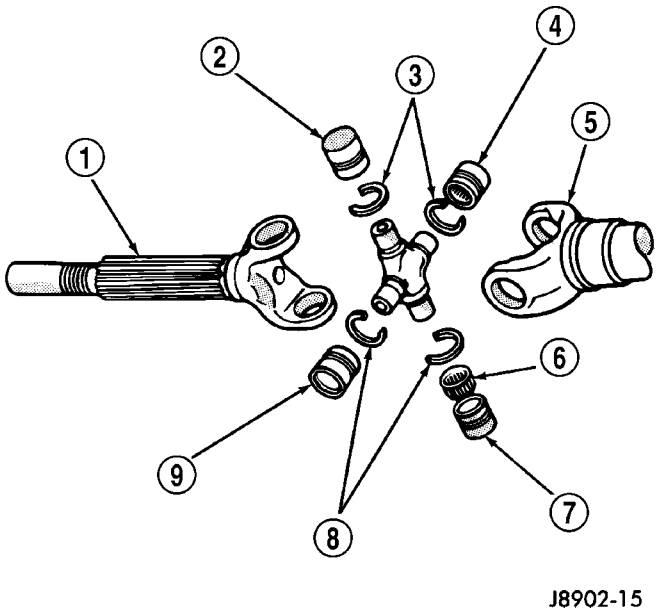

Fig. 34 AXLE SHAFT OUTER U-JOINT

1 - SHAFT YOKE
2 - BEARING CAP
3 - SNAP RINGS
4 - BEARING CAP
5 - SPINDLE YOKE
6 - BEARING
7 - BEARING CAP
8 - SNAP RINGS
9 - BEARING CAP

NOTE: Saturate the bearing caps with penetrating oil prior to removal.

(3) Place a socket (receiver) with an inside diameter larger than the bearing cap against the yoke and the perimeter of the bearing cap to be removed.
(4) Place a socket (driver) with an outside diameter smaller than the bearing cap against the opposite bearing cap.
(5) Position yoke with the sockets in a vise (Fig. 35).

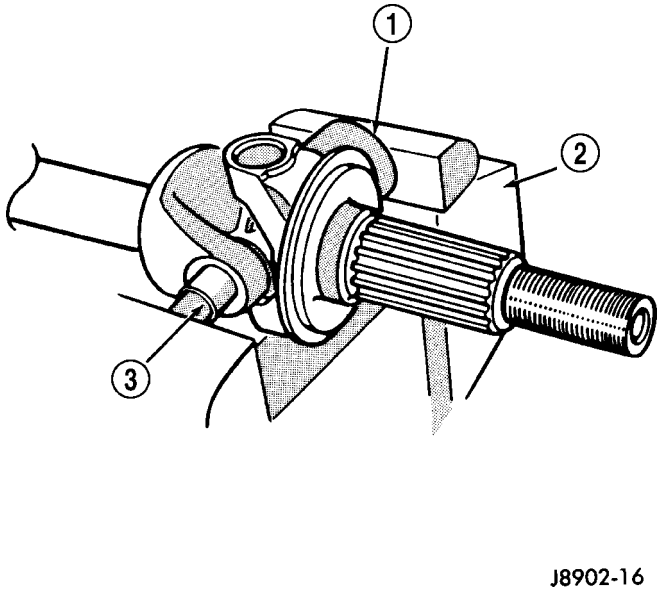

Fig. 35 YOKE BEARING CAP

1 - LARGE-DIAMETER SOCKET
2 - VISE
3 - SMALL-DIAMETER SOCKET

(6) Tighten vise jaws, to force bearing cap into the socket (receiver).
(7) Release vise jaws. Remove sockets and bearing cap forced out of the yoke.
(8) Repeat above procedure for the remaining bearing cap and remove cross from propeller shaft yoke.

INSTALLATION

CAUTION: Keep cross and bearing cap straight during installation. Failure to heed caution may result in damage.

(1) Pack bearing caps 1/3 full of wheel bearing lubricant (Fig. 36). Apply extreme pressure (EP), lithium-base lubricant to aid in installation.
(2) Position cross in the yoke. Insert seals and bearings, then tap bearing caps into the yoke bores far enough to hold spider in position.
(3) Place socket (driver) against one bearing cap. Position yoke with the socket in a vise.
(4) Tighten vise to force bearing caps into the yoke. Force the caps enough to install retaining clips.
(5) Install bearing cap retaining clips.
(6) Install axle shaft.