SINGLE CARDAN UNIVERSAL JOINT (Continued)

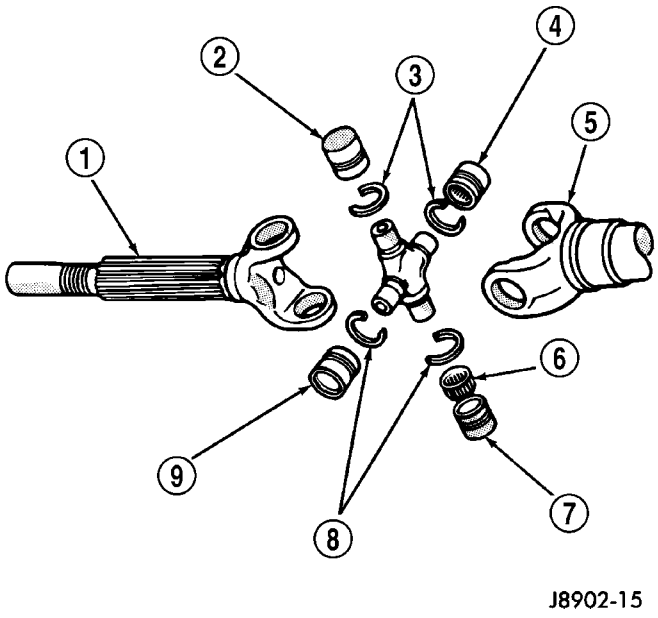

Fig. 36 AXLE SHAFT OUTER U-JOINT

1 - SHAFT YOKE
2 - BEARING CAP
3 - SNAP RINGS
4 - BEARING CAP
5 - SPINDLE YOKE
6 - BEARING
7 - BEARING CAP
8 - SNAP RINGS
9 - BEARING CAP

PINION SEAL

REMOVAL

(1) Mark the propeller shaft and pinion yoke for installation reference.

(2) Remove propeller shaft from the yoke.

(3) Rotate pinion gear three or four times and verify it rotates smoothly.

(4) Remove pinion yoke nut and washer with Remover C-452 and Flange Wrench C-3281 (Fig. 37).

(5) Remove pinion shaft seal with a pry tool or slide hammer mounted screw.

INSTALLATION

(1) Apply a light coating of gear lubricant on the lip of pinion seal. Install seal with an appropriate installer (Fig. 38).

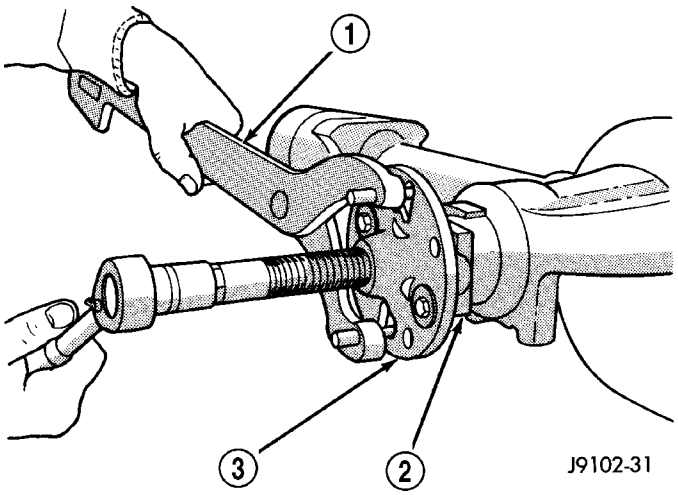

Fig. 37 PINION YOKE REMOVER

1 - WRENCH
2 - YOKE
3 - PULLER

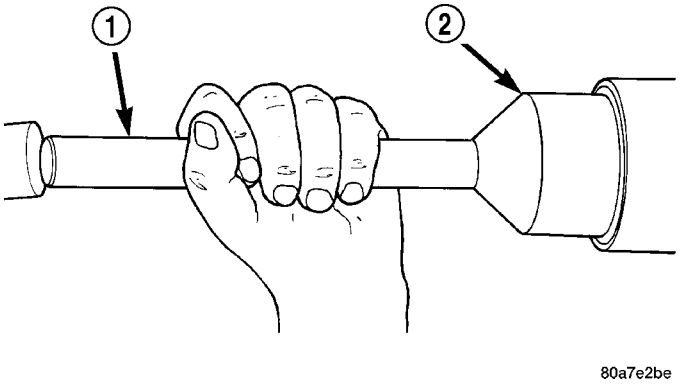

Fig. 38 PINION SEAL INSTALLER

1 - HANDLE
2 - INSTALLER

(2) Install yoke on the pinion gear with Installer W-162-D and Spanner Wrench 6958 (Fig. 39).

(3) Install a **new** nut on the pinion gear and tighten the nut to 217-271 N·m (160-200 in. lbs.) (Fig. 40).

(4) Installation propeller shaft with reference marks aligned.

(5) Check and add gear lubricant to axle if necessary.