DIFFERENTIAL - TRU-LOK (Continued)

(4) Remove axle shafts.

(5) Remove pressure hose from actuator assembly (Fig. 47).

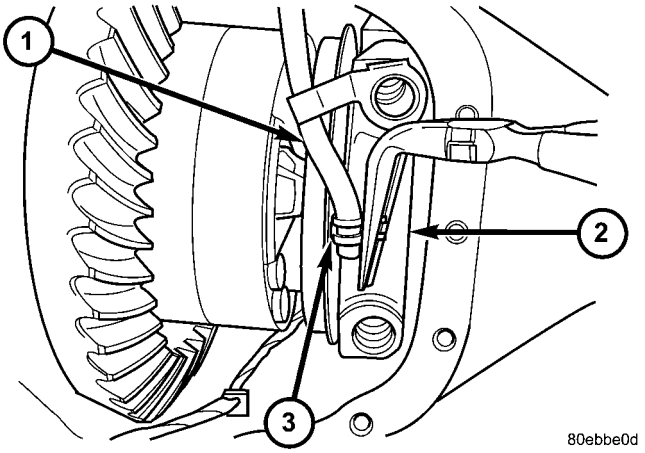

Fig. 47 PRESSURE HOSE

1 - PRESSURE HOSE
2 - BEARING CAP
3 - PRESSURE HOSE CLAMP

(6) Note the reference letters stamped on the bearing caps and housing machined sealing surface (Fig. 48).

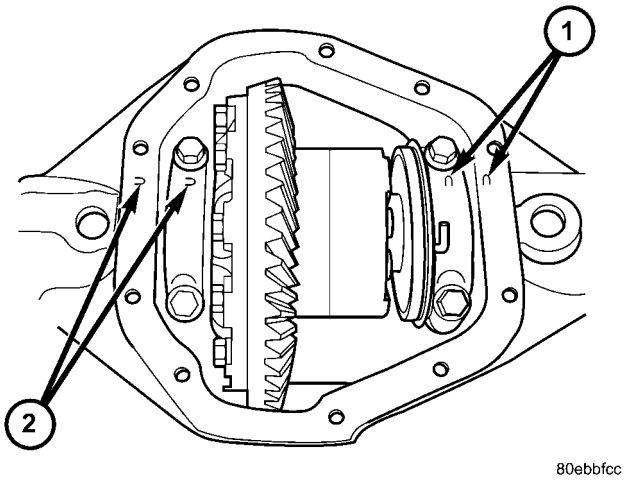

Fig. 48 BEARING CAP REFERENCE MARKS

1 - REFERENCE MARKS
2 - REFERENCE MARKS

(7) Loosen differential bearing cap bolts.

(8) Position Spreader W-129-B with Adapter Kit 6987B on differential locating holes (Fig. 49). Install hold-down clamps and tighten the turnbuckle finger-tight.

(9) Install a Pilot Stud C-3288-B at the left side of the differential housing. Attach Dial Indicator C-3339 to pilot stud (Fig. 50). Load indicator plunger against the opposite side of the housing and zero the indicator.

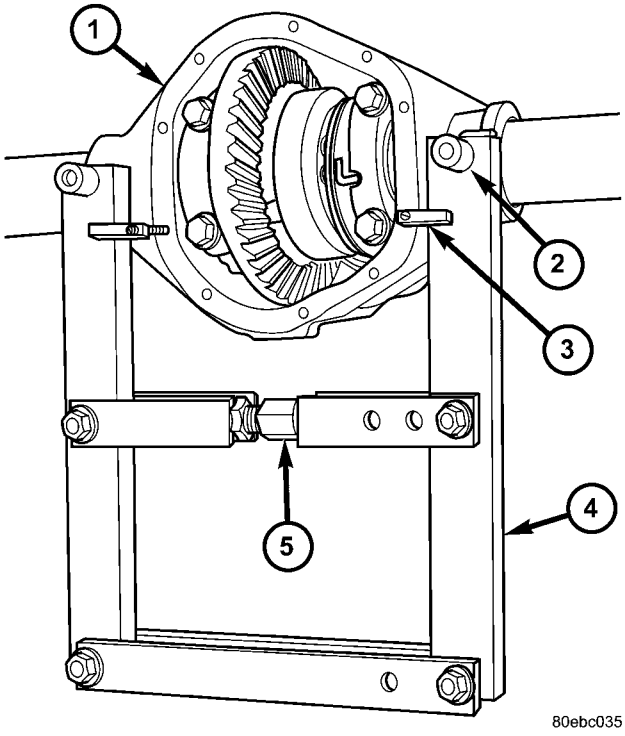

Fig. 49 SPREADER LOCATION

1 - DIFFERENTIAL CASE
2 - ADAPTER
3 - HOLD DOWN
4 - SPREADER
5 - TURNBUCKLE

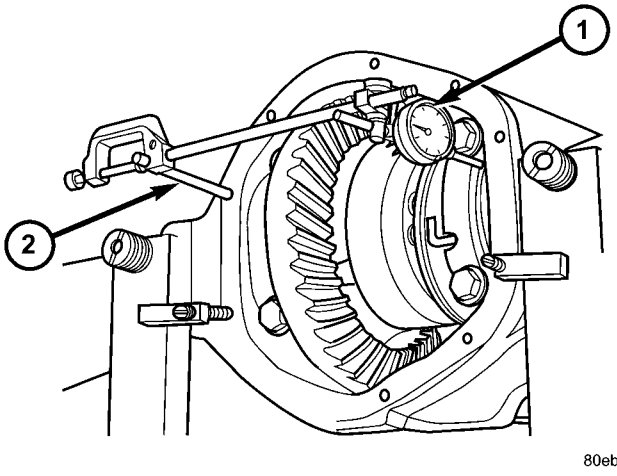

Fig. 50 DIAL INDICATOR LOCATION

1 - DIAL INDICATOR
2 - PILOT STUD

CAUTION: Never spread the housing over 0.38 mm (0.015 in). Failure to heed caution may result in damage.