DIFFERENTIAL - TRU-LOK (Continued)

DISASSEMBLY

(1) Install Plug C-293-3 into the differential axle shaft hole.

(2) Remove differential case bearings with Puller 6444, Puller Rods 6444-3 and Puller Flange 6444-1. Position puller (Fig. 54) on the differential.

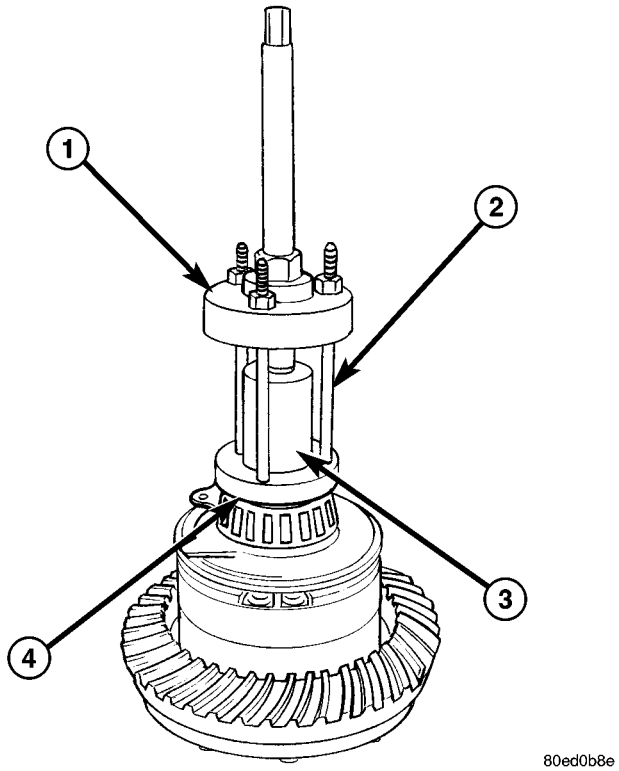

Fig. 54 PULLER AND FLANGE

1 - PULLER
2 - ROD
3 - PLUG
4 - FLANGE

(3) Position Puller Jaws 6444-7 (Fig. 55) around the case bearing and puller flange.

(4) Position Puller Collar 6444-8 (Fig. 56) around the puller jaws.

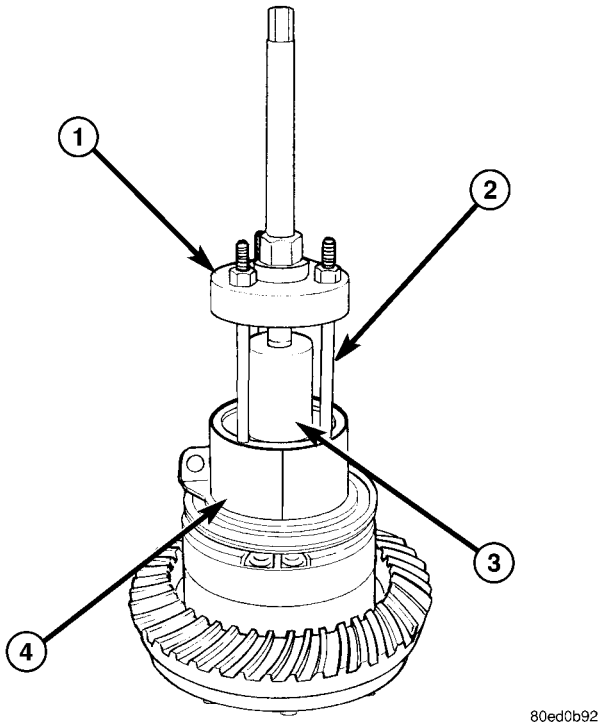

Fig. 55 PULLER AND JAWS

1 - PULLER
2 - ROD
3 - PLUG
4 - JAW

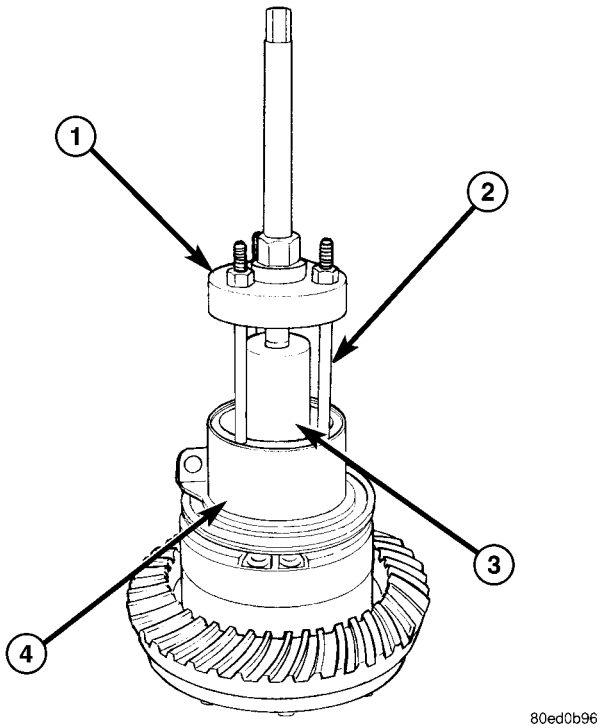

Fig. 56 PULLER AND COLLAR

1 - PULLER
2 - ROD
3 - PLUG
4 - COLLAR