DIFFERENTIAL - TRU-LOK (Continued)

(5) Tighten the puller nut and remove differential case bearing.

(6) Remove actuator (Fig. 57).

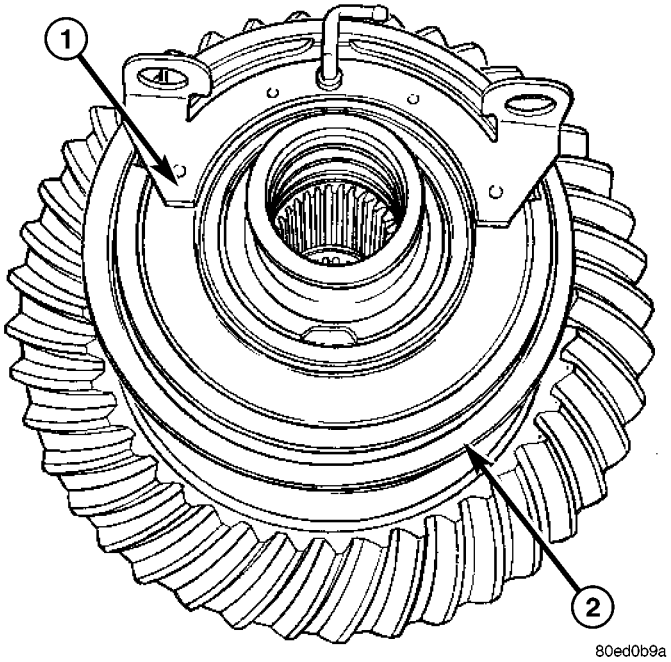


Fig. 57 LOCKING ACTUATOR

1 - ACTUATOR
2 - PRESSURE PLATE

ASSEMBLY

(1) Verify pressure plate tabs (Fig. 58) are seated on the dog clutch slots.

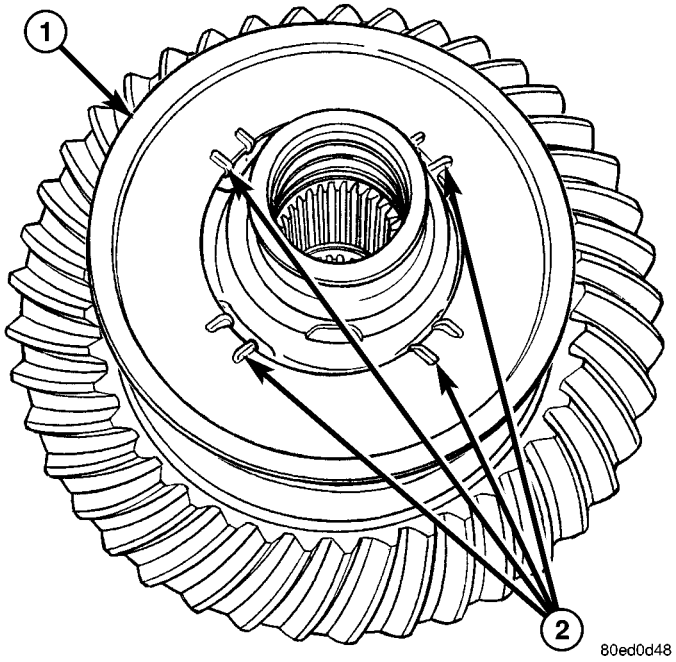


Fig. 58 PRESSURE PLATE

1 - PLATE
2 - PLATE TABS

(2) Place actuator on the pressure plate and case bearing on the case (Fig. 59).

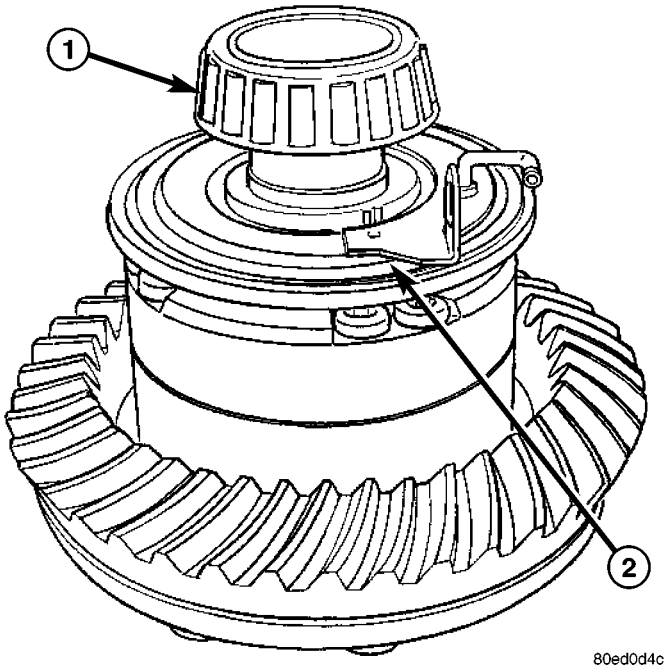


Fig. 59 ACTUATOR AND CASE BEARING

1 - CASE BEARING
2 - ACTUATOR

(3) Install differential case bearings with Installer D-156 and Handle C-4171.

INSTALLATION

NOTE: If replacement differential bearings or differential case are being installed, differential side bearing shim requirements may change. Refer Adjustments (Differential Bearing Preload and Gear Backlash) to determine the proper shim selection.

(1) Install indicator switch into the housing.

(2) Position Spreader W-129-B and adapters from Adapter set 6987, with the tool dowel pins seated in the locating holes (Fig. 60). Install hold-down clamps and tighten the tool turnbuckle finger-tight.

(3) Install Pilot Stud C-3288-B at the left side of the differential housing. Attach Dial Indicator C-3339 to pilot stud. Load indicator plunger against the opposite side of the housing and zero indicator.

(4) Spread housing while measuring the distance with the dial indicator.

CAUTION: Never spread over 0.38 mm (0.015 in). Failure to heed caution may result in damage.

(5) Remove dial indicator.

(6) Install differential case with pinion gear side bearing cap and differential preload shims in the