DIFFERENTIAL - TRU-LOK (Continued)

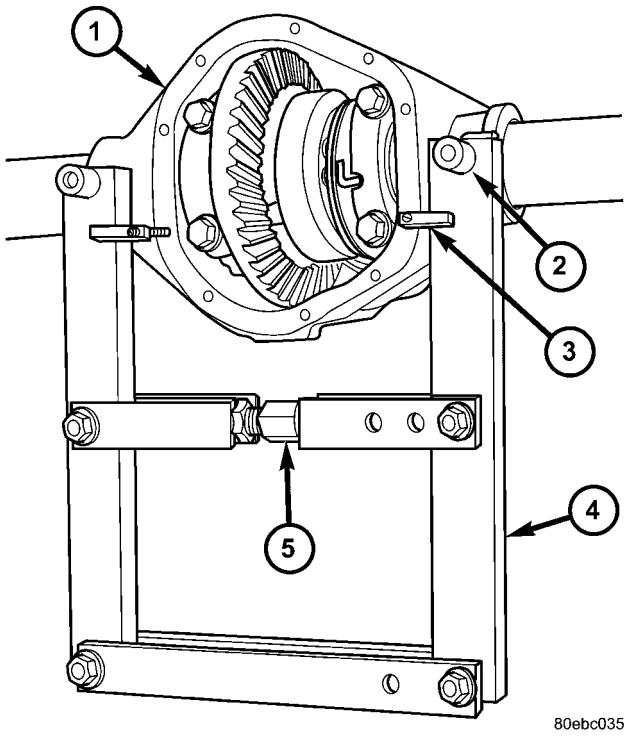

Fig. 60 SPREADER LOCATION

1 - DIFFERENTIAL CASE
2 - ADAPTER
3 - HOLD DOWN
4 - SPREADER
5 - TURNBUCKLE

housing. Tap differential case to seat bearings cups in the housing.

CAUTION: Ensure indicator switch plunger head is positioned under the actuator. Failure to heed caution may result in damage.

(7) Install ring gear side bearing cap with reference marks aligned (Fig. 61).

(8) Loosely install differential bearing cap bolts.

(9) Remove axle housing spreader.

(10) Tighten bearing cap bolts to 108 N·m (80 ft. lbs.).

(11) With a 1/4 inch drill bit check the clearance between the actuator and actuator pressure plate at the top and the bottom.

CAUTION: If clearance is not correct, indicator switch plunger may be on top of the actuator or actuator mounting tabs may be bent. Failure to heed caution may result in damage.

(12) Install pressure hose on the actuator assembly.

(13) Install axle shafts.

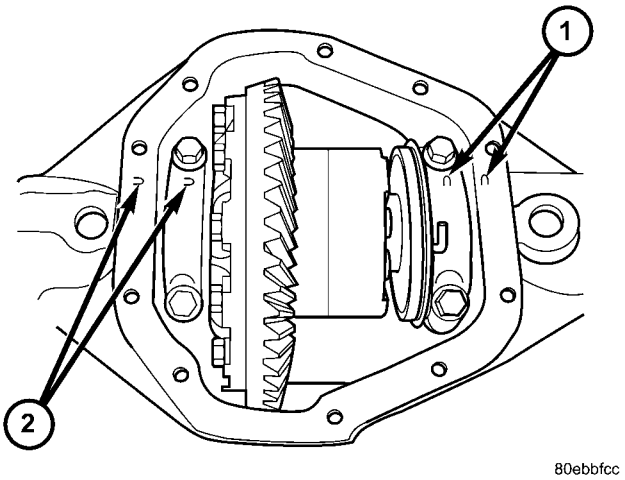

Fig. 61 BEARING CAP REFERENCE MARKS

1 - REFERENCE MARKS
2 - REFERENCE MARKS

(14) Install differential cover, identification tag and indicator switch connector (Fig. 62).

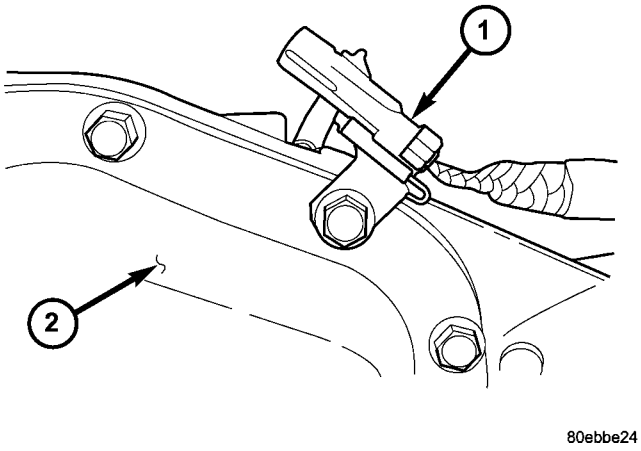

Fig. 62 INDICATOR SWITCH CONNECTOR

1 - CONNECTOR
2 - DIFFERENTIAL COVER

DIFFERENTIAL - TRU-LOK PUMP

REMOVAL

(1) Disconnect pumps and axle harness connectors (Fig. 63).

(2) Remove pressure hoses from the front and rear pumps.

(3) Remove pump mounting bracket bolts (Fig. 64).

(4) Remove pumps and bracket assembly from the vehicle.

(5) Remove pump connectors from the mounting bracket.