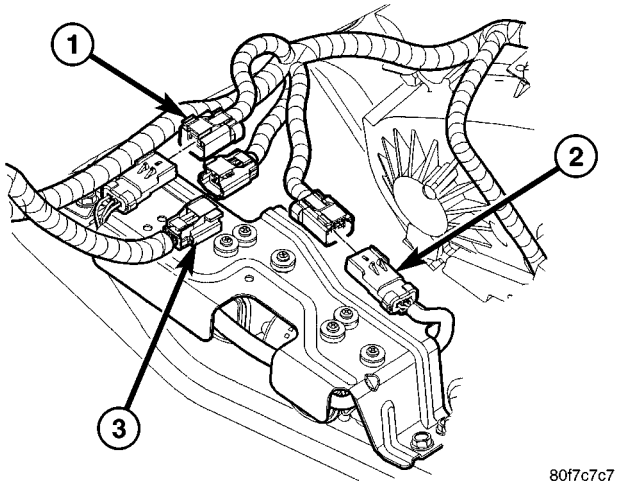


Fig. 63 PUMP CONNECTORS

1 - REAR PUMP CONNECTOR
2 - FRONT PUMP CONNECTOR
3 - AXLE HARNESS

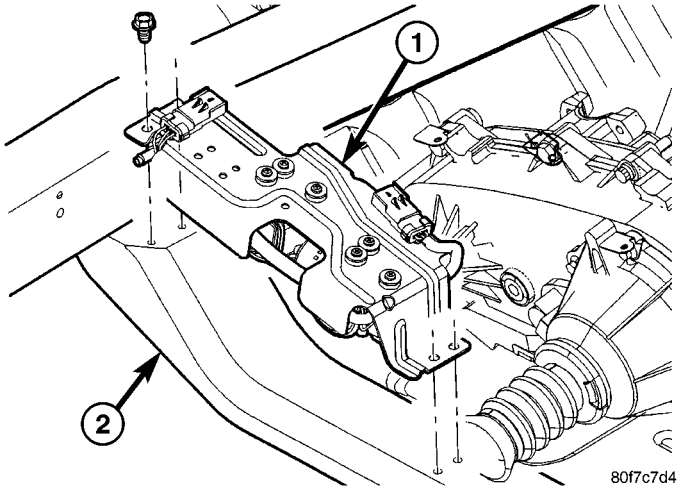


Fig. 64 PUMP BRACKET

1 - PUMP BRACKET
2 - CROSSMEMBER/SKID PLATE

(6) Remove pump mounting screws (Fig. 65) from the bracket and remove pump/pumps.

INSTALLATION

(1) Align pump with screw holes in pump bracket.
(2) Install and tighten pump mounting screws (Fig. 66).
(3) Install pump bracket assembly on the crossmember/skid plate and install pump bracket mounting bolts (Fig. 67).
(4) Tighten pump bracket bolts to 14 N·m (125 in. lbs.).

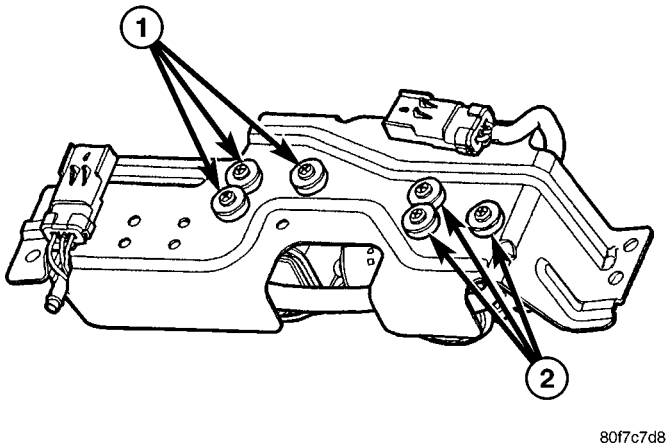


Fig. 65 PUMP SCREWS

1 - REAR PUMP SCREWS
2 - FRONT PUMP SCREWS

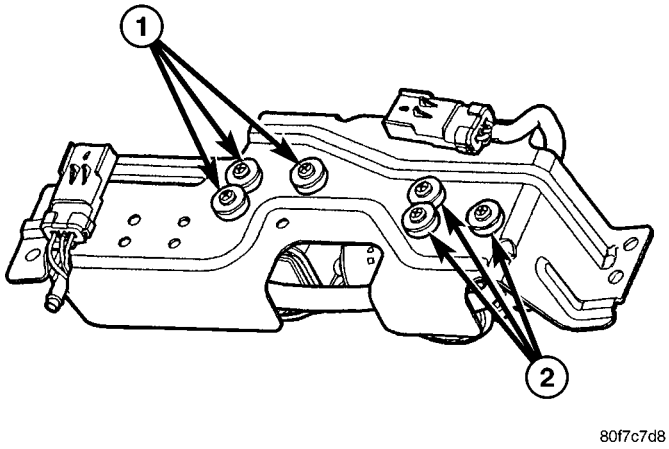


Fig. 66 PUMP SCREWS

1 - REAR PUMP SCREWS
2 - FRONT PUMP SCREWS

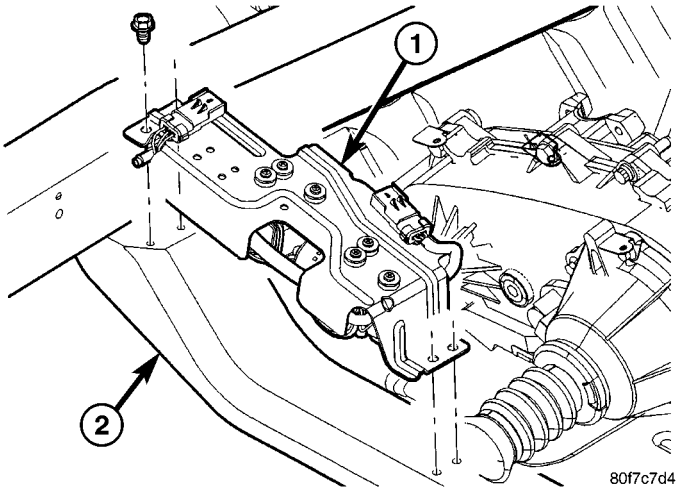


Fig. 67 PUMP BRACKET

1 - PUMP BRACKET
2 - CROSSMEMBER/SKID PLATE