DIFFERENTIAL - TRU-LOK PUMP (Continued)

(5) Connector pump and axle harness connectors (Fig. 68).

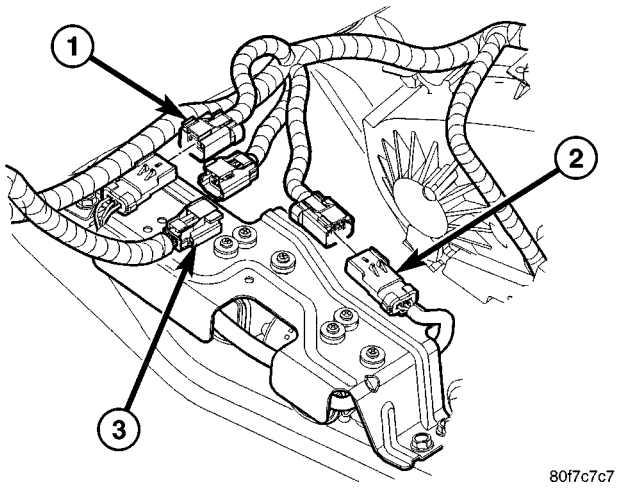



***Fig. 68 PUMP CONNECTORS***

1 - REAR PUMP CONNECTOR
2 - FRONT PUMP CONNECTOR
3 - AXLE HARNESS

(6) Install pressure hoses on the pumps.
(7) Verify pump operation.

# PINION GEAR/RING GEAR

## REMOVAL

**NOTE: The ring and pinion gears are serviced as a matched set. Never replace one gear without replacing the other gear.**

(1) Remove differential from housing.
(2) Secure differential case in a vise with soft metal jaw.
(3) Remove ring gear bolts from the differential case.
(4) Drive ring gear off the differential case with a dead-blow hammer (Fig. 69).
(5) Hold yoke with Holder 6719A and remove pinion nut and washer.
(6) Remove pinion yoke from the pinion shaft with Puller C-452 and Flange Wrench C-3281 (Fig. 70).

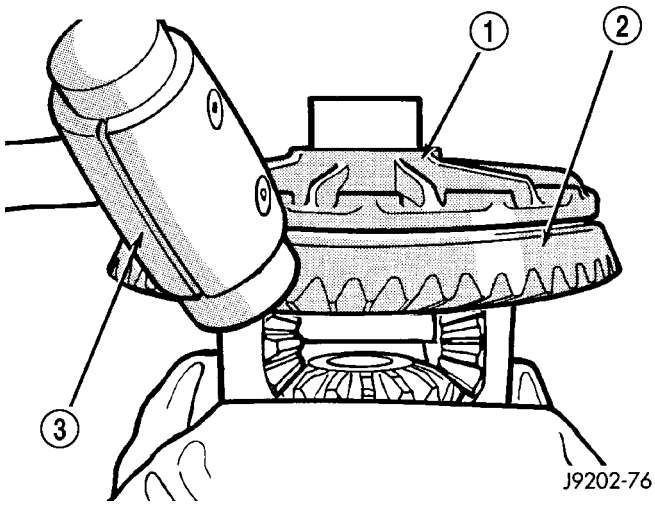



***Fig. 69 RING GEAR REMOVAL***

1 - CASE
2 - RING GEAR
3- HAMMER

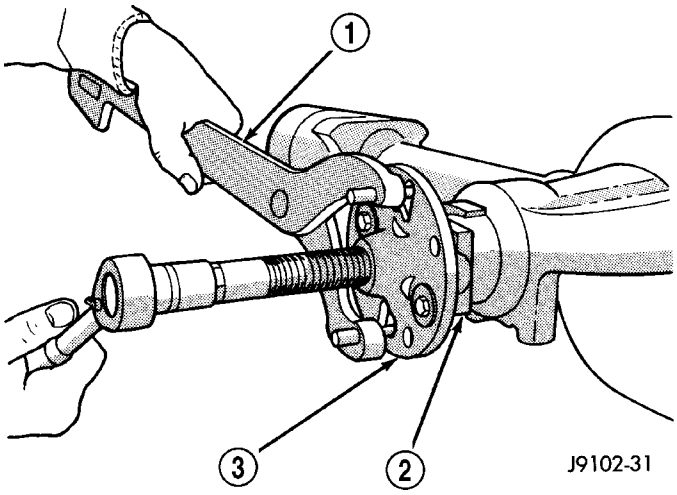



***Fig. 70 PINION YOKE REMOVAL***

1 - FLANGER WRENCH
2 - YOKE
3 - PULLER