PINION GEAR/RING GEAR (Continued)

(7) Install rear bearing and oil slinger, if equipped on pinion gear with Installer W-262 (Fig. 78).

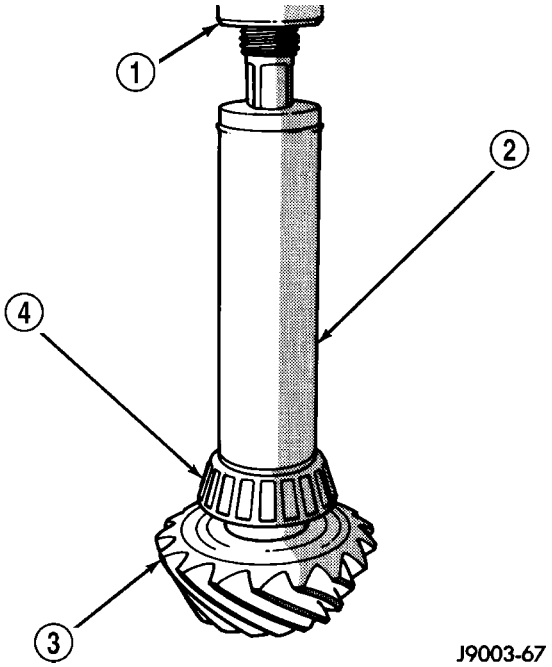

Fig. 78 REAR PINION BEARING

1 - PRESS
2 - INSTALLER
3 - PINION GEAR
4 - PINION BEARING

(8) Install pinion gear in housing.
(9) Install pinion preload shims (Fig. 79)

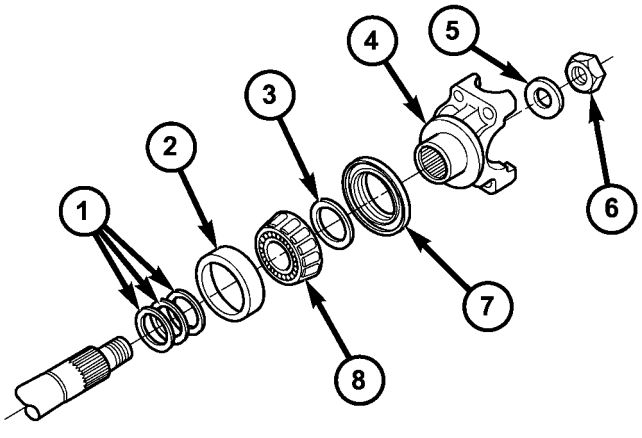

Fig. 79 PINION PRELOAD SHIMS

1 - PRELOAD SHIMS
2 - FRONT BEARING CUP
3 - SLINGER
4 - PINION YOKE
5 - WASHER
6 - PINION NUT
7 - PINION OIL SEAL
8 - FRONT PINION BEARING

(10) Install yoke with Installer W-162-D and Yoke Holder 6719A (Fig. 80).

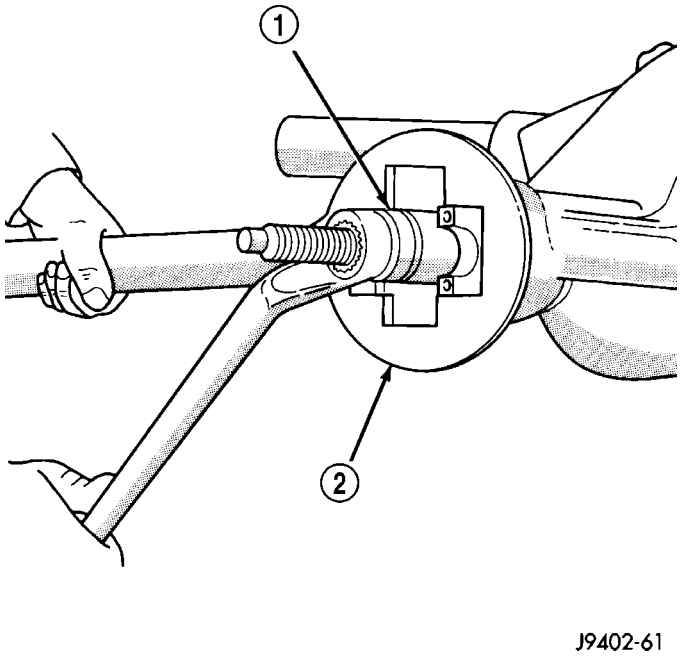

Fig. 80 PINION YOKE INSTALLER

1 - INSTALLER
2 - YOKE HOLDER

(11) Install yoke washer and a **new** nut on the pinion gear. Tighten the nut to specification (Fig. 81).

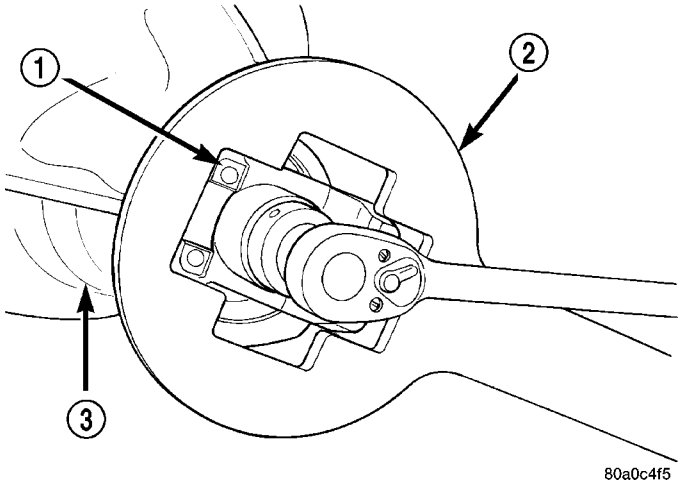

Fig. 81 TIGHTENING PINION NUT

1 - PINION YOKE
2 - YOKE HOLDING
3 - DIFFERENTIAL HOUSING