PINION GEAR/RING GEAR (Continued)

(12) Check bearing preload torque with an inch pound torque wrench (Fig. 82). The torque to rotate the pinion gear should be:

- Original Bearings: 1 to 2 N·m (10 to 20 in. lbs.).
- New Bearings: 2.3 to 4.5 N·m (20 to 40 in. lbs.).

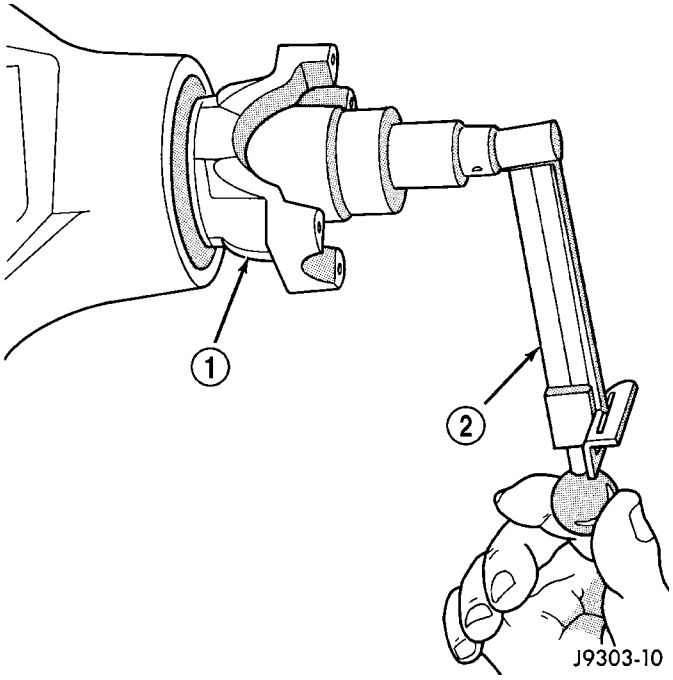

Fig. 82 PINION ROTATION TORQUE

1 - PINION YOKE
2 - INCH POUND TORQUE WRENCH

(13) Invert differential case in a vise and start two ring gear bolts. This will provide case-to-ring gear bolt hole alignment.

(14) Install **new** ring gear bolts and alternately tighten to 136 N·m (100 ft. lbs.). (Fig. 83).

CAUTION: Never reuse the ring gear bolts. Failure to heed caution may result in damage.

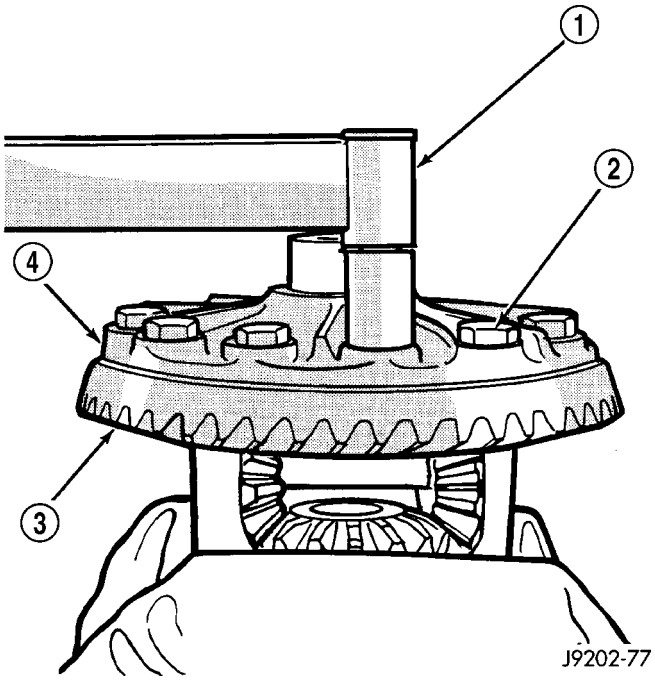

Fig. 83 RING GEAR INSTALLATION

1 - TORQUE WRENCH
2 - RING GEAR BOLT
3 - RING GEAR
4 - CASE

(15) Install differential in axle housing and verify gear mesh and contact pattern. Refer to Adjustments (Gear Contact Pattern).