REAR AXLE - 194RBI (Continued)

REMOVAL

(1) With vehicle in neutral, position vehicle on hoist.

(2) Position a lift device under the axle and secure axle to device.

(3) Remove brake components.

(4) Disconnect the vent hose from the axle shaft tube.

(5) Remove propeller shaft.

(6) Disconnect stabilizer bar links (Fig. 1).

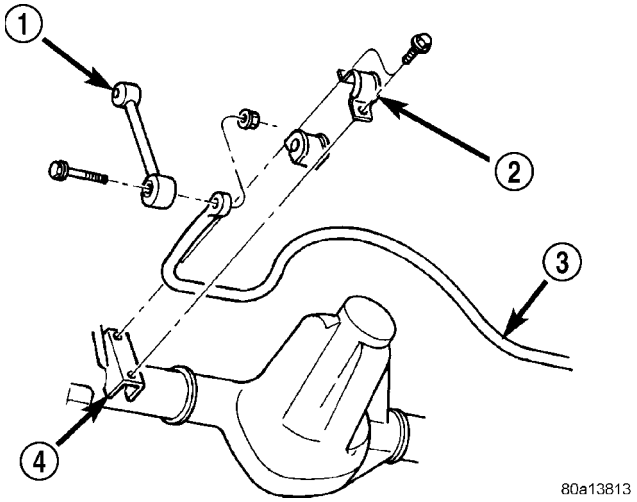

Fig. 1 STABILIZER BAR

1 - LINK
2 - RETAINER
3 - STABILIZER BAR
4 - AXLE MOUNT

(7) Remove shock absorbers from axle bracket (Fig. 2).

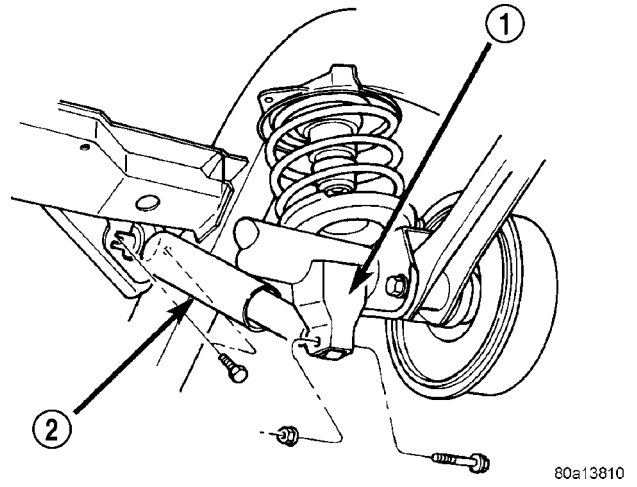

Fig. 2 SHOCK ABSORBER

1 - AXLE BRACKET
2 - SHOCK

(8) Remove track bar from axle bracket (Fig. 3).

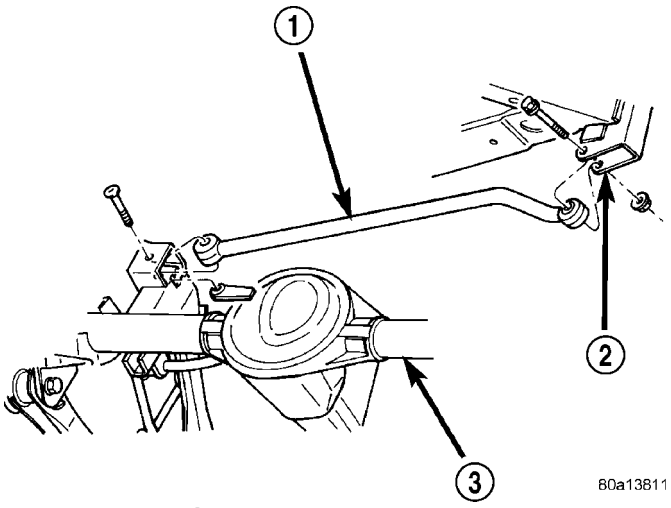

Fig. 3 REAR TRACK BAR

1 - TRACK BAR
2 - FRAME BRACKET
3 - REAR AXLE

(9) Remove upper and lower control arms from axle brackets.

(10) Lower axle and remove springs.

INSTALLATION

CAUTION: The weight of the vehicle must be supported by the springs before suspension arms and track bar fasteners can be tightened. Failure to heed caution may result in damage.

(1) Raise axle and align the spring centering bolts with mating holes in the axle spring perch.

(2) Install upper and lower control arms in the axle brackets (Fig. 4) and loosely install the mounting bolts.

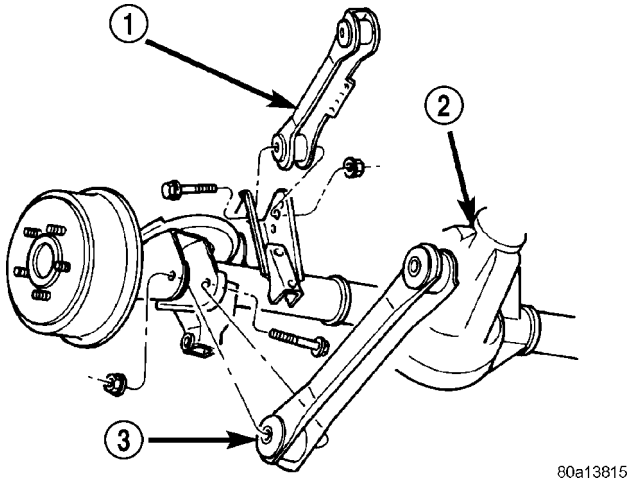

Fig. 4 UPPER AND LOWER SUSPENSION ARMS

1 - UPPER SUSPENSION ARM
2 - REAR AXLE
3 - LOWER SUSPENSION ARM