REAR AXLE - 194RBI (Continued)

(4) Place Arbor Disc 6732 on Arbor D-115-3 in position in the housing side bearing cradles (Fig. 10). Install differential bearing caps on Arbor Discs and tighten cap bolts. Refer to the Torque Specifications in this section.

NOTE: Arbor Discs 6732 have different step diameters to fit other axle sizes. Pick correct size step for axle being serviced.

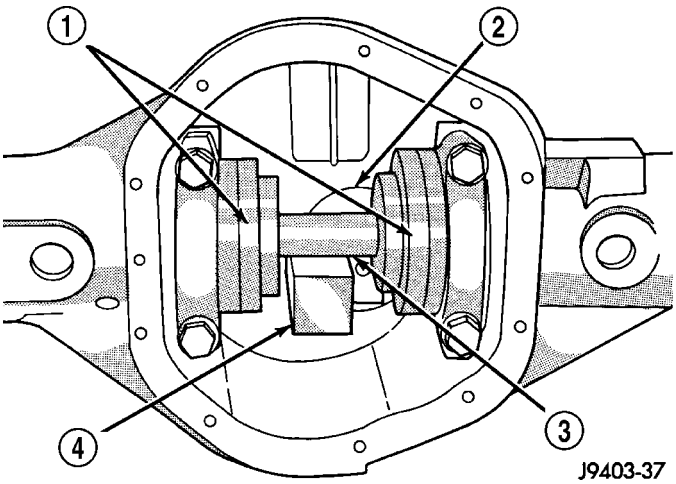


Fig. 10 GAUGE TOOLS IN HOUSING

1 - ARBOR DISC
2 - PINION BLOCK
3 - ARBOR
4 - PINION HEIGHT BLOCK

(5) Assemble Dial Indicator C-3339 into Scooter Block D-115-2 and secure set screw.

(6) Position Scooter Block/Dial Indicator flush on the pinion height block. Hold scooter block and zero the dial indicator.

(7) Slowly slide the scooter block across the pinion height block over to the arbor (Fig. 11). Move the scooter block till the dial indicator probe crests the arbor, then record the highest reading.

(8) Select a shim equal to the dial indicator reading plus the drive pinion gear depth variance number etched in the face of the pinion gear (Fig. 6) using the opposite sign on the variance number. For example, if the depth variance is –2, add +0.002 in. to the dial indicator reading.

(9) Remove the pinion depth gauge components from the housing

DIFFERENTIAL BEARING PRELOAD

Differential side bearing preload and gear backlash is achieved by selective shims inserted between the bearing cup and the housing. The proper shim thickness can be determined using slip-fit Dummy Bearings D-348 in place of the differential side bearings and a Dial Indicator C-3339. Before proceeding with the differential bearing preload and gear backlash

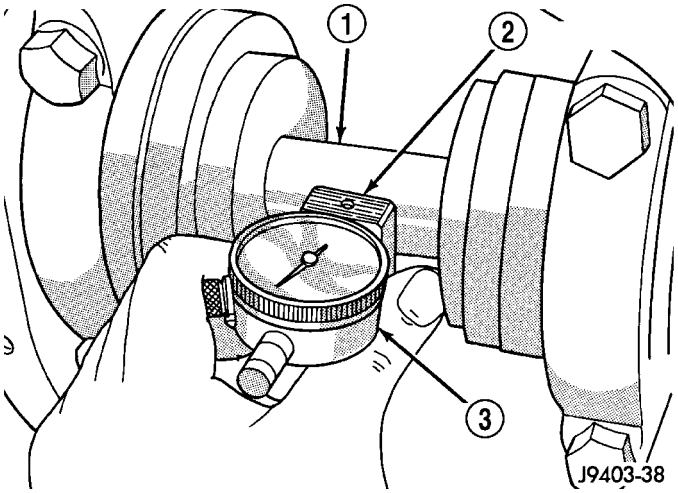


Fig. 11 PINION GEAR DEPTH MEASUREMENT

1 - ARBOR
2 - SCOOTER BLOCK
3 - DIAL INDICATOR

measurements, measure the pinion gear depth and prepare the pinion gear for installation. Establishing proper pinion gear depth is essential to establishing gear backlash and tooth contact patterns. After the overall shim thickness to take up differential side play is measured, the pinion gear is installed and the gear backlash shim thickness is measured. The overall shim thickness is the total of the dial indicator reading, starting point shim thickness and the preload specification added together. The gear backlash measurement determines the thickness of the shim used on the ring gear side of the differential case. Subtract the gear backlash shim thickness from the total overall shim thickness and select that amount for the pinion gear side of the differential (Fig. 12).

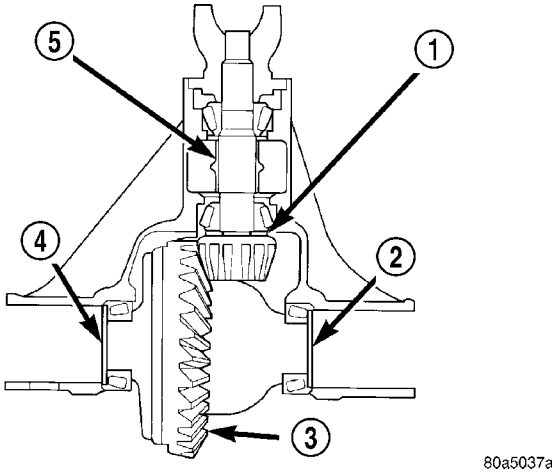


Fig. 12 SHIM LOCATIONS

1 - PINION GEAR DEPTH SHIM
2 - DIFFERENTIAL SHIM-PINION GEAR SIDE
3 - RING GEAR
4 - DIFFERENTIAL SHIM-RING GEAR SIDE
5 - COLLAPSIBLE SPACER