REAR AXLE - 194RBI (Continued)

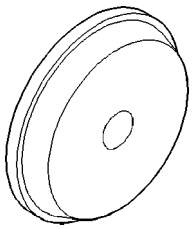

INSTALLER D-130

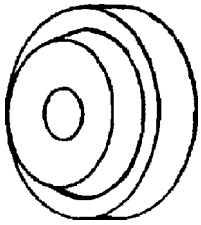

INSTALLER D-146

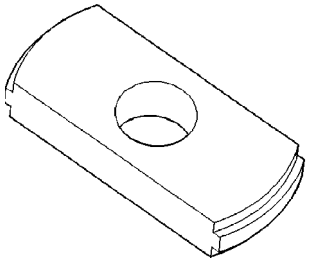

REMOVER D-149

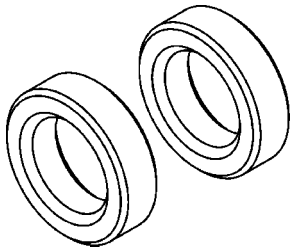

DUMMY BEARINGS D-348

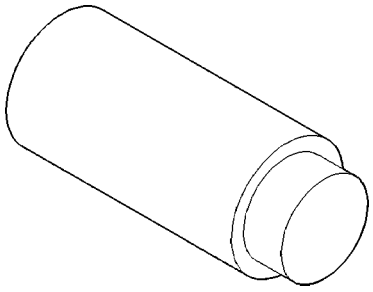

ADAPTER PLUG SP-3289

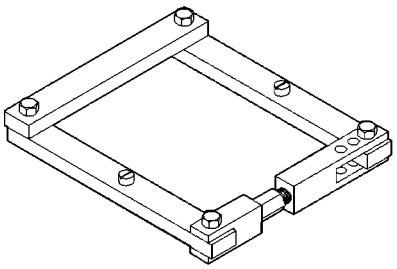

SPREADER W-129-B

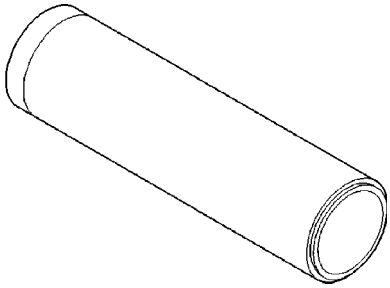

INSTALLER W-262

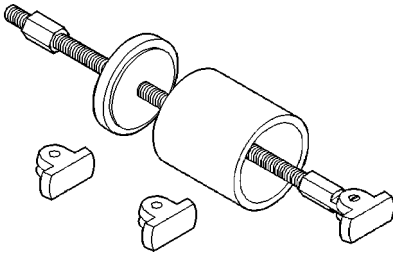

BEARING REMOVER 6310

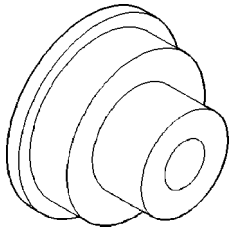

INSTALLER 6436

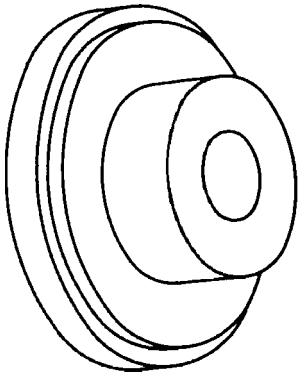

INSTALLER 6437