AXLE SHAFTS

REMOVAL

(1) With vehicle in neutral, position vehicle on hoist.
(2) Remove brake drum.
(3) Remove differential cover and drain fluid.
(4) Rotate differential case to access pinion mate gear shaft lock screw. Remove lock screw and shaft from differential case (Fig. 24).

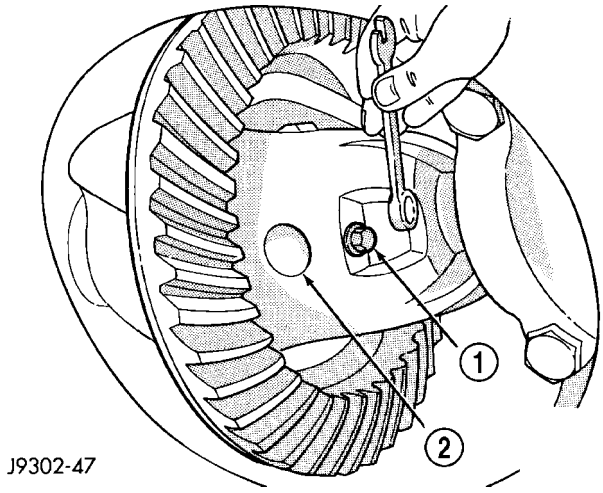


Fig. 24 MATE SHAFT LOCK SCREW

1 - LOCK SCREW
2 - PINION GEAR MATE SHAFT

(5) Push axle shaft inward and remove axle C-clip lock (Fig. 25).

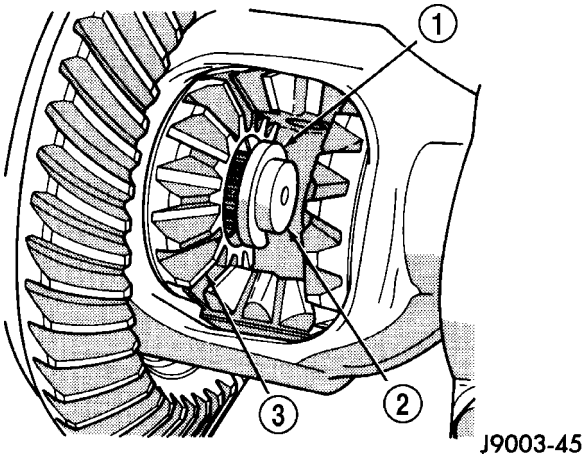


Fig. 25 AXLE SHAFT C-CLIP

1 - C-CLIP LOCK
2 - AXLE SHAFT
3 - SIDE GEAR

(6) Remove axle shaft.

INSTALLATION

(1) Lubricate bearing bore and seal lip with gear lubricant. Insert axle shaft through seal, bearing, and engage it into side gear splines.
(2) Install C-clip lock on the axle shaft, then push axle outward to seat C-clip lock in side gear.
(3) Insert pinion mate shaft into differential case and through thrust washers and pinion gears.
(4) Align hole in shaft with hole in the differential case and install lock screw with Loctite® on the threads. Tighten lock screw to 19 N·m (14 ft. lbs.).
(5) Install differential cover.

AXLE SHAFT SEALS

REMOVAL

(1) Remove the axle shaft.
(2) Remove axle shaft seal from the end of the axle shaft tube with a small pry bar.
(3) Inspect the axle shaft tube bore for roughness and burrs and remove as necessary.

INSTALLATION

(1) Wipe the axle shaft tube bore clean.
(2) Install **new** axle shaft seal with Installer 6437 and Handle C-4171 (Fig. 26).

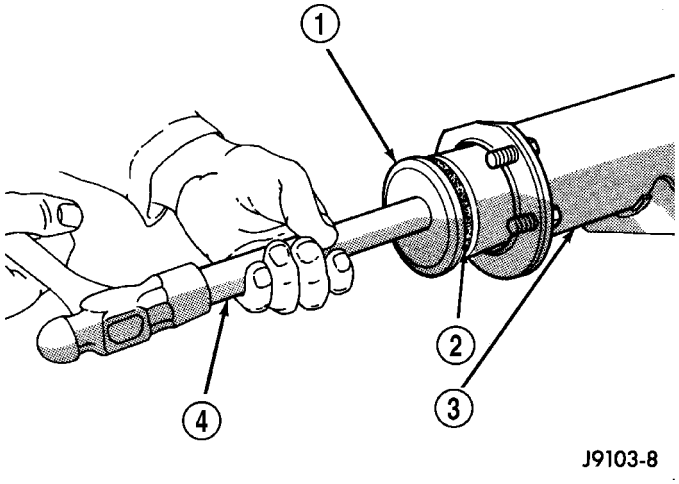


Fig. 26 AXLE SHAFT SEAL

1 - INSTALLER
2 - SEAL
3 - AXLE SHAFT TUBE
4 - HANDLE

(3) Install the axle shaft.