AXLE BEARINGS

REMOVAL

(1) Remove axle shaft.
(2) Remove axle shaft seal from axle shaft tube with a small pry bar.
(3) Remove axle shaft bearing from the axle tube with Bearing Removal Tool Set 6310 and Adapter Foot 6310-5 (Fig. 27).

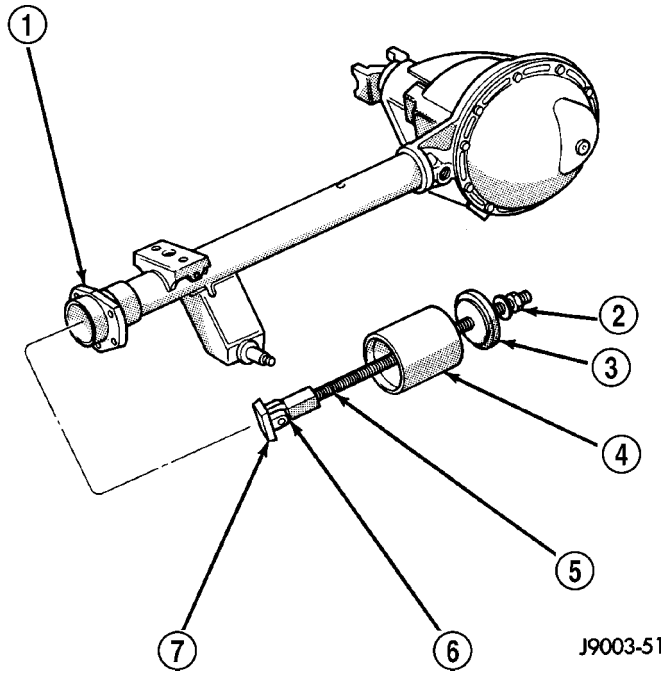

Fig. 27 AXLE SHAFT BEARING TOOLS

1 - AXLE SHAFT TUBE
2 - NUT
3 - GUIDE PLATE
4 - GUIDE
5 - THREADED ROD
6 - ADAPTER
7 - FOOT

INSTALLATION

(1) Wipe axle shaft tube bore clean.
(2) Install axle shaft bearing with Installer 6436 and Handle C-4171.

NOTE: Part number on the bearing must be against the installer.

(3) Install **new** axle shaft seal with Installer 6437 and Handle C-4171 (Fig. 28).
(4) Install axle shaft.

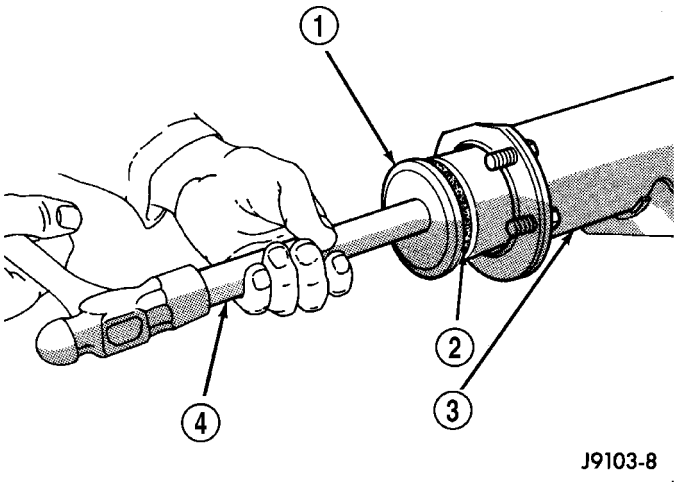

Fig. 28 AXLE SHAFT SEAL INSTALLER

1 - INSTALLER
2 - SEAL
3 - AXLE SHAFT TUBE
4 - HANDLE

PINION SEAL

REMOVAL

(1) With vehicle in neutral, position vehicle on hoist.
(2) Remove brake drums.
(3) Remove propeller shaft from the yoke.
(4) Rotate pinion gear three or four times.
(5) Record torque necessary to rotate the pinion gear with an inch pound dial-type torque wrench.
(6) Hold the yoke with Wrench 6958 and remove pinion nut and washer.
(7) Remove pinion yoke with Remover C-452 and Wrench C-3281 (Fig. 29).

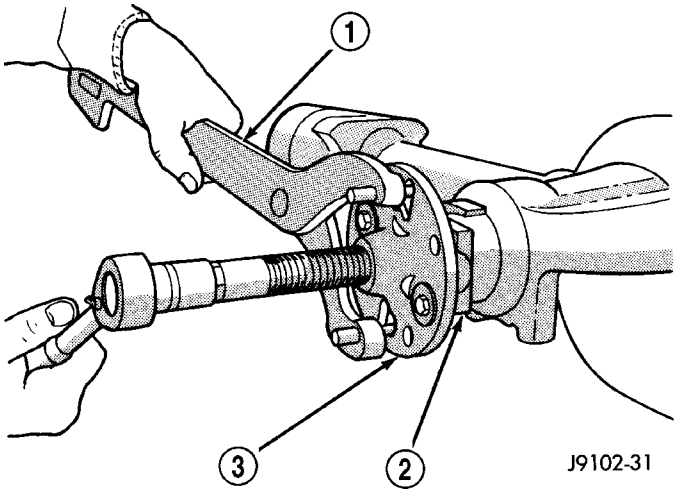

Fig. 29 PINION YOKE REMOVER

1 - WRENCH
2 - YOKE
3 - REMOVER

(8) Remove pinion seal with a pry tool or slide hammer mounted screw.