PINION SEAL (Continued)

(6) If rotating torque is low, use Wrench 6958 to hold pinion yoke (Fig. 33), and tighten pinion nut in 6.8 N·m (5 ft. lbs.) increments until proper rotating torque is achieved.

CAUTION: If maximum tightening torque 475 N·m (350 ft. lbs.) is reached prior to reaching the required rotating torque, the collapsible spacer may have been damaged. Failure to heed caution may result in damage.

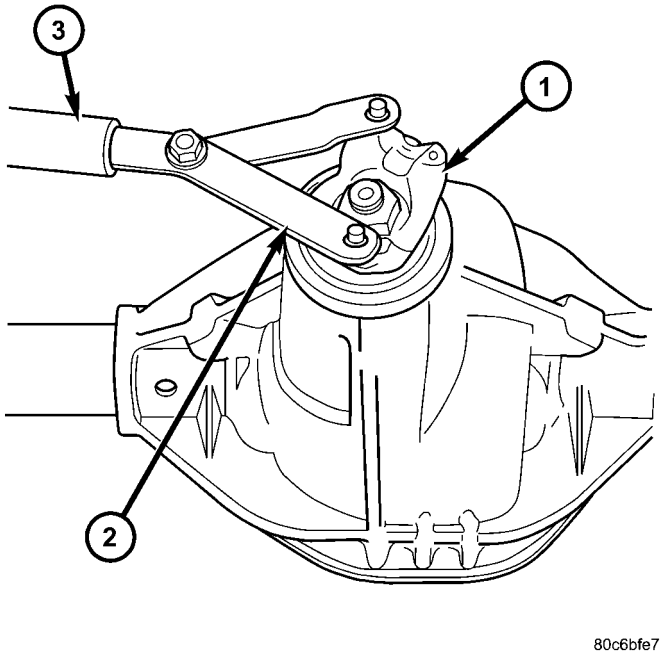

Fig. 33 YOKE HOLDER

1 - PINION YOKE
2 - SPANNER WRENCH
3 - PIPE

(7) Install propeller shaft.
(8) Install the brake drums.

COLLAPSIBLE SPACER

REMOVAL

(1) With vehicle in neutral, position vehicle on hoist.
(2) Remove rear brake drums.
(3) Remove propeller shaft.
(4) Rotate pinion gear three or four times.
(5) Record torque to rotate the pinion gear with an inch pound dial-type torque wrench.
(6) Hold pinion yoke with Spanner Wrench 6958 and remove pinion nut and washer.
(7) Remove pinion yoke with Remover C-452 and Flange Wrench C-3281 (Fig. 34).
(8) Remove pinion shaft seal with a pry tool or a slide hammer mounted screw.

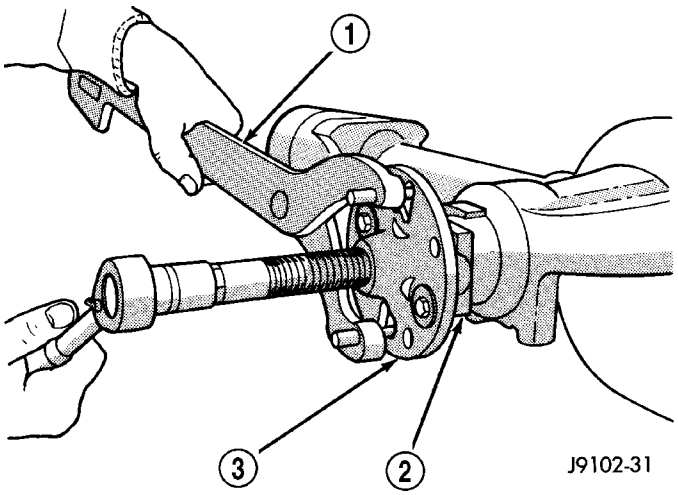

Fig. 34 PINION YOKE REMOVER

1 - WRENCH
2 - YOKE
3 - REMOVER

(9) Remove front pinion bearing using a pair of pick tools to pull the bearing straight off the pinion gear shaft.

NOTE: If bearing becomes bound on pinion shaft, lightly tap the pinion shaft with a rawhide/rubber hammer.

(10) Remove collapsible spacer.

INSTALLATION

(1) Install a **new** collapsible preload spacer on pinion shaft.
(2) Install pinion front bearing.
(3) Apply a light coating of gear lubricant on the lip of pinion seal and install seal with an appropriate installer (Fig. 35).

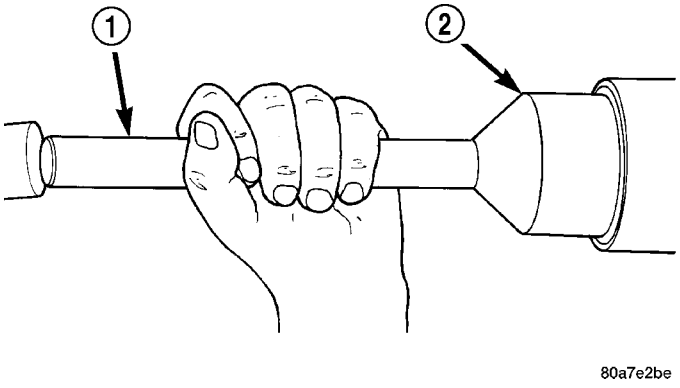

Fig. 35 PINION SEAL INSTALLER

1 - HANDLE
2 - INSTALLER