COLLAPSIBLE SPACER (Continued)

(4) Install yoke with Screw 8112, Cup 8109 and Spanner Wrench 6958 (Fig. 36).

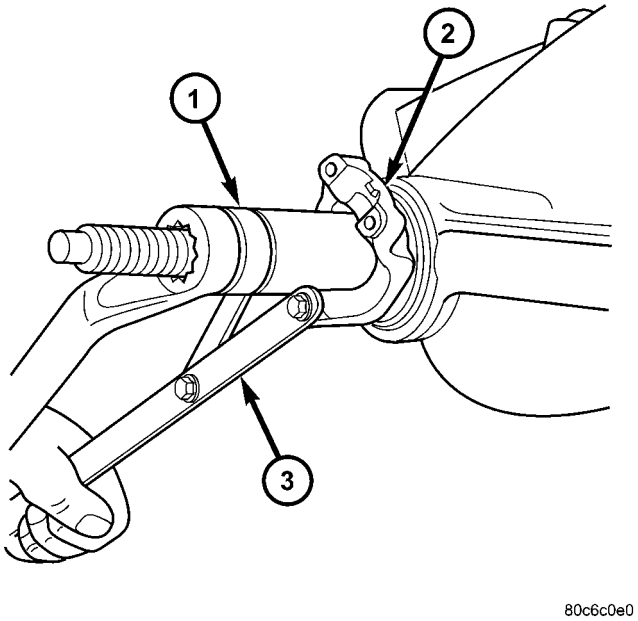

Fig. 36 PINION YOKE INSTALLER

1 - INSTALLER
2 - PINION YOKE
3 - SPANNER WRENCH

(5) Install yoke washer and **new** nut on the pinion gear. Tighten the nut to 271 N·m (200 ft. lbs.).

CAUTION: Never loosen pinion gear nut to decrease pinion gear bearing rotating torque and never exceed specified preload torque. Failure to heed caution may result in damage.

(6) Using yoke with Spanner Wrench 6958 and a torque wrench set at 475 N·m (350 ft. lbs.), (Fig. 37) slowly tighten the nut in 6.8 N·m (5 ft. lbs.) increments until the rotating torque is achieved. Measure rotating torque frequently to avoid over crushing the collapsible spacer (Fig. 38).

CAUTION: If more than 475 N·m (350 ft. lbs.) torque is required to crush the collapsible spacer, the spacer is defective and must be replaced. Failure to heed caution may result in damage.

(7) Check rotating torque with an inch pound torque wrench (Fig. 38). The rotating torque of the pinion should be, the reading recorded during removal plus an additional 0.56 N·m (5 in. lbs.).

(8) Install propeller shaft.

(9) Install rear brake drums.

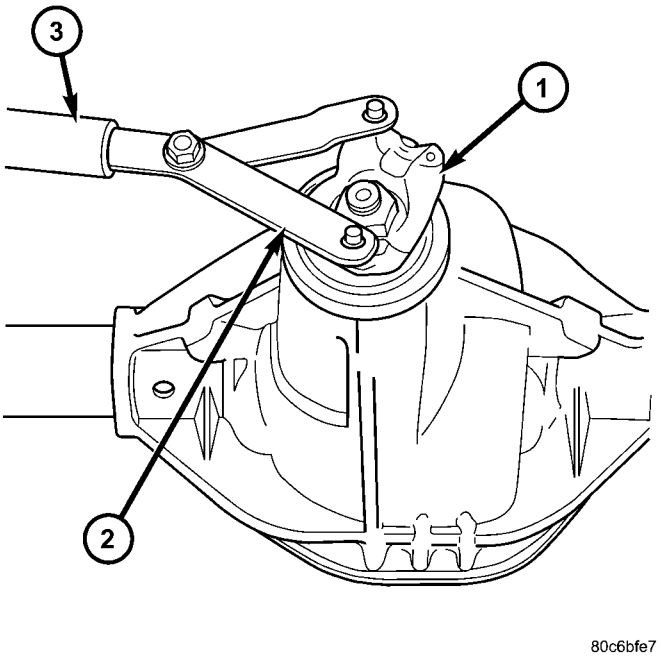

Fig. 37 YOKE HOLDER

1 - PINION YOKE
2 - SPANNER WRENCH
3 - PIPE

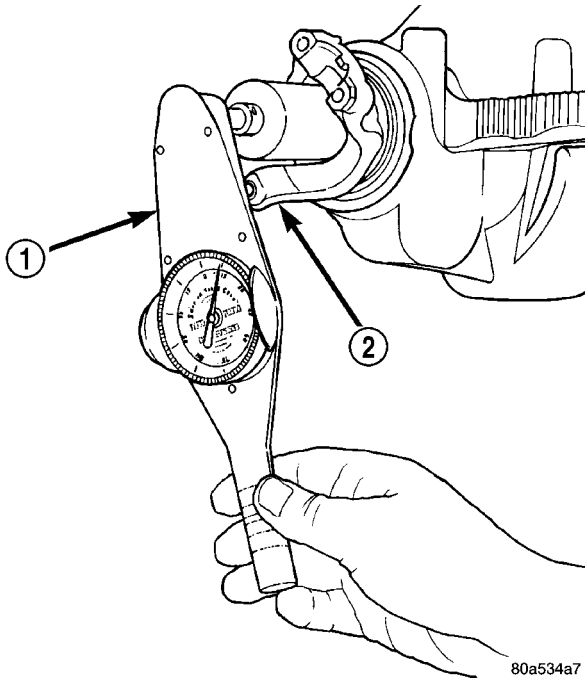

Fig. 38 PINION ROTATING TORQUE

1 - TORQUE WRENCH
2 - PINION YOKE