DIFFERENTIAL (Continued)

(7) Install a Pilot Stud C-3288-B at the left side of the differential housing. Attach Dial Indicator C-3339 to pilot stud. Load indicator plunger against the opposite side of the housing (Fig. 42) and zero the indicator.

CAUTION: Never spread the housing over 0.38 mm (0.015 in). Failure to heed caution may result in damage.

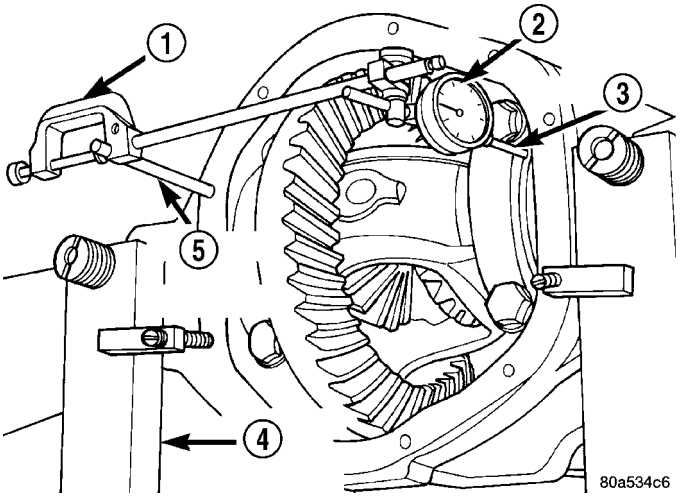

Fig. 42 DIAL INDICATOR LOCATION

1 - CLAMP
2 - DIAL INDICATOR
3 - LEVER ADAPTER
4 - SPREADER
5 - PILOT STUD

(8) Spread housing while measuring the distance with the dial indicator (Fig. 43).

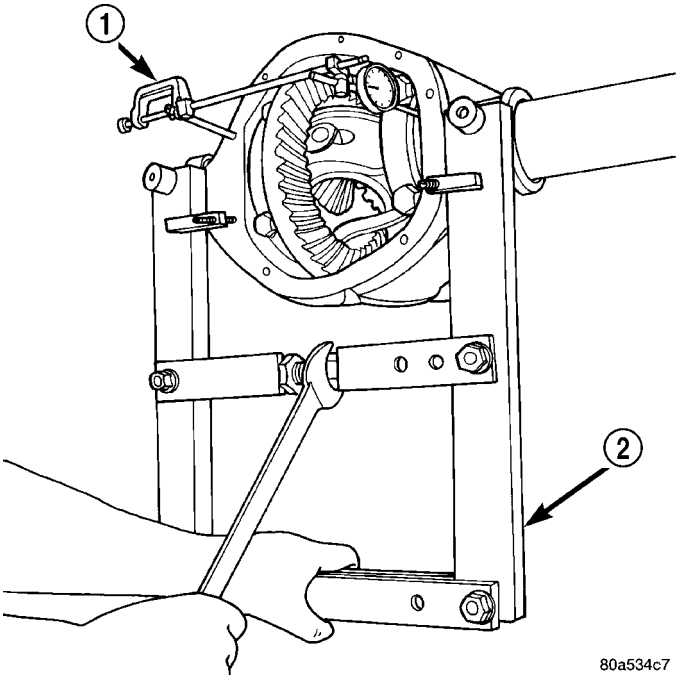

Fig. 43 SPREAD DIFFERENTIAL HOUSING

1 - DIAL INDICATOR
2 - SPREADER

(9) Remove dial indicator.

(10) While holding differential case in position, remove differential bearing caps.

(11) Remove differential from housing and tag differential bearing cups to indicate location (Fig. 44).

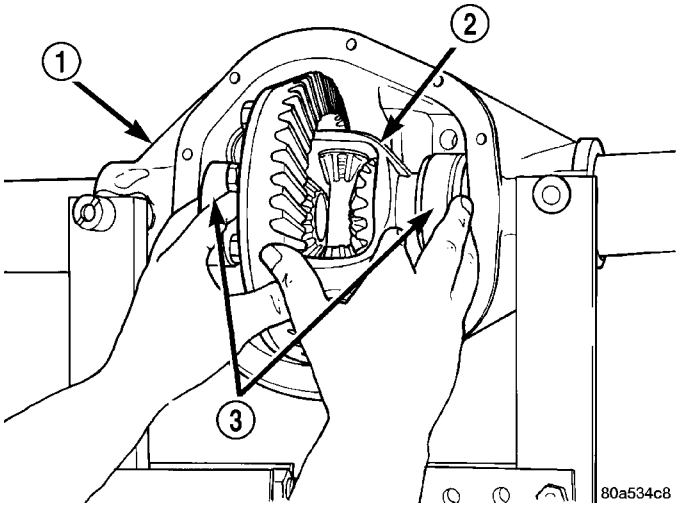

Fig. 44 DIFFERENTIAL CASE REMOVAL

1 - DIFFERENTIAL HOUSING
2 - DIFFERENTIAL CASE
3 - BEARING CUPS

(12) Remove spreader from housing.

(13) Clean the housing cavity with flushing oil, light engine oil or lint free cloth.

NOTE: Do not use water, steam, kerosene or gasoline for cleaning.

DISASSEMBLY

(1) Remove pinion shaft.

(2) Rotate differential side gears and remove differential pinions and thrust washers (Fig. 45).

(3) Remove differential side gears and thrust washers.

ASSEMBLY

(1) Lubricate all differential components with hypoid gear lubricant.

(2) Install differential side gears and thrust washers.

(3) Install differential pinion gears and thrust washers.

(4) Install the pinion mate shaft.

(5) Align hole in the pinion mate shaft with the hole in the differential case and install pinion mate shaft lock screw finger tight.