DIFFERENTIAL (Continued)

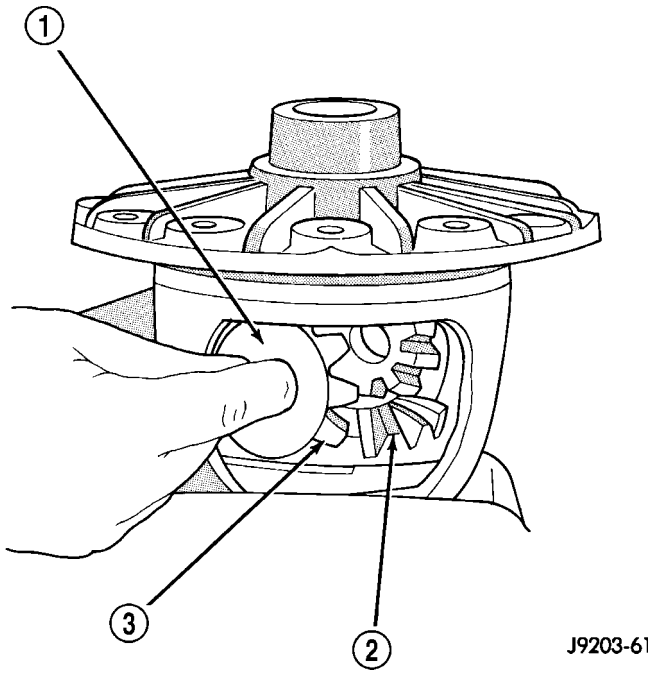


Fig. 45 DIFFERENTIAL GEARS

1 - THRUST WASHER
2 - SIDE GEAR
3 - DIFFERENTIAL PINION

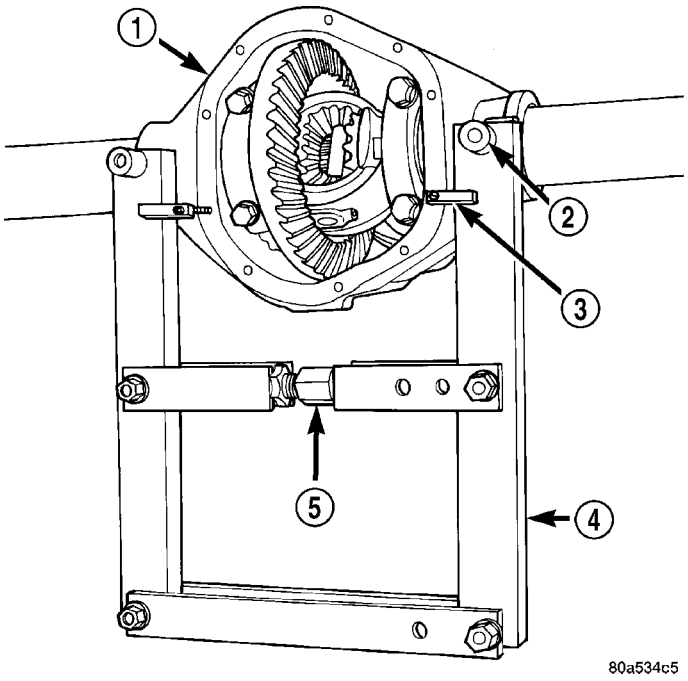


Fig. 46 SPREADER LOCATION

1 - DIFFERENTIAL HOUSING
2 - DOWEL
3 - SAFETY HOLD DOWN
4 - SPREADER
5 - TURNBUCKLE

INSTALLATION

NOTE: If replacement differential bearings or differential case are being installed, differential side bearing shim requirements may change. Refer Adjustments (Differential Bearing Preload and Gear Backlash) to determine the proper shim selection.

(1) Position Spreader W-129-B and adapters from Adapter set 6987, with the tool dowel pins seated in the locating holes (Fig. 46). Install hold-down clamps and tighten turnbuckle finger-tight.

(2) Install Pilot Stud C-3288-B at the left side of the differential housing. Attach Dial Indicator C-3339 to pilot stud. Load the indicator plunger against the opposite side of the housing and zero the indicator.

CAUTION: Never spread over 0.38 mm (0.015 in). Failure to heed caution may result in damage.

(3) Spread the housing enough to install the case in the housing. Measure the distance with the dial indicator.

(4) Remove the dial indicator.

(5) Install differential case in the housing. Ensure that the differential bearing cups remain in position on the differential bearings. Tap the differential case to ensure the bearings cups are seated in the housing.

(6) Install bearing caps in their original locations (Fig. 47).

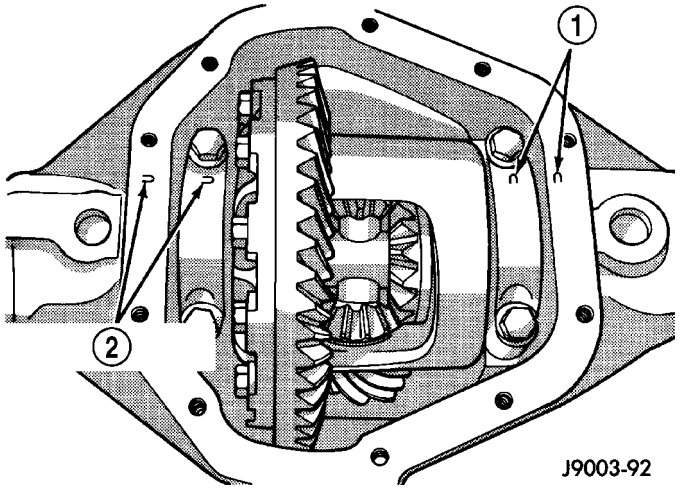


Fig. 47 BEARING CAP REFERENCE

1 - REFERENCE LETTERS
2 - REFERENCE LETTERS

(7) Loosely install differential bearing cap bolts.

(8) Remove axle housing spreader.

(9) Tighten bearing cap bolts to 77 N·m (57 ft. lbs.).

(10) Install axle shafts.

(11) Install cover and identification tag.