DIFFERENTIAL - TRAC-LOK (Continued)

(5) Use torque wrench on special tool to rotate wheel and read rotating torque (Fig. 49).

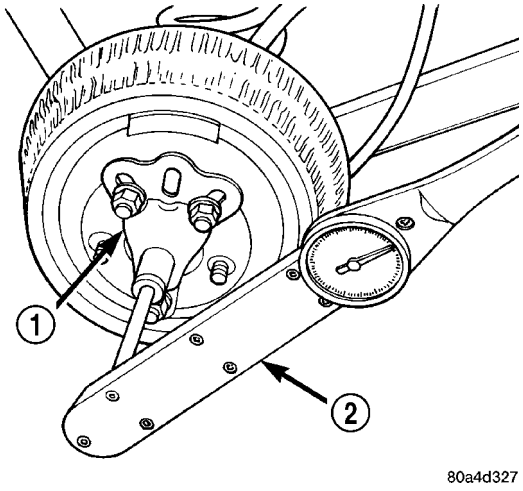

Fig. 49 ROTATING TORQUE TEST

1 - SPECIAL TOOL WITH BOLT IN CENTER HOLE
2 - TORQUE WRENCH

(6) If rotating torque is less than 41 N·m (30 ft. lbs.) or more than 271 N·m (200 ft. lbs.) on either wheel the unit should be serviced.

DISASSEMBLY

(1) Clamp Holding Fixture 6965 in vise and set differential case on fixture (Fig. 50).

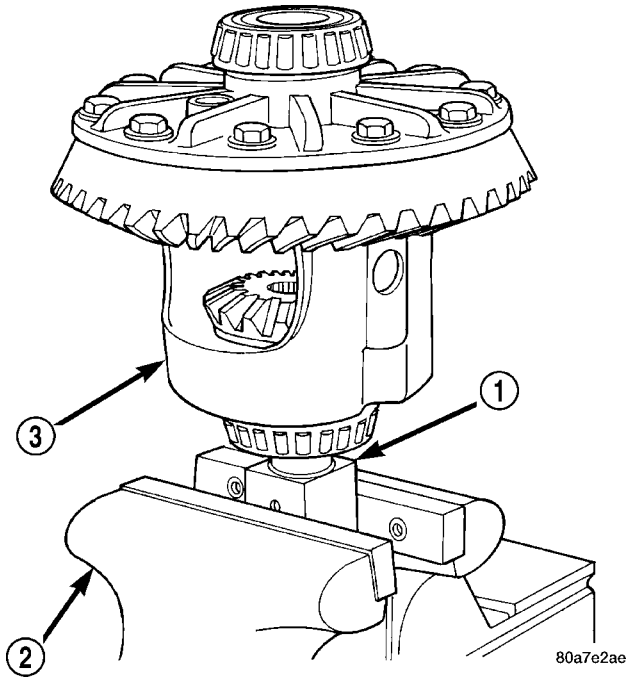

Fig. 50 DIFFERENTIAL CASE FIXTURE

1 - FIXTURE
2 - VISE
3 - DIFFERENTIAL

(2) Remove pinion gear mate shaft lock screw.
(3) Remove pinion gear mate shaft.
(4) Lubricate and install disc without threaded hole from Trac-Lok® Tool Kit 6960 into lower side gear (Fig. 51).

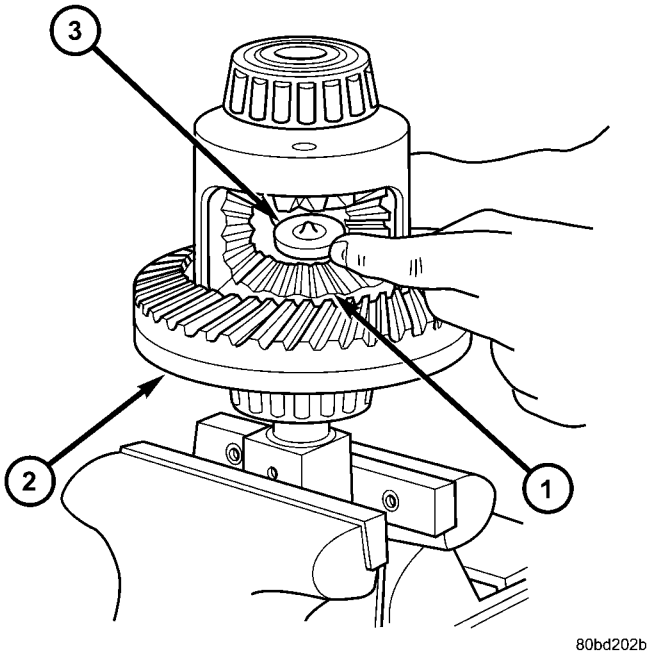

Fig. 51 DISC PLATE

1 - LOWER SIDE GEAR
2 - DIFFERENTIAL CASE
3 - DISC

(5) Install disc with threaded hole in the upper side gear. Thread forcing screw from Trac-Lok® Tool Kit 6960 through the upper disc until it comes in contact with lower disc.