DIFFERENTIAL - TRAC-LOK (Continued)

(6) Insert a screw driver in slot of upper disc (Fig. 52) to prevent disc from turning.

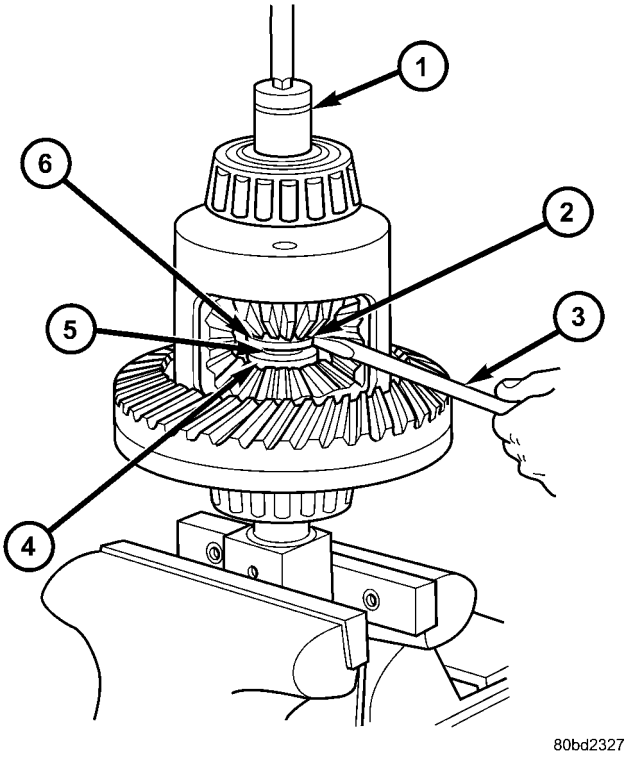

Fig. 52 THREAD ADAPTER DISC

1 - SOCKET
2 - SLOT IN DISC
3 - SCREWDRIVER
4 - LOWER DISC
5 - FORCING SCREW
6 - UPPER DISC

(7) Tighten forcing screw to 122 N·m (90 ft. lbs.) maximum to compress Belleville springs in clutch packs (Fig. 53).

(8) With a feeler gauge remove thrust washers from behind the pinion gears (Fig. 54).

(9) Insert turning bar from tool kit into the pinion mate shaft hole in the case (Fig. 55).

(10) Loosen forcing screw in small increments until clutch pack tension is relieved and the differential case can be rotated with turning bar.

(11) Rotate differential case until pinion gears can be removed.

(12) Remove pinion gears from differential case.

(13) Remove forcing screw and discs.

(14) Remove top side gear, clutch pack retainers and clutch pack (Fig. 56).

NOTE: Keep plates in order during removal.

(15) Remove differential case from the fixture.

(16) Remove side gear, clutch pack retainer and clutch pack.

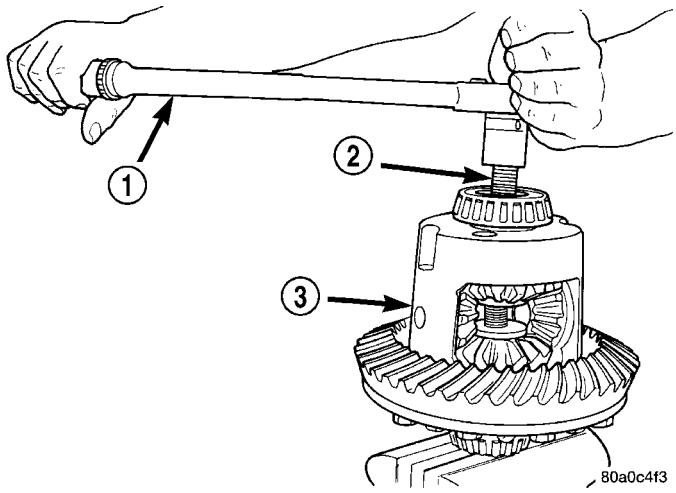

Fig. 53 TIGHTEN FORCING SCREW

1 - TORQUE WRENCH
2 - FORCING SCREW
3 - DIFFERENTIAL CASE

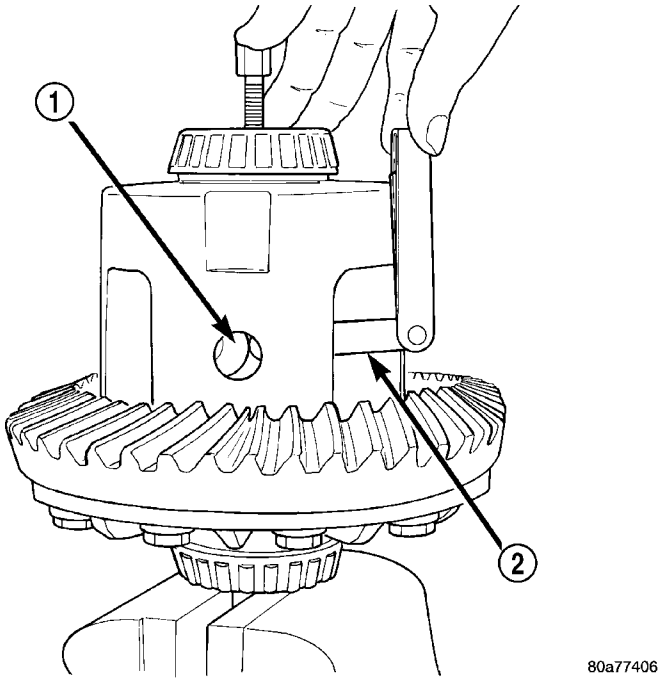

Fig. 54 PINION GEAR THRUST WASHER

1 - THRUST WASHER
2 - FEELER GAUGE

NOTE: Keep plates in order during removal.

ASSEMBLY

NOTE: New Plates and discs with fiber coating (no grooves or lines) must be presoaked in Friction Modifier before assembly. Soak plates and discs for a minimum of 20 minutes.