DIFFERENTIAL - TRAC-LOK (Continued)

(4) Lubricated and install disc without the hole from Trac-Lok® Tool Kit 6960 into lower side gear.

(5) Install upper side gear and clutch disc pack (Fig. 59).

NOTE: Verify clutch pack retaining clips are in position and seated in case pockets.

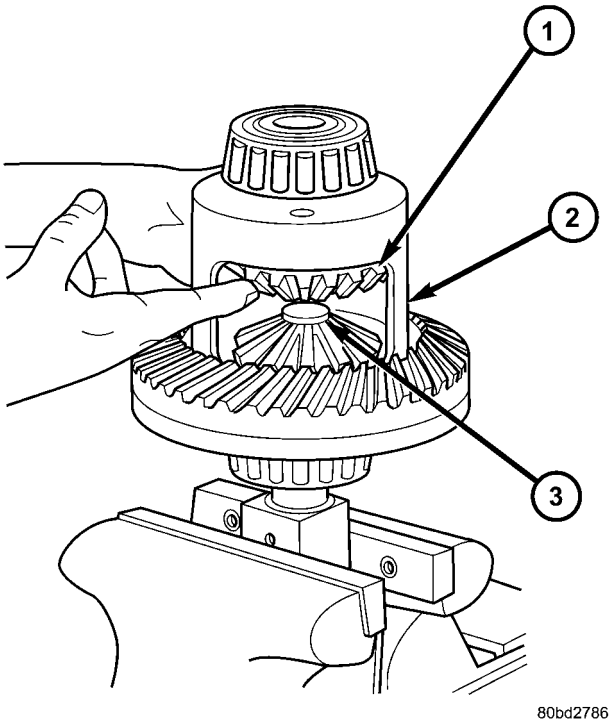

Fig. 59 CLUTCH PACK AND UPPER SIDE GEAR

1 - SIDE GEAR AND CLUTCH PACK
2 - DIFFERENTIAL CASE
3 - LOWER DISC

(6) Lubricate and install disc with threaded hole into top side gear.

(7) Thread forcing screw from tool kit through the top disc and until screw slightly compress clutch disc.

(8) Place pinion gears in position in side gears and verify pinion mate shaft hole is aligned.

(9) Rotate case with turning bar until pinion mate shaft holes in pinion gears align with holes in case.

NOTE: It may be necessary to slightly tighten the forcing screw in order to install the pinion gears.

(10) Tighten forcing screw to 122 N·m (90 ft. lbs.) maximum to compress the Belleville springs.

(11) Lubricate and install thrust washers behind pinion gears and align washers with a small screw driver. Insert mate shaft into each pinion gear to verify alignment.

(12) Remove forcing screw and discs.

(13) Install pinion gear mate shaft and align holes in shaft and case.

(14) Install pinion mate shaft lock screw finger tight to hold shaft during differential installation.

(15) Lubricate all differential components with hypoid gear lubricant.

DIFFERENTIAL CASE BEARINGS

REMOVAL

(1) Remove differential from housing.

(2) Remove bearings from differential case with Puller/Press C-293-PA , Adapters C-293-39 and Plug SP-3289 (Fig. 60).

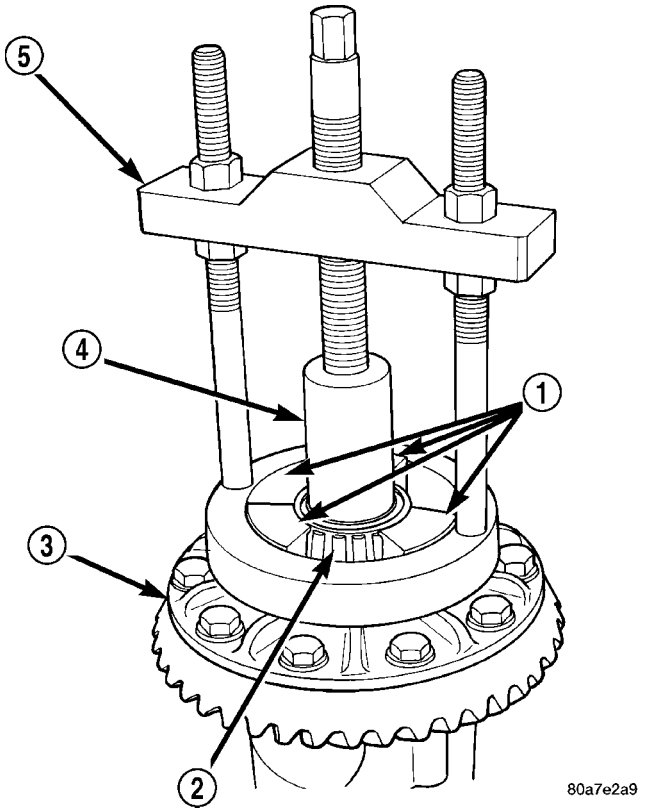

Fig. 60 BEARING REMOVAL

1 - ADAPTERS
2 - BEARING
3 - DIFFERENTIAL
4 - PLUG
5 - PULLER