DIFFERENTIAL CASE BEARINGS (Continued)

INSTALLATION

(1) Install differential side bearings with Installer C-3716-A with Handle C-4171 (Fig. 61).

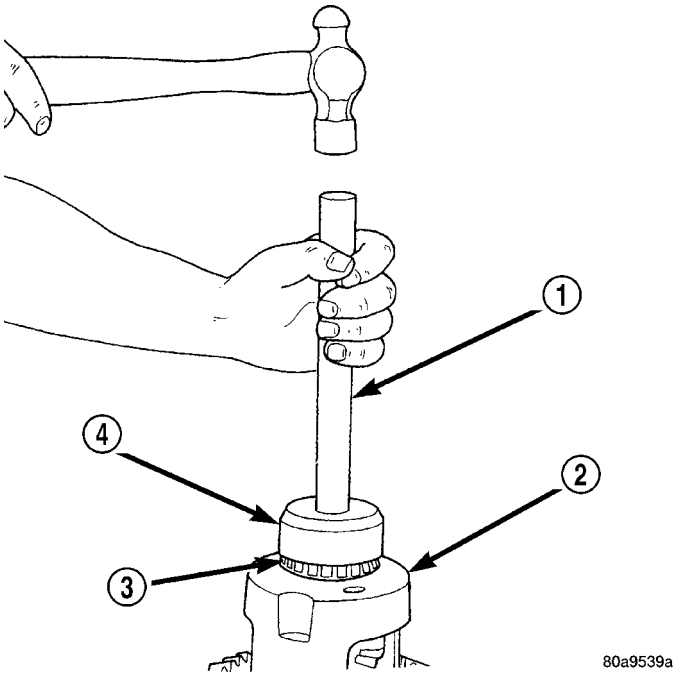

Fig. 61 DIFFERENTIAL CASE BEARINGS

1 - HANDLE
2 - DIFFERENTIAL
3 - BEARING
4 - INSTALLER

(2) Install differential in the housing.

PINION GEAR/RING GEAR

REMOVAL

NOTE: The ring and pinion gears are serviced in a matched set. Never replace one gear without replacing the other gear.

(1) Remove differential from housing.
(2) Place differential case in a vise with soft metal jaw.
(3) Remove ring gear bolts from the differential case.
(4) Drive ring gear off the differential case with a dead-blow hammer (Fig. 62).

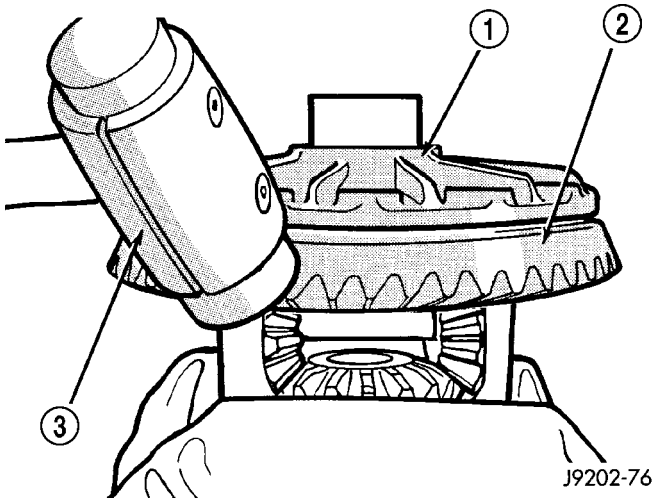

Fig. 62 RING GEAR

1 - CASE
2 - RING GEAR
3 - DEAD-BLOW HAMMER

(5) Hold pinion yoke with Wrench 6958 and remove pinion yoke nut and washer.
(6) Remove pinion yoke from pinion shaft with Remover C-452 and Wrench C-3281 (Fig. 63).

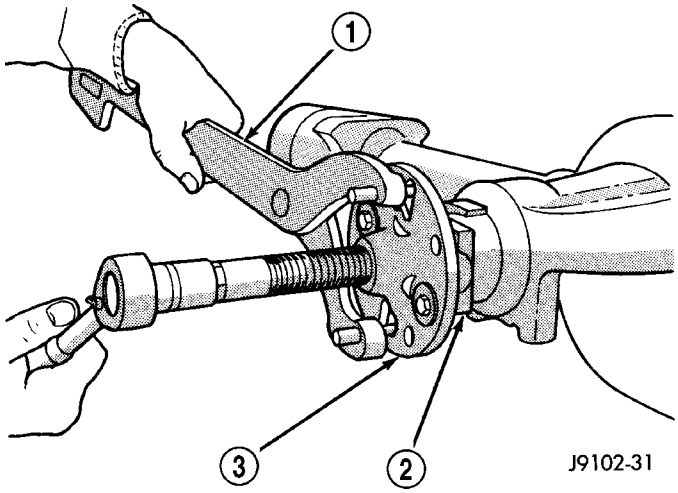

Fig. 63 PINION YOKE REMOVER

1 - WRENCH
2 - YOKE
3 - PULLER