PINION GEAR/RING GEAR (Continued)

(7) Remove pinion gear from housing with a dead-blow hammer (Fig. 64).

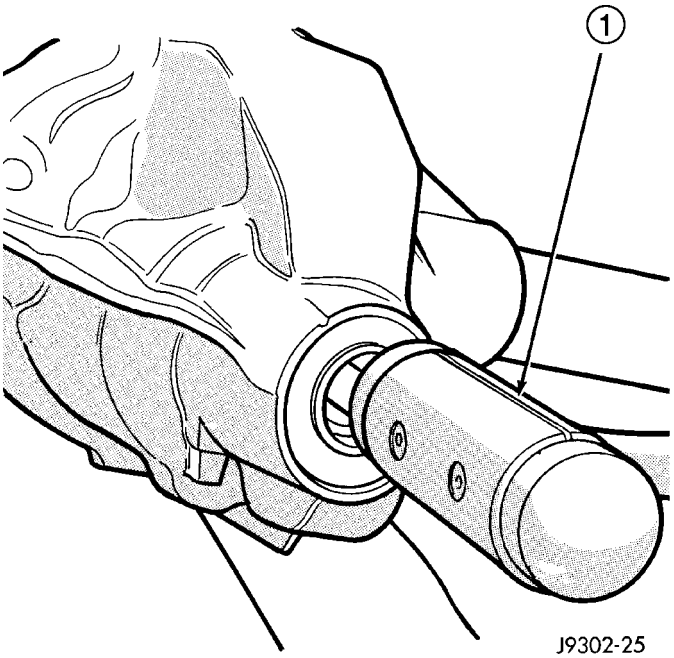


Fig. 64 REMOVE PINION GEAR

1 - DEAD-BLOW HAMMER

(8) Remove pinion shaft seal with a pry tool or a slide hammer mounted screw.

(9) Remove oil slinger, if equipped, and front pinion bearing.

(10) Remove front pinion bearing cup with Remover C-4345 and Handle C-4171 (Fig. 65).

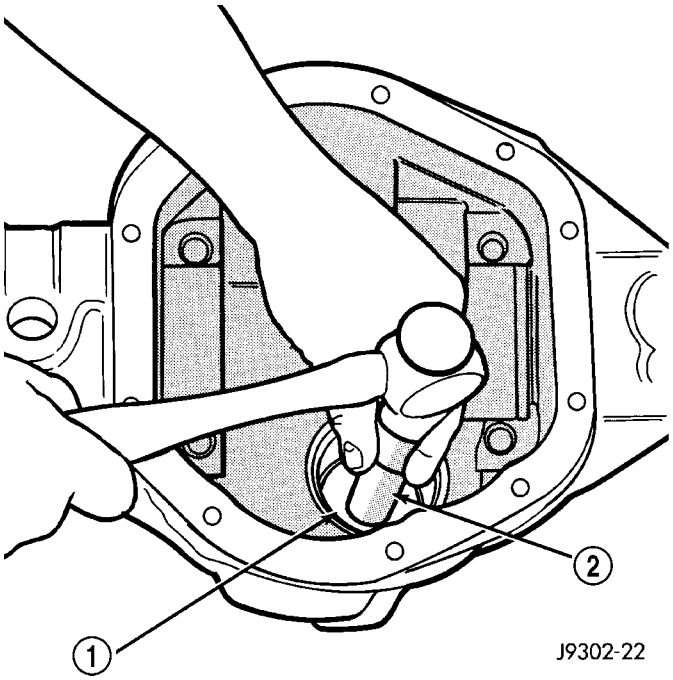


Fig. 65 FRONT PINION BEARING CUP

1 - REMOVER
2 - HANDLE

(11) Remove rear bearing cup from housing (Fig. 66) with Remover D-149 and Handle C-4171.

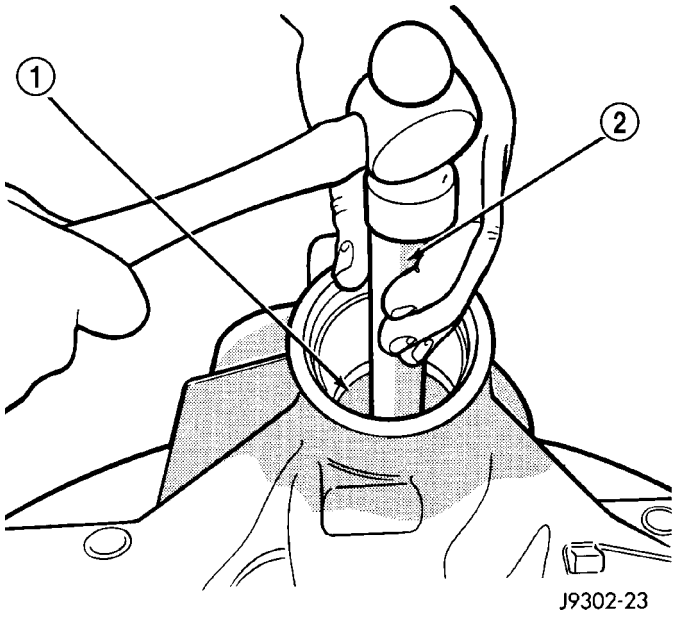


Fig. 66 REAR PINION BEARING CUP

1 - DRIVER
2 - HANDLE

(12) Remove collapsible preload spacer (Fig. 67).

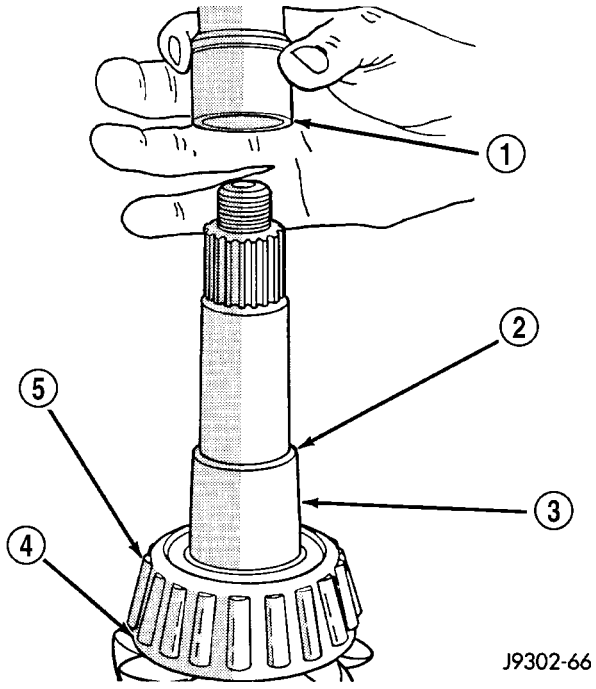


Fig. 67 COLLAPSIBLE SPACER

1 - COLLAPSIBLE SPACER
2 - SHOULDER
3 - PINION GEAR
4 - SHIM
5 - REAR BEARING