PINION GEAR/RING GEAR (Continued)

(13) Remove rear bearing from the pinion shaft with Puller/Press C-293-PA and Adapters C-293-40 (Fig. 68).

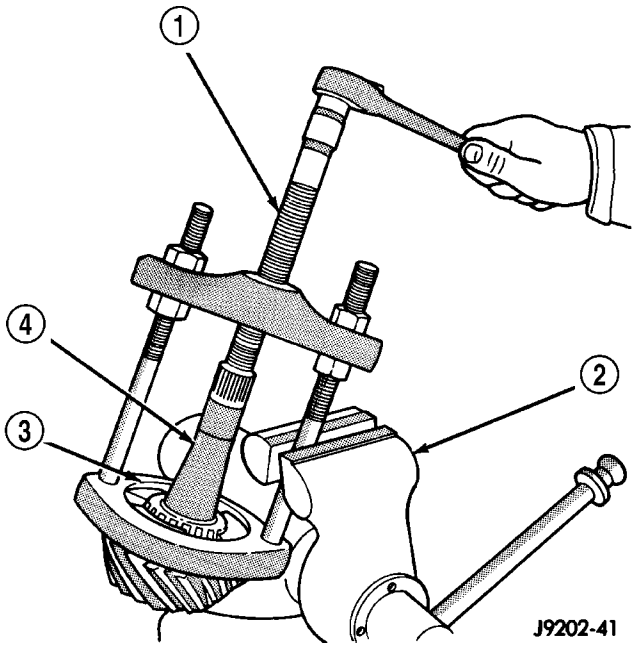


Fig. 68 REAR PINION BEARING

1 - PULLER
2 - VISE
3 - ADAPTERS
4 - DRIVE PINION GEAR SHAFT

(14) Remove depth shims from the pinion shaft and record the shims thickness.

INSTALLATION

NOTE: A pinion depth shim/oil slinger is placed between the rear pinion bearing cone and the pinion head to achieve proper ring gear and pinion mesh. If ring gear and pinion are reused, the pinion depth shim/oil slinger should not require replacement. Refer to Adjustment (Pinion Gear Depth) to select the proper thickness shim/oil slinger if ring and pinion gears are replaced.

(1) Apply Mopar Door Ease or equivalent lubricant to outside surface of bearing cups.

(2) Install pinion rear bearing cup with Installer D-146 and Driver Handle C-4171 (Fig. 69) and verify cup is seated.

(3) Install pinion front bearing cup with Installer D-130 and Handle C-4171 (Fig. 70) and verify cup is seated.

(4) Install pinion front bearing and shim.

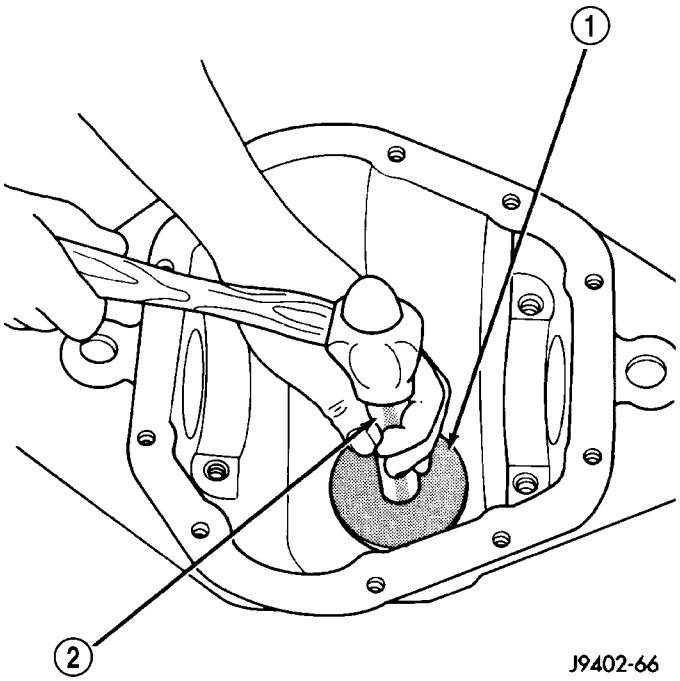


Fig. 69 REAR PINION BEARING CUP

1 - INSTALLER
2 - HANDLE

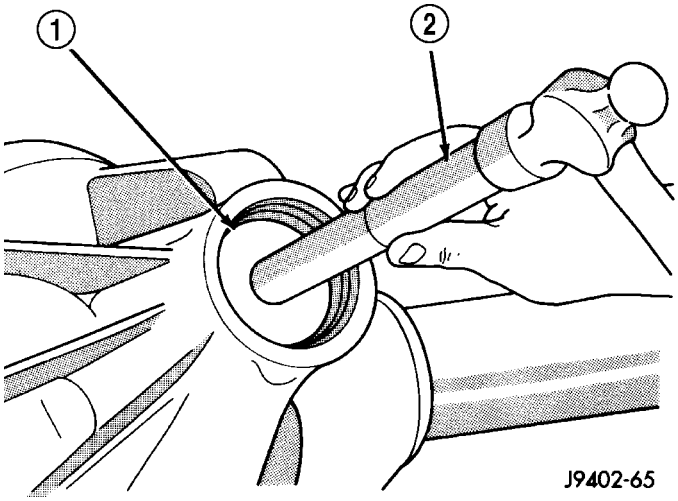


Fig. 70 FRONT PINION BEARING CUP

1 - INSTALLER
2 - HANDLE