PINION GEAR/RING GEAR (Continued)

(5) Apply a light coating of gear lubricant on the lip of pinion seal and install seal with an appropriate installer (Fig. 71).

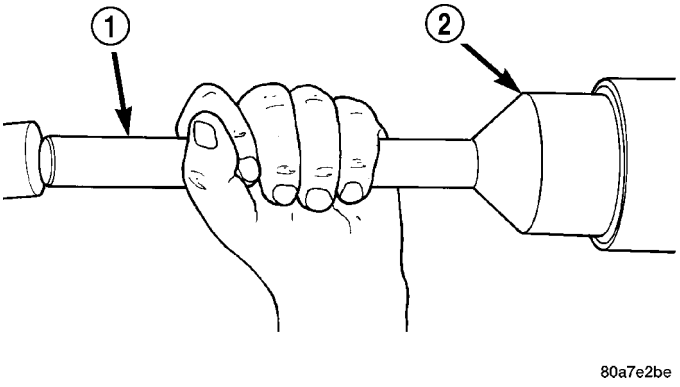

Fig. 71 PINION SEAL INSTALLER

1 - HANDLE
2 - INSTALLER

(6) Install depth shim on the pinion gear.

(7) Install rear bearing and shim on the pinion gear with Installer W-262 and a press (Fig. 72).

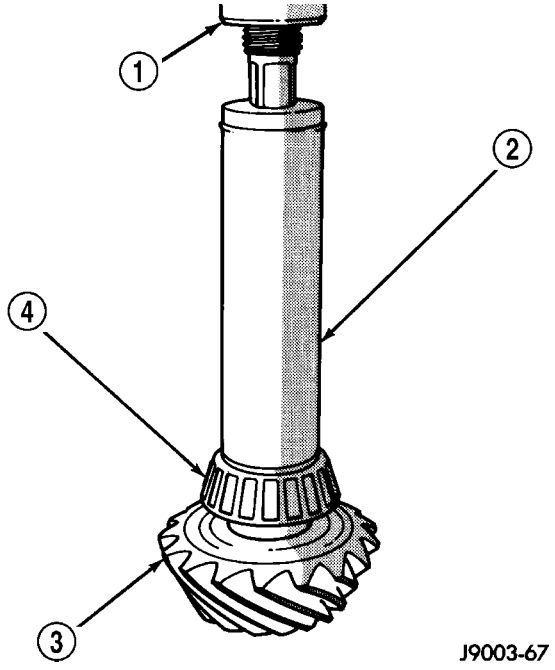

Fig. 72 REAR PINION BEARING

1 - PRESS
2 - INSTALLER
3 - DRIVE PINION GEAR
4 - REAR PINION BEARING

(8) Install a **new** collapsible preload spacer on pinion shaft and install pinion gear in the housing (Fig. 73).

(9) Install yoke with Installer Screw 8112, Cup 8109 and Wrench 6958 (Fig. 74).

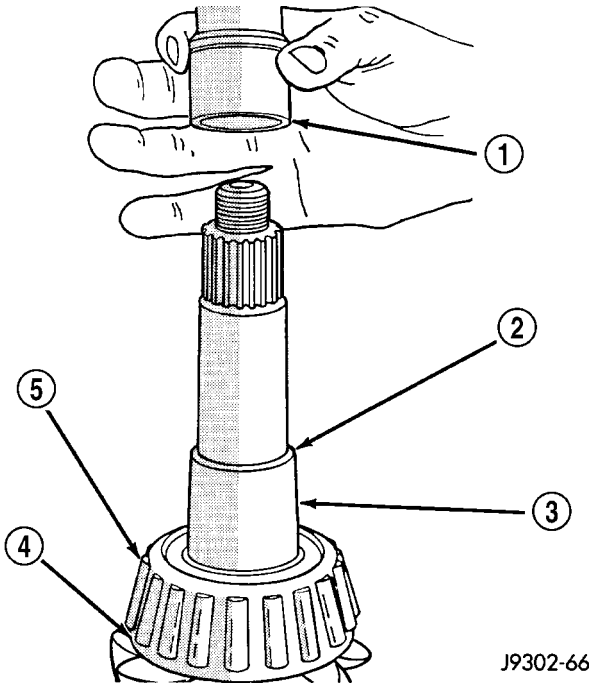

Fig. 73 COLLAPSIBLE SPACER

1 - COLLAPSIBLE SPACER
2 - SHOULDER
3 - PINION GEAR
4 - SHIM
5 - REAR BEARING

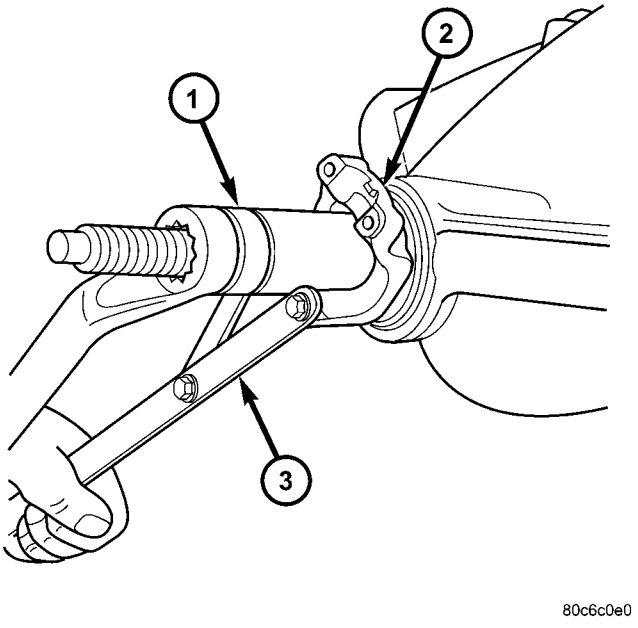

Fig. 74 PINION YOKE INSTALLER

1 - INSTALLER
2 - PINION YOKE
3 - SPANNER WRENCH