REAR AXLE - 216RBI (Continued)

NOTE: It is difficult to salvage the differential side bearings during the removal procedure. Install replacement bearings if necessary.

(1) Remove differential side bearings from differential case.
(2) Remove factory installed shims from differential case.
(3) Install ring gear on differential case and tighten bolts to specification.
(4) Install dummy side bearings D-345 on differential case.
(5) Install differential case in axle housing (Fig. 11).
(6) Install the marked bearing caps in their correct positions. Install and snug the bolts (Fig. 12).

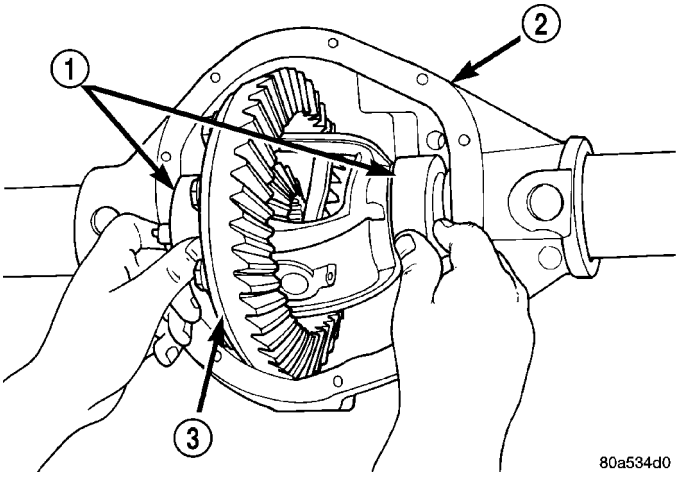

Fig. 11 DIFFERENTIAL DUMMY BEARINGS

1 - DUMMY BEARINGS
2 - DIFFERENTIAL HOUSING
3 - DIFFERENTIAL CASE

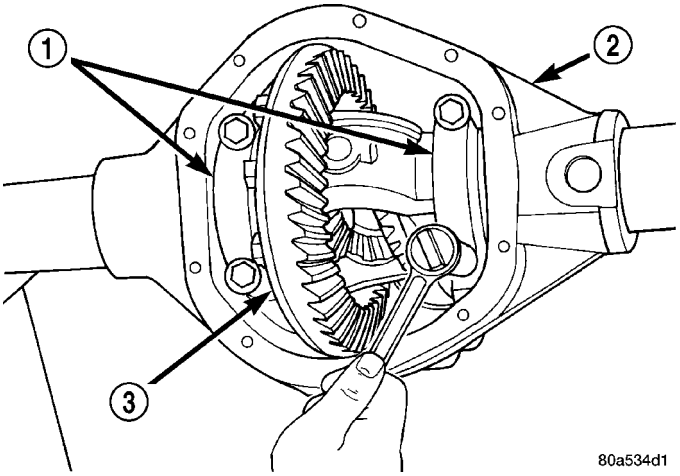

Fig. 12 BEARING CAP BOLTS

1 - BEARING CAP
2 - DIFFERENTIAL HOUSING
3 - DIFFERENTIAL CASE

(7) Using a dead-blow hammer seat the differential dummy bearings to each side of the housing (Fig. 13) and (Fig. 14).

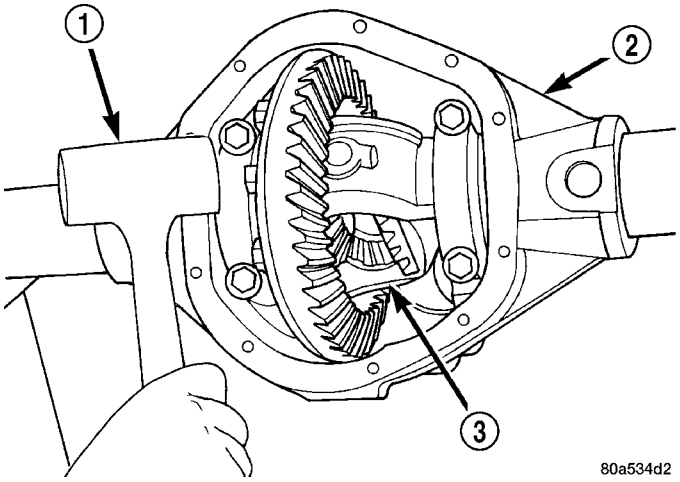

Fig. 13 SEAT DUMMY BEARING PINION SIDE

1 - MALLET
2 - DIFFERENTIAL HOUSING
3 - DIFFERENTIAL CASE

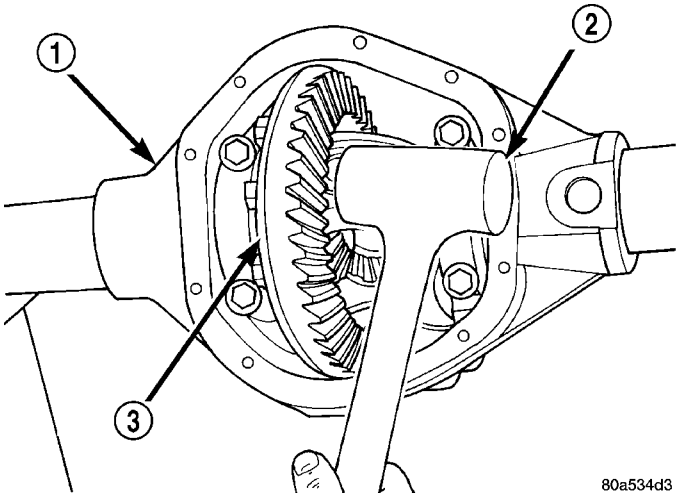

Fig. 14 SEAT DUMMY BEARING RING GEAR SIDE

1 - DIFFERENTIAL HOUSING
2 - MALLET
3 - DIFFERENTIAL CASE