REAR AXLE - 216RBI (Continued)

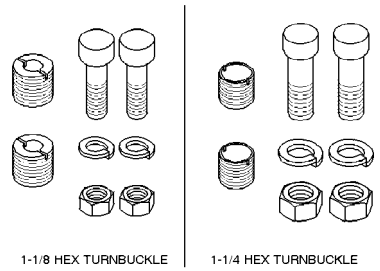


***ADAPTER KIT 6987B***

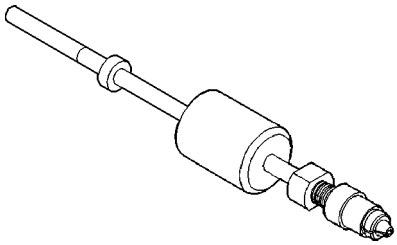

***SLIDE HAMMER 7420***

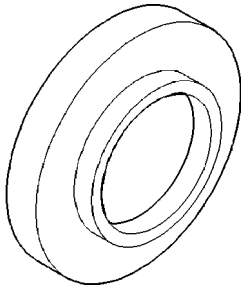

***INSTALLER 7913-A***

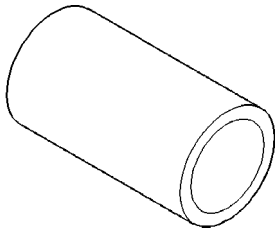

***CUP 8109***

# AXLE SHAFTS

## REMOVAL

(1) With vehicle in neutral, position vehicle on hoist.

(2) Remove brake caliper and rotor.

(3) Remove axle retainer plate nuts through access hole in axle flange (Fig. 25).

(4) Pull axle shaft from the axle. If axle will not come out use Slide Hammer 7420 and Adapter 6790.

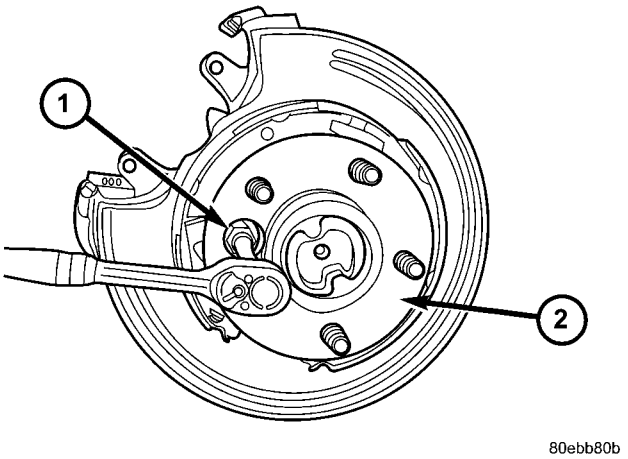


***Fig. 25 AXLE SHAFT BOLTS***

1 - ACCESS HOLE
2 - AXLE FLANGE

## INSTALLATION

**WARNING: NEVER REUSE AXLE RETAINING BOLTS AND NUTS. USED TORQUE NUT CAN LOOSEN. FAILURE TO FOLLOW THESE INSTRUCTIONS MAY RESULT IN PERSONAL INJURY.**

(1) Install axle into axle tube with the flat area of the retainer plate upward (Fig. 26).

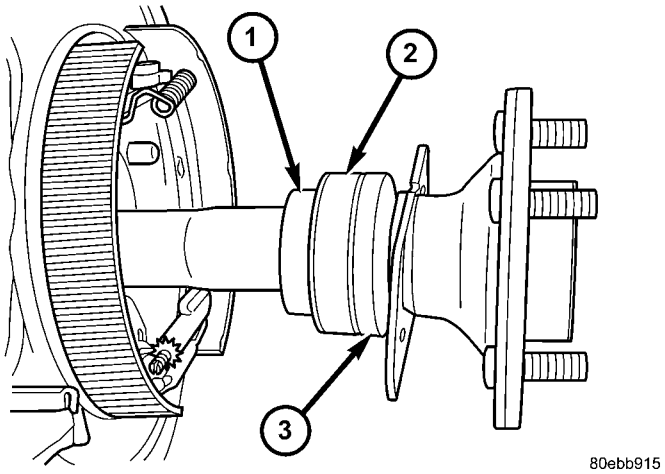


***Fig. 26 AXLE SHAFT***

1 - RETAINER RING
2 - AXLE BEARING
3 - AXLE SEAL

(2) Install **new** axle retaining bolts.

(3) Install **new** retaining nuts and tighten to 61 N·m (45 ft. lbs.).

(4) Install brake rotor and caliper.