AXLE BEARINGS

REMOVAL

(1) Remove axle shaft from vehicle.

NOTE: It is normal that the axle bearing race is loose in the axle tube.

(2) Drill a shallow hole into soft steel axle bearing retaining ring with a 3/8 in. drill bit (Fig. 27). Use a drill depth stop to avoid marking the axle.

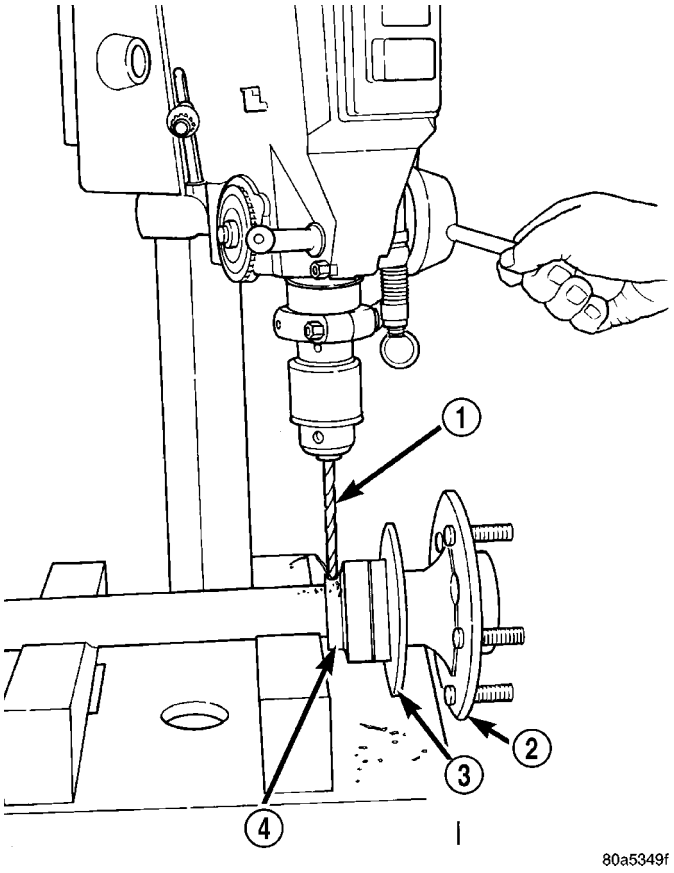

Fig. 27 DRILL RETAINING RING

1 - 3/8 in. DIA. DRILL BIT
2 - AXLE
3 - RETAINING PLATE
4 - SOFT METAL RETAINING RING

(3) With a cold chisel cut the retaining ring across drilled hole. (Fig. 28)

(4) Slide retaining ring from axle shaft.

(5) Remove axle bearing from the shaft with, a press and Splitter 1130 placed between the seal and bearing (Fig. 29).

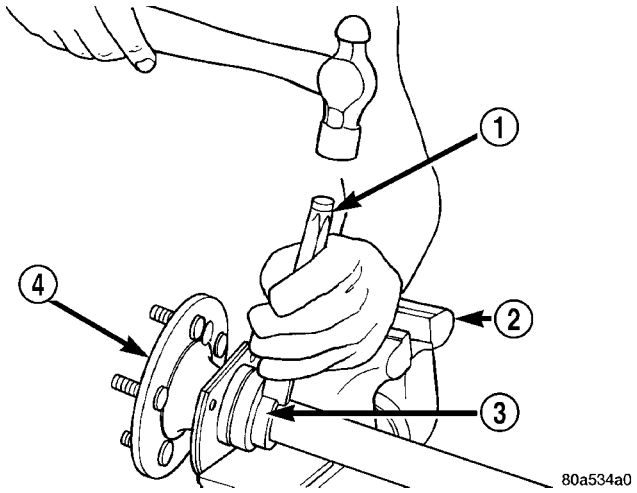

Fig. 28 CUT RETAINING RING

1 - COLD CHISEL
2 - VISE
3 - RETAINING RING
4 - AXLE

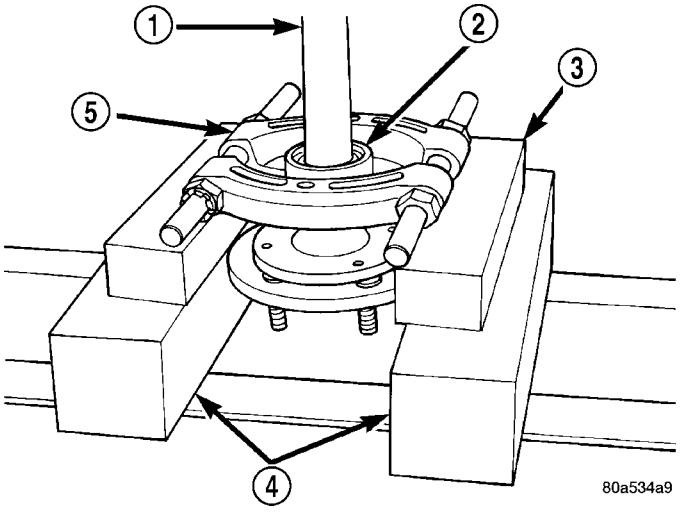

Fig. 29 AXLE BEARING AND SEAL

1 - AXLE
2 - UNIT BEARING
3 - PRESS PLATES
4 - BLOCKS
5 - SPLITTER

(6) Remove seal from axle.

(7) Remove retaining plate from axle shaft.