AXLE BEARINGS (Continued)

INSTALLATION

(1) Verify axle shaft retaining plate is flat with a straight edge.

NOTE: Replace the retaining plate if warped.

(2) Install retaining plate on axle (Fig. 30).
(3) Apply a coat of multi-purpose grease on sealing surface of axle seal.
(4) Install seal on axle with cavity away from retaining plate (Fig. 30).

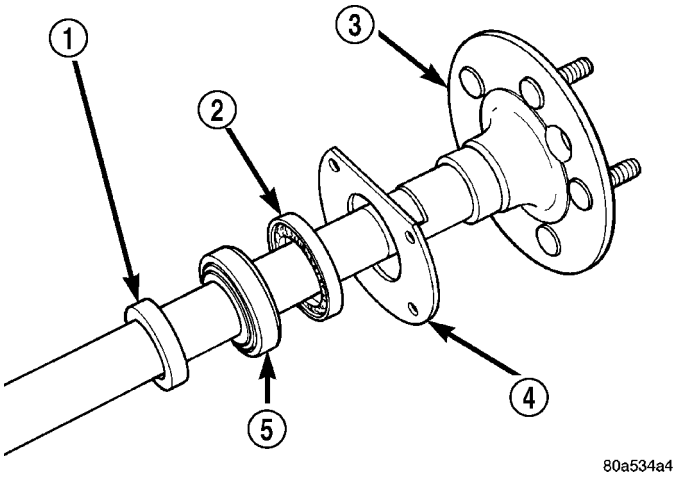

Fig. 30 AXLE BEARING AND SEAL COMPONENTS

1 - RETAINING RING
2 - SEAL
3 - AXLE
4 - RETAINING PLATE
5 - BEARING

(5) Lubricate bearing with Mopar Wheel Bearing Grease, or equivalent. Wipe excess grease from outside of bearing.
(6) Install bearing on the axle shaft with Installer 7913 and a press (Fig. 31).

NOTE: Install bearing with groove on the outer surface toward the seal.

(7) Press soft metal retaining ring onto axle shaft with Installer 7913 and a press (Fig. 32).
(8) Install axle in vehicle.

PINION SEAL

REMOVAL

(1) With vehicle in neutral, position vehicle on hoist.
(2) Remove brake drums/calipers.
(3) Remove propeller shaft.
(4) Rotate pinion gear three or four times and verify that pinion rotates smoothly.

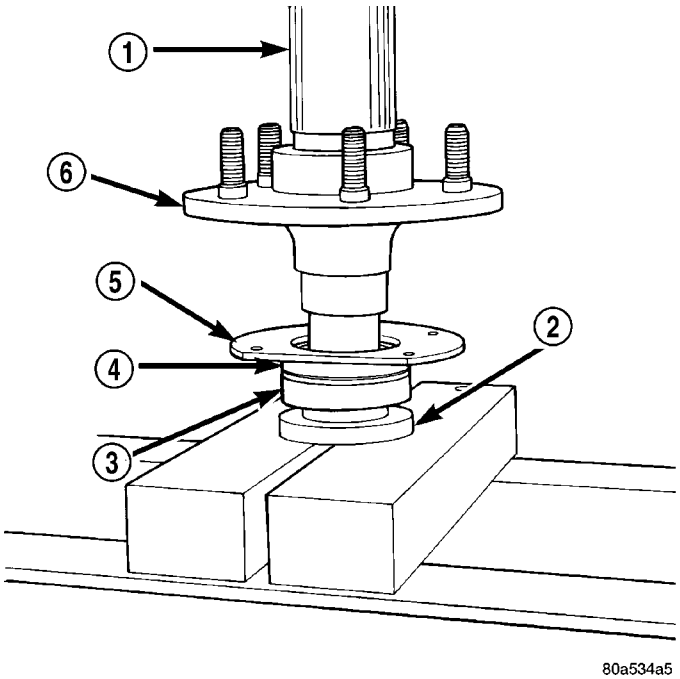

Fig. 31 PRESS BEARING ON AXLE

1 - PRESS RAM
2 - INSTALLER
3 - UNIT BEARING
4 - SEAL
5 - RETAINING PLATE
6 - AXLE

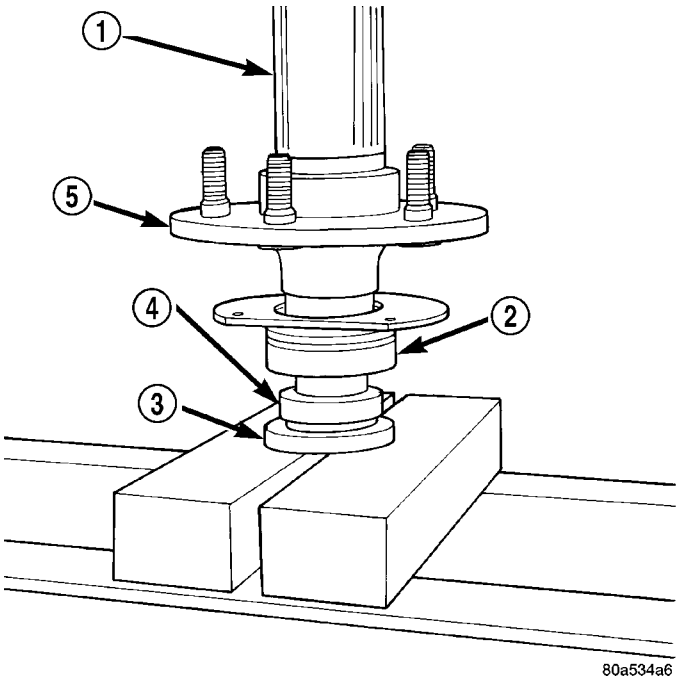

Fig. 32 PRESS RETAINING RING ON AXLE

1 - PRESS RAM
2 - UNIT BEARING
3 - INSTALLER
4 - METAL RETAINING RING
5 - AXLE