PINION SEAL (Continued)

(5) Using Spanner Wrench 6958 to hold the pinion yoke, remove the pinion nut and washer.

(6) Remove pinion yoke with Remover C-452 and Flange Wrench C-3281 (Fig. 33).

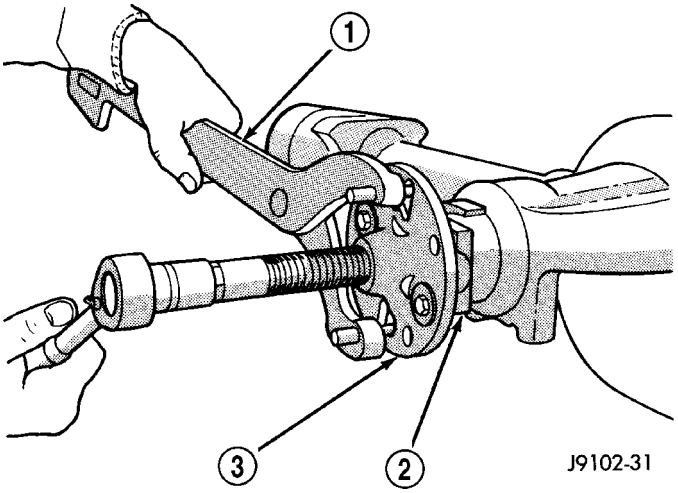

Fig. 33 PINION YOKE REMOVER

1 - FLANGE WRENCH
2 - PINION YOKE
3 - REMOVER

(7) Remove pinion shaft seal with a pry tool or slide hammer mounted screw.

INSTALLATION

(1) Apply a light coating of gear lubricant on the lip of pinion seal. Install seal with Installer 8681 (Fig. 34).

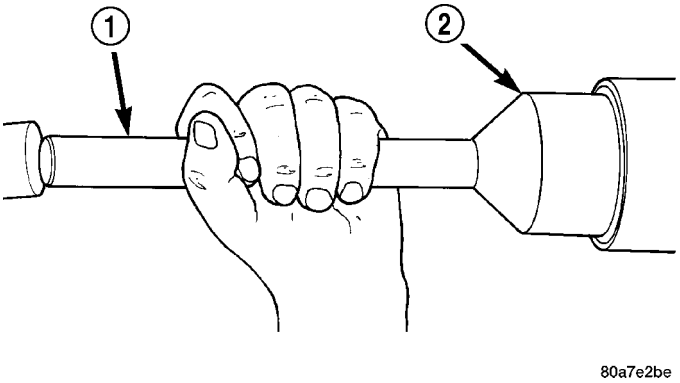

Fig. 34 PINION SEAL INSTALLER

1 - HANDLE
2 - INSTALLER

(2) Install yoke on pinion gear with Installer W-162–D, Cup 8109 and Spanner Wrench 6958 (Fig. 35).

(3) Install pinion washer and a **new** nut on the pinion gear and tighten the nut until there is zero bearing end-play.

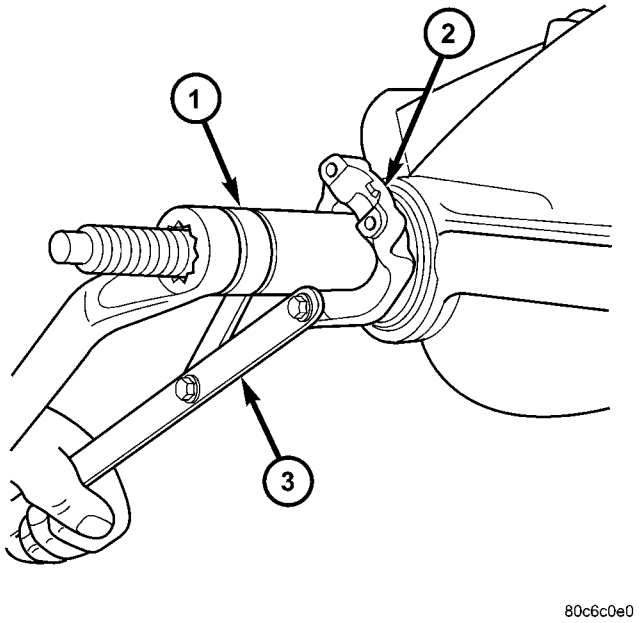

Fig. 35 YOKE SPANNER WRENCH

1 - INSTALLER
2 - PINION YOKE
3 - SPANNER WRENCH

(4) Hold pinion yoke with Spanner Wrench 6958 (Fig. 36) and tighten pinion nut to 217 to 271N·m (160 to 200 ft. lbs.).

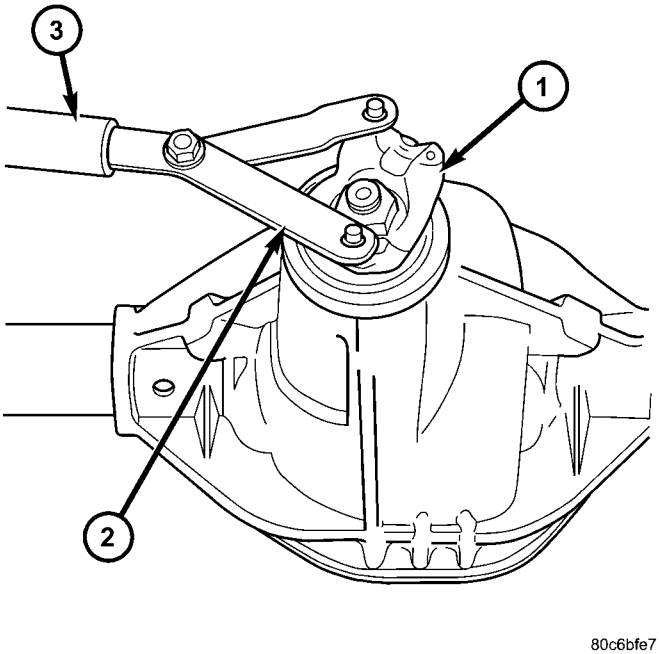

Fig. 36 YOKE SPANNER WRENCH

1 - PINION YOKE
2 - SPANNER WRENCH
3 - PIPE

(5) Install propeller shaft.

(6) Install brake drums/calipers.