DIFFERENTIAL (Continued)

(7) Spread housing while measuring the distance with the dial indicator (Fig. 43).

CAUTION: Never spread the housing over 0.38 mm (0.015 in). Failure to heed caution may result in damage.

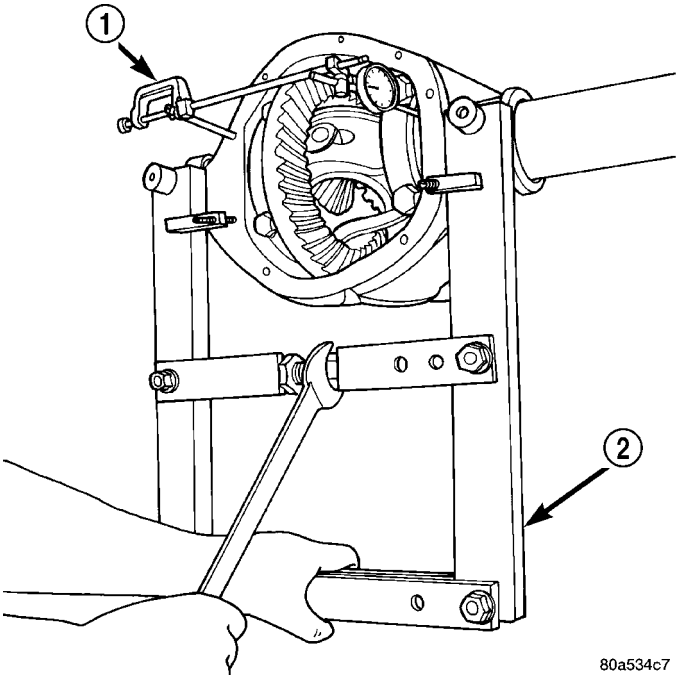

Fig. 43 SPREAD DIFFERENTIAL HOUSING

1 - DIAL INDICATOR
2 - SPREADER

(8) Remove dial indicator.

(9) Hold differential case in position and remove differential bearing caps.

(10) Remove differential from housing and tag differential bearing cups to indicate location (Fig. 44).

(11) Remove spreader from housing.

(12) Clean housing cavity with flushing oil, light engine oil or lint free cloth.

NOTE: Do not use water, steam, kerosene or gasoline for cleaning.

DISASSEMBLY

(1) Remove pinion shaft lock roll pin with a hammer and punch.

(2) Remove pinion shaft.

(3) Rotate differential side gears and remove differential pinions and thrust washers (Fig. 45).

(4) Remove differential side gears and thrust washers.

ASSEMBLY

(1) Install differential side gears and thrust washers.

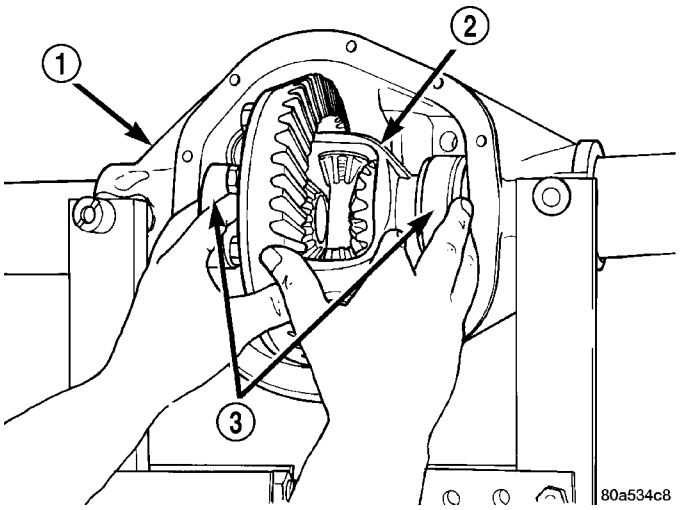

Fig. 44 DIFFERENTIAL CASE REMOVAL

1 - DIFFERENTIAL HOUSING
2 - DIFFERENTIAL CASE
3 - BEARING CUPS

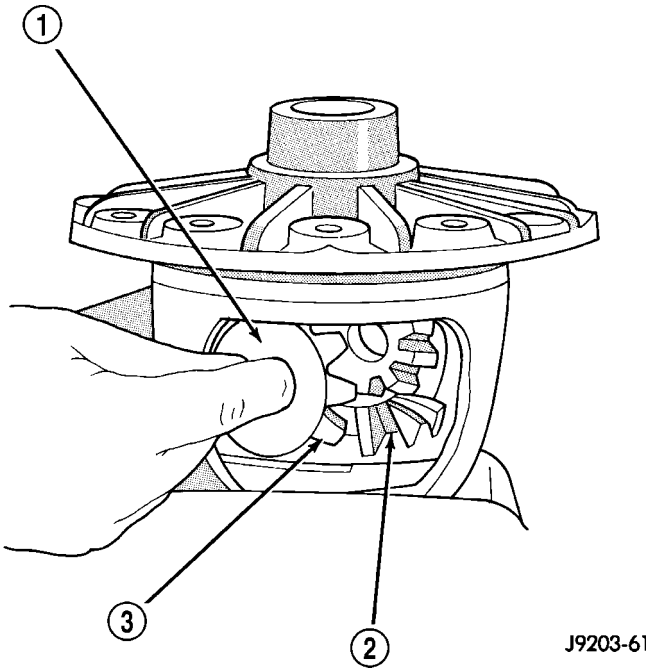

Fig. 45 DIFFERENTIAL GEARS

1 - THRUST WASHER
2 - SIDE GEAR
3 - DIFFERENTIAL PINION

(2) Install differential pinion gears and thrust washers.

(3) Install pinion mate shaft.

(4) Align hole in the pinion mate shaft with the hole in the differential case and install pinion mate shaft roll pin. Stake (peen) metal of case over pin in two places 180 degrees apart.

(5) Lubricate all differential components with hypoid gear lubricant.