DIFFERENTIAL -TRAC-LOK (Continued)

(8) With a feeler gauge remove thrust washers from behind the pinion gears (Fig. 54).

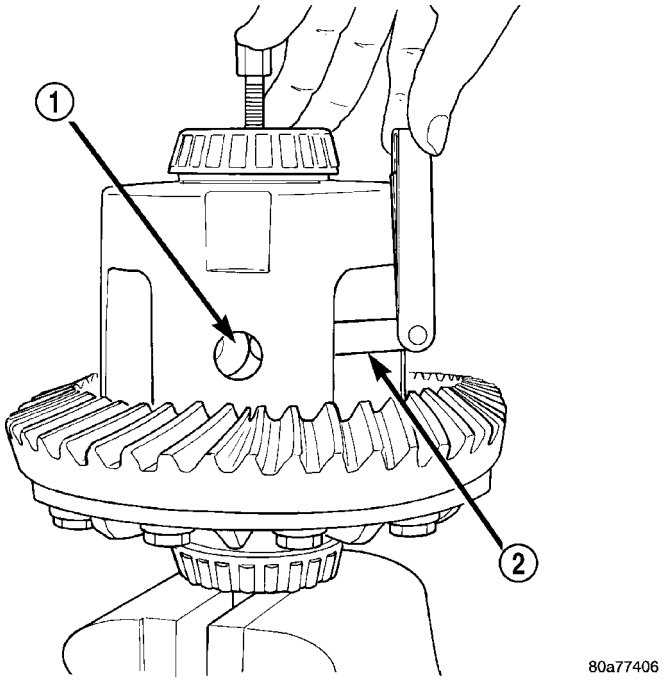

Fig. 54 PINION GEAR THRUST WASHER

1 - THRUST WASHER
2 - FEELER GAUGE

(9) Insert turning bar from tool into the pinion mate shaft hole in the case (Fig. 55).

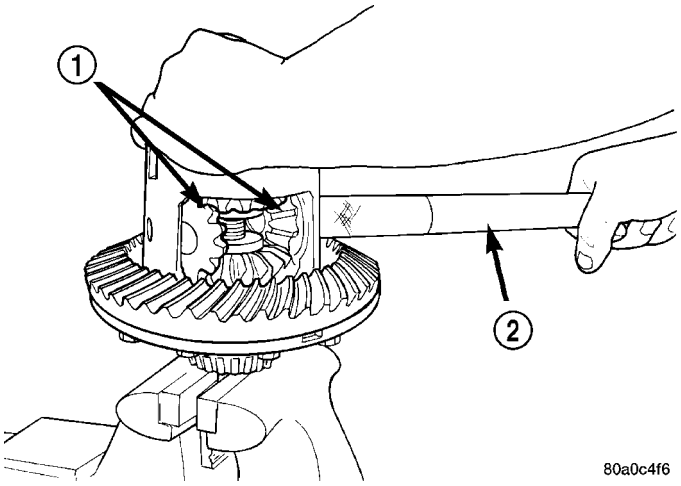

Fig. 55 PINION GEARS

1 - PINION GEARS
2 - TURNING BAR

(10) Loosen forcing screw in small increments until clutch pack tension is relieved and the differential case can be turned using turning bar.

(11) Rotate differential case until the pinion gears can be removed.

(12) Remove pinion gears from differential case.

(13) Remove Forcing Screw, Step Plate and Threaded Adapter.

(14) Remove top side gear, clutch pack retainer and clutch pack. Keep plates in order during removal (Fig. 56).

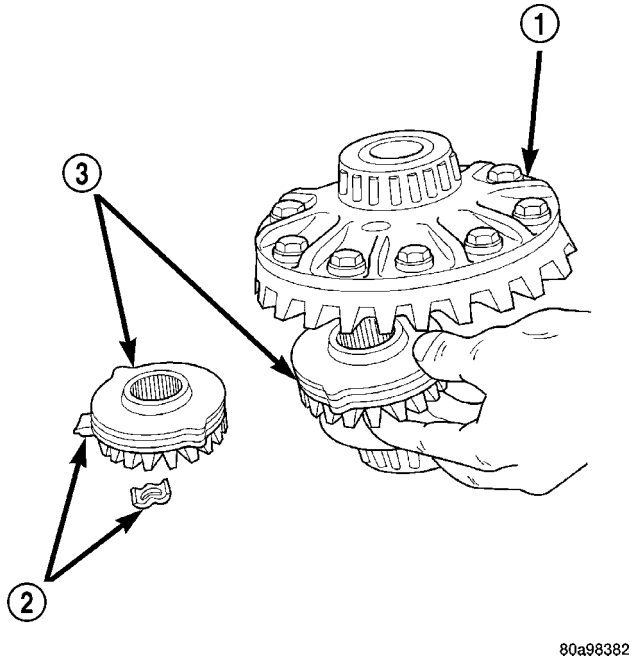

Fig. 56 SIDE GEARS AND CLUTCH DISCS

1 - DIFFERENTIAL CASE
2 - RETAINER
3 - SIDE GEAR AND CLUTCH DISC PACK

(15) Remove differential case from the Holding Fixture. Remove side gear, clutch pack retainer and clutch pack. Keep plates in order during removal.

ASSEMBLY

NOTE: New Plates and discs with fiber coating (no grooves or lines) must be presoaked in Friction Modifier before assembly. Soak plates and discs for a minimum of 20 minutes.

(1) Lubricate components with gear lubricant.

(2) Assemble clutch discs into packs and secure disc packs with retaining clips (Fig. 57).

NOTE: Dished plate is position with the convex side against the side gear.

(3) Position assembled clutch disc packs on the side gear hubs.

(4) Install clutch pack and side gear in the ring gear side of the differential case, with retaining clips seated in the case pockets (Fig. 58).

(5) Position the differential case on the Holding Fixture 6965.