DIFFERENTIAL - TRU-LOK (Continued)

TRU-LOK PUMPS

(1) Connect a pressure gauge to the rear pump.
(2) Place transfer case in 4WD Low and automatic transmission in Park (1st gear if manual transmission).
(3) Turn ignition to the ON position and push the dash switch to activate the rear pump.

NOTE: If pump is not running, verify pump has (Fig. 61) 12 volts and ground.

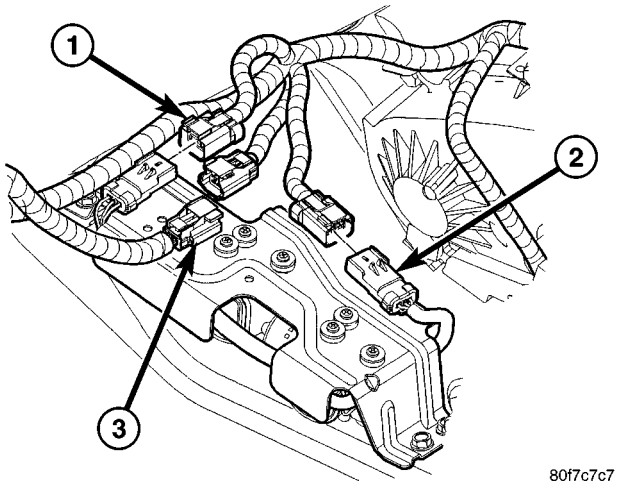

Fig. 61 PUMP CONNECTORS

1 - REAR PUMP CONNECTOR
2 - FRONT PUMP CONNECTOR
3 - AXLE HARNESS

(4) With the pump running the pressure gauge should show 5 psi..

NOTE: If pump does not produce 5 psi. replace the pump.

REMOVAL

(1) Remove drain plug from the differential housing.
(2) Disconnect indicator switch harness and remove connector from differential cover (Fig. 62).
(3) Remove differential housing cover.
(4) Remove axle shafts.
(5) Remove pressure hose from actuator assembly (Fig. 63).

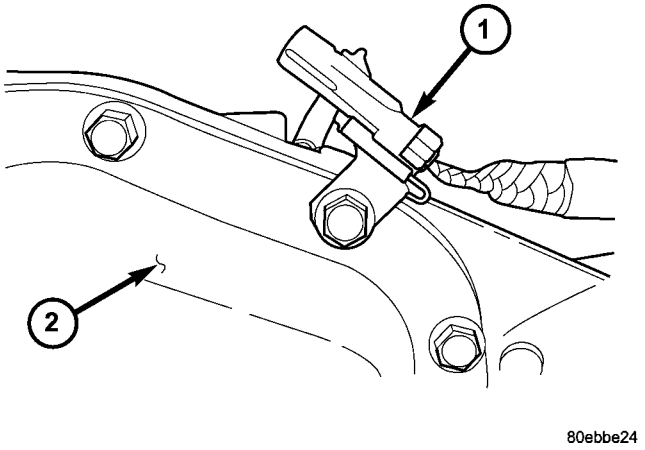

Fig. 62 INDICATOR SWITCH CONNECTOR

1 - CONNECTOR
2 - DIFFERENTIAL COVER

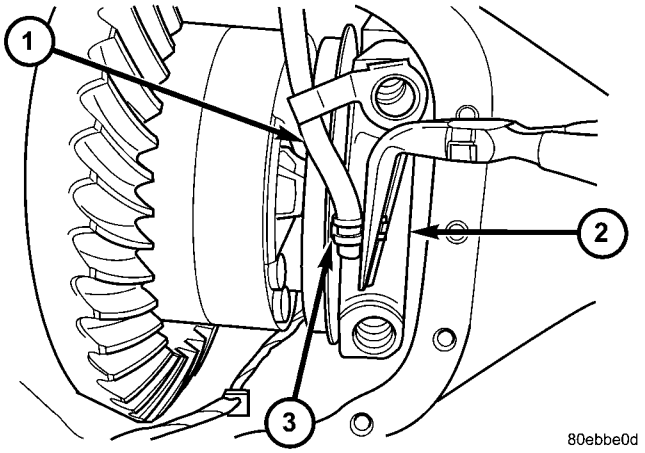

Fig. 63 PRESSURE HOSE

1 - PRESSURE HOSE
2 - BEARING CAP
3 - PRESSURE HOSE CLAMP