DIFFERENTIAL - TRU-LOK (Continued)

(6) Note the reference letters stamped on the bearing caps and housing machined sealing surface (Fig. 64).

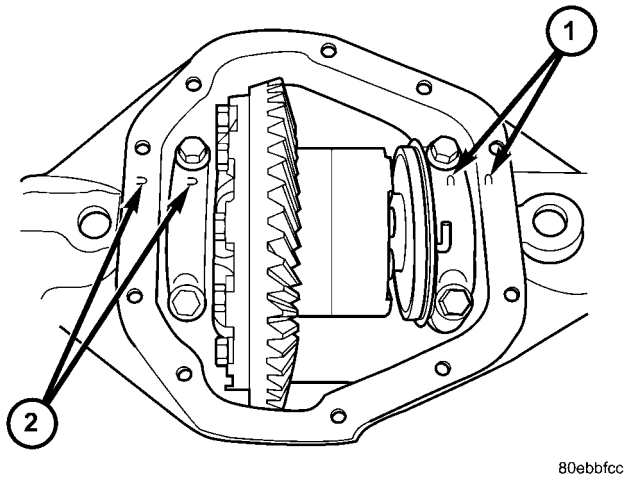

Fig. 64 LOCATION MARKS

1 - REFERENCE MARKS
2 - REFERENCE MARKS

(7) Loosen differential bearing cap bolts.

(8) Position Spreader W-129-B with Adapter Kit 6987B on differential locating holes (Fig. 65). Install hold-down clamps and tighten the turnbuckle finger-tight.

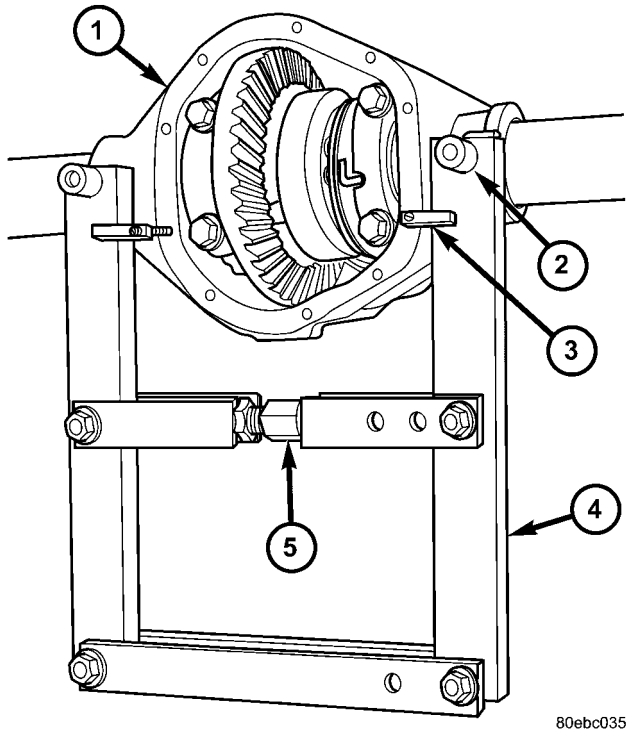

Fig. 65 SPREADER LOCATION

1 - DIFFERENTIAL CASE
2 - ADAPTER
3 - HOLD DOWN
4 - SPREADER
5 - TURNBUCKLE

(9) Install a Pilot Stud C-3288-B at the left side of the differential housing. Attach Dial Indicator C-3339 to pilot stud (Fig. 66). Load indicator plunger against the opposite side of the housing and zero the indicator.

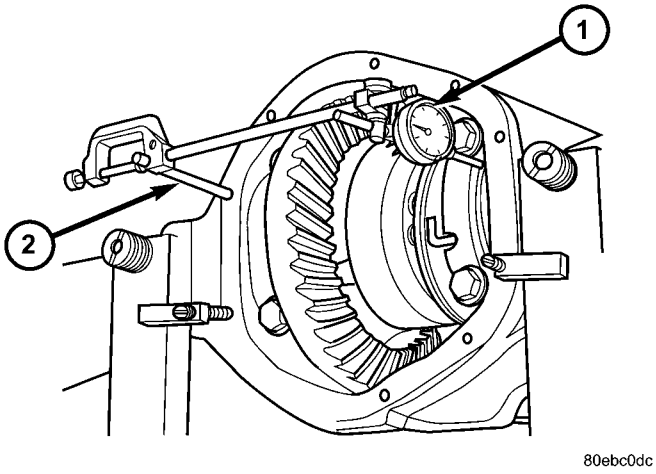

Fig. 66 DIAL INDICATOR LOCATION

1 - DIAL INDICATOR
2 - PILOT STUD

CAUTION: Never spread the housing over 0.38 mm (0.015 in). Failure to heed caution may result in damage.

(10) Spread housing while measuring the distance with the dial indicator (Fig. 67).

(11) Remove dial indicator.

(12) Remove differential bearing cap bolts and ring gear side bearing cap.

(13) Remove differential from housing with pinion gear side bearing cap (Fig. 68) and tag differential bearing cups and preload shims to indicate location.

CAUTION: Do not bend actuator mounting tabs, during differential removal. Failure to heed caution may result in damage.

(14) Remove spreader from housing.

(15) Remove indicator switch (Fig. 69) from differential housing.

(16) Clean the housing cavity with flushing oil, light engine oil or lint free cloth.

NOTE: Do not use water, steam, kerosene or gasoline for cleaning.

DISASSEMBLY

(1) Install Plug C-293-3 into the differential axle shaft hole.