DIFFERENTIAL - TRU-LOK (Continued)

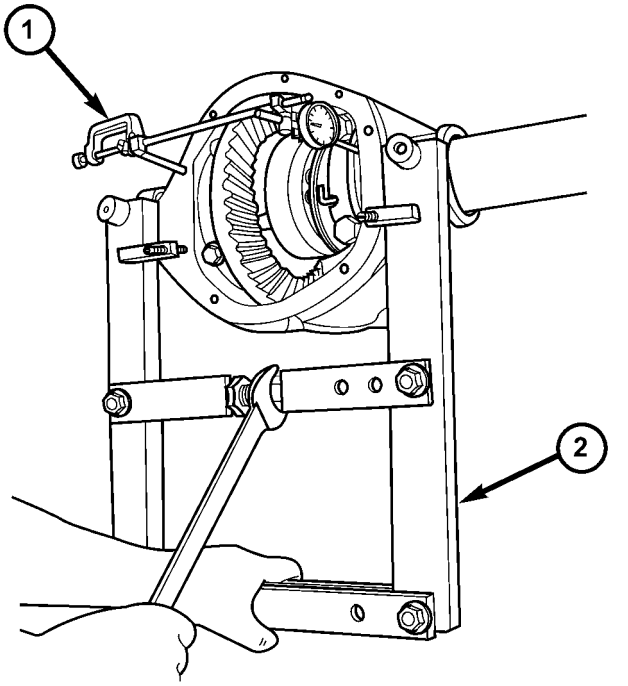

Fig. 67 SPREAD DIFFERENTIAL CASE

1 - DIAL INDICATOR
2 - SPREADER

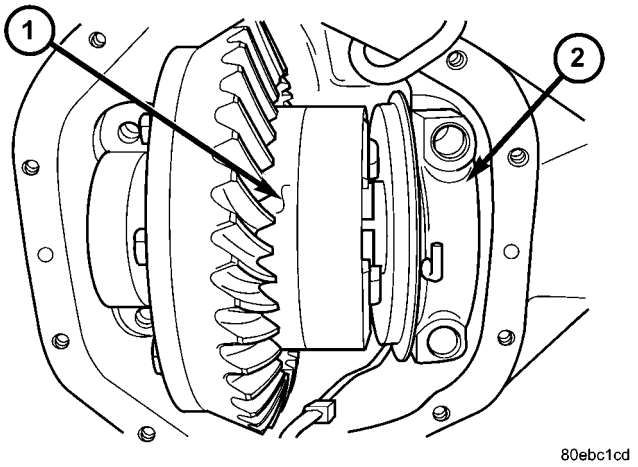

Fig. 68 DIFFERENTIAL

1 - DIFFERENTIAL
2 - BEARING CAP

(2) Remove differential case bearings with Puller 6444, Puller Rods 6444-3 and Puller Flange 6444-1. Position puller (Fig. 70) on the differential.

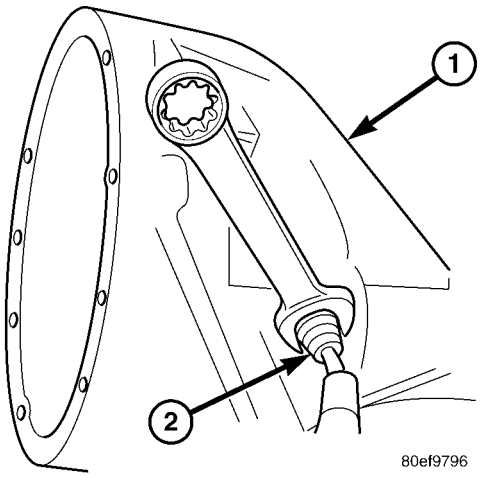

Fig. 69 INDICATOR SWITCH

1 - DIFFERENTIAL CASE
2 - SWITCH

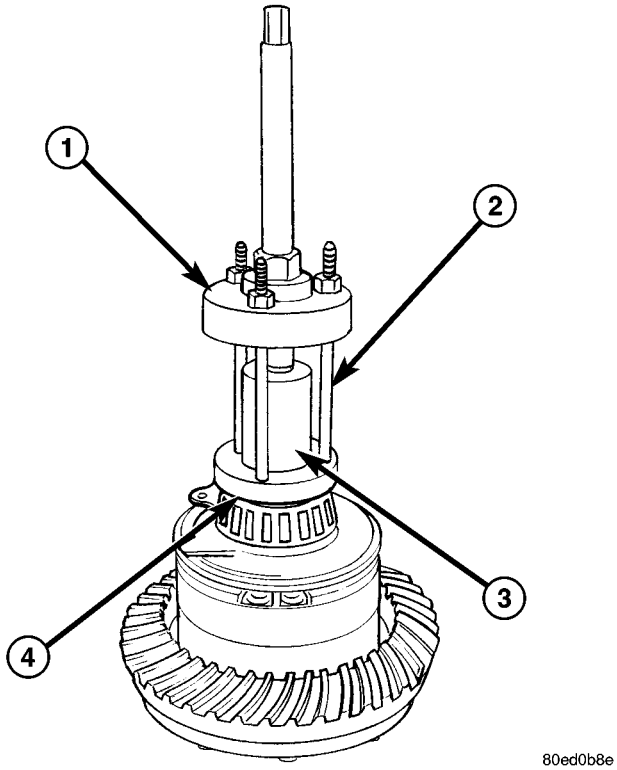

Fig. 70 PULLER AND FLANGE

1 - PULLER
2 - ROD
3 - PLUG
4 - FLANGE