DIFFERENTIAL - TRU-LOK (Continued)

(3) Position Puller Jaws 6444-7 (Fig. 71) around the case bearing and puller flange.

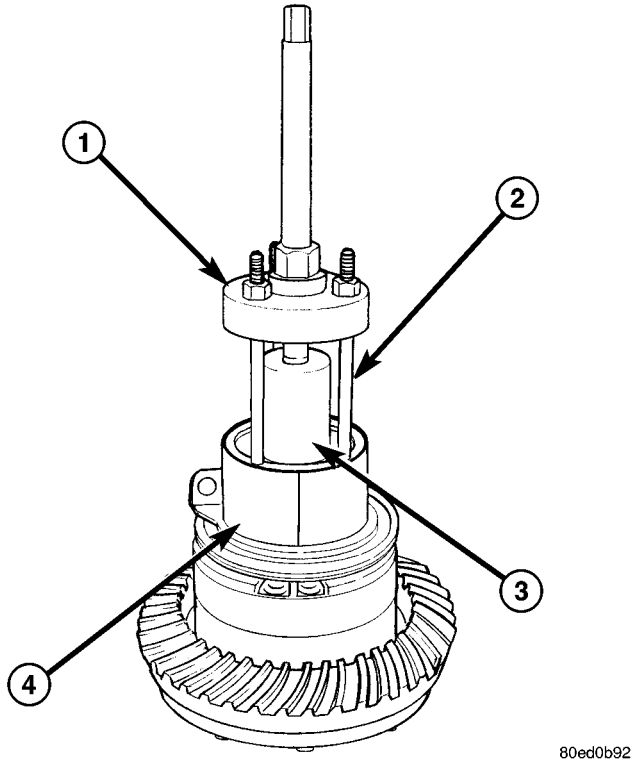

Fig. 71 PULLER AND JAWS

1 - PULLER
2 - ROD
3 - PLUG
4 - JAW

(4) Position Puller Collar 6444-8 (Fig. 72) around the puller jaws.

(5) Tighten the puller nut and remove differential case bearing.

(6) Remove locking actuator (Fig. 73).

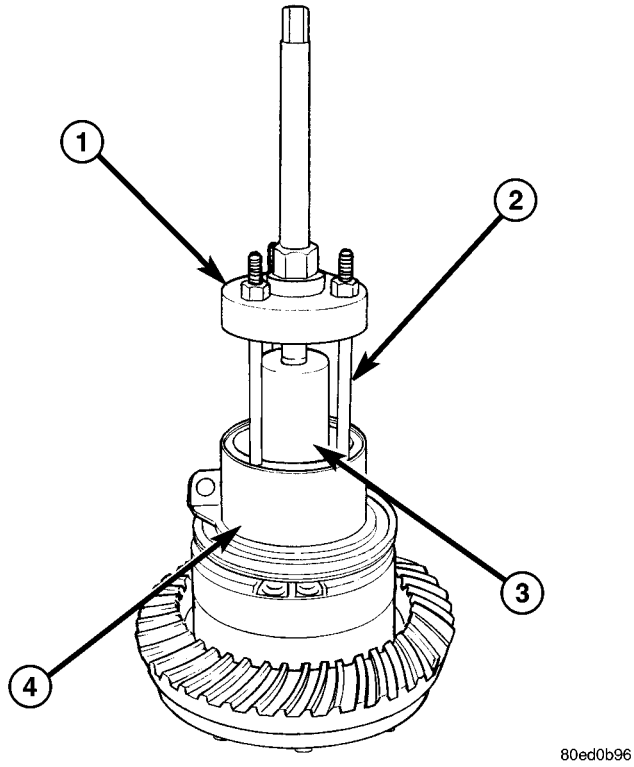

Fig. 72 PULLER AND COLLAR

1 - PULLER
2 - ROD
3 - PLUG
4 - COLLAR

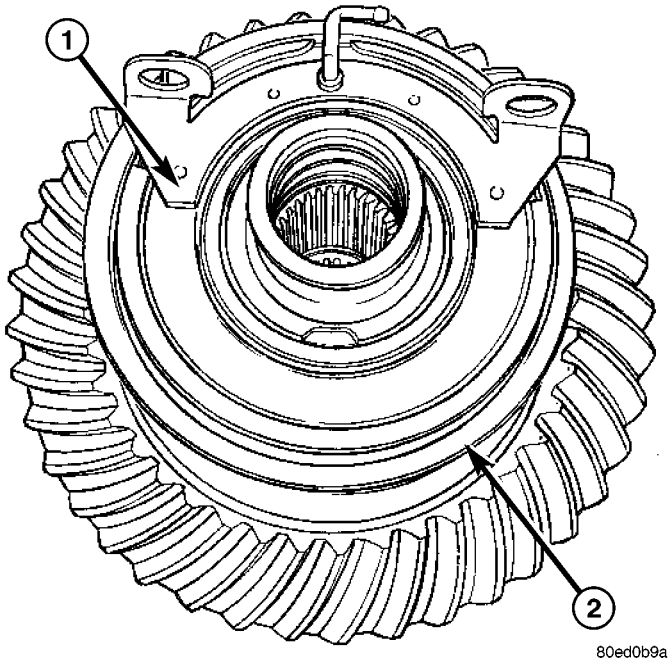

Fig. 73 ACTUATOR

1 - ACTUATOR
2 - PRESSURE PLATE