DIFFERENTIAL - TRU-LOK PUMP (Continued)

(2) Remove pressure hoses from the front and rear pumps.

(3) Remove pump mounting bracket bolts (Fig. 80).

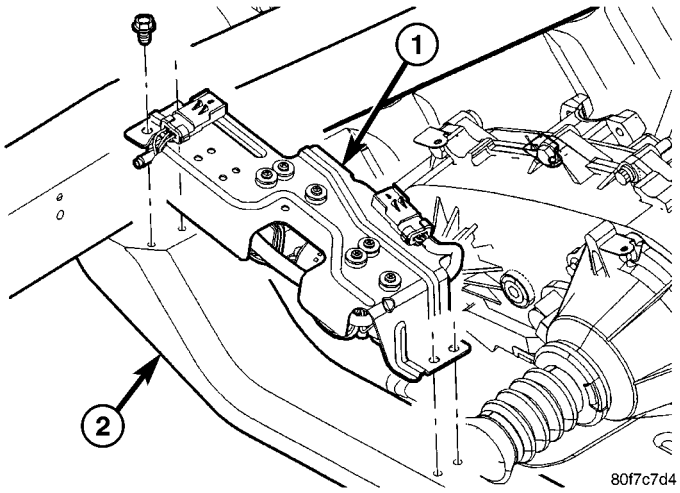

Fig. 80 PUMP BRACKET

1 - PUMP BRACKET
2 - CROSSMEMBER/SKID PLATE

(4) Remove pumps and bracket assembly from the vehicle.

(5) Remove pump connectors from the mounting bracket.

(6) Remove pump mounting screws (Fig. 81) from the bracket and remove pump/pumps.

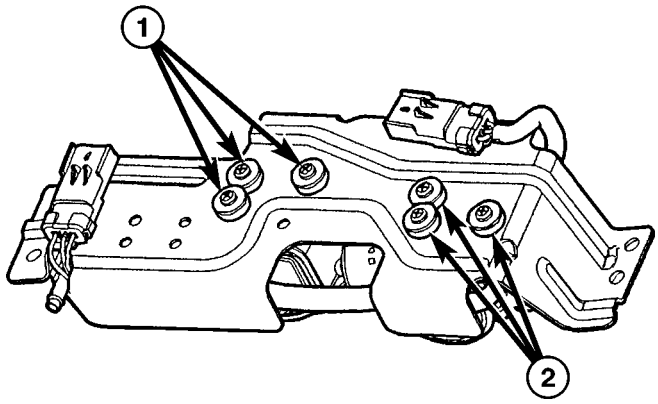

Fig. 81 PUMP SCREWS

1 - REAR PUMP SCREWS
2 - FRONT PUMP SCREWS

INSTALLATION

(1) Align pump with screw holes in pump bracket.

(2) Install and tighten pump mounting screws (Fig. 82).

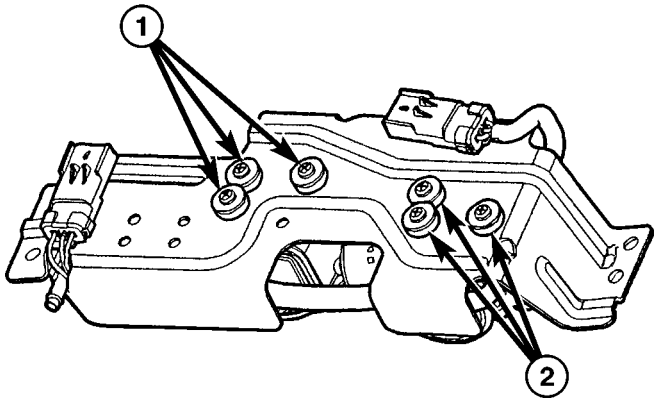

Fig. 82 PUMP SCREWS

1 - REAR PUMP SCREWS
2 - FRONT PUMP SCREWS

(3) Install pump bracket assembly on the crossmember/skid plate and install pump bracket mounting bolts (Fig. 83).

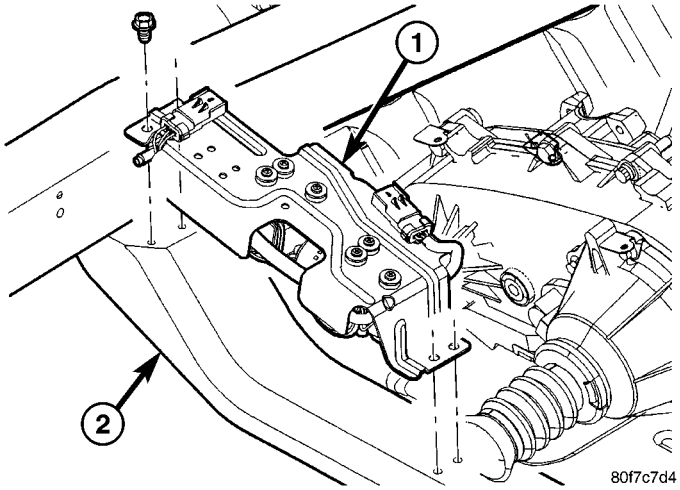

Fig. 83 PUMP BRACKET

1 - PUMP BRACKET
2 - CROSSMEMBER/SKID PLATE