DIFFERENTIAL - TRU-LOK PUMP (Continued)

(4) Tighten pump bracket bolts to 14 N·m (125 in. lbs.).

(5) Connector pump and axle harness connectors (Fig. 84).

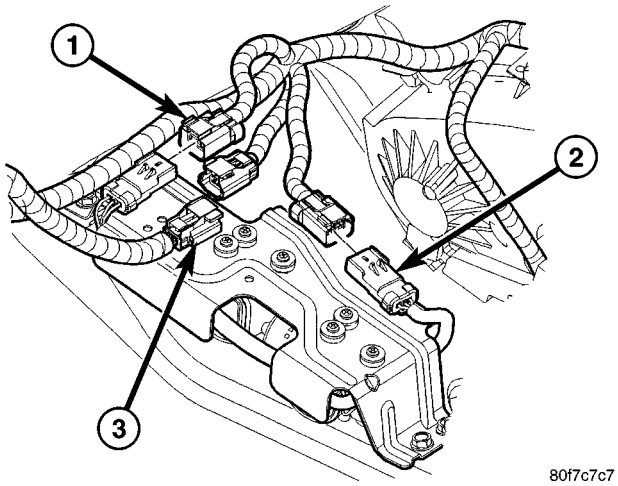

Fig. 84 PUMP CONNECTORS

1 - REAR PUMP CONNECTOR
2 - FRONT PUMP CONNECTOR
3 - AXLE HARNESS

(6) Install pressure hoses on the pumps.

(7) Verify pump operation.

DIFFERENTIAL CASE BEARINGS

REMOVAL

(1) Remove differential case from axle housing.

(2) Remove bearings from the differential case with Puller/Press C-293-PA, Adapters C-293-18 and Plug SP-3289 (Fig. 85).

INSTALLATION

NOTE: If replacement differential side bearings or differential case are being installed, differential side bearing shim requirements may change. Refer to Adjustments for (Differential Bearing Preload and Gear Backlash) procedures.

(1) Install differential side bearings with Installer D-156 and Handle C-4171 (Fig. 86).

(2) Install differential into the housing.

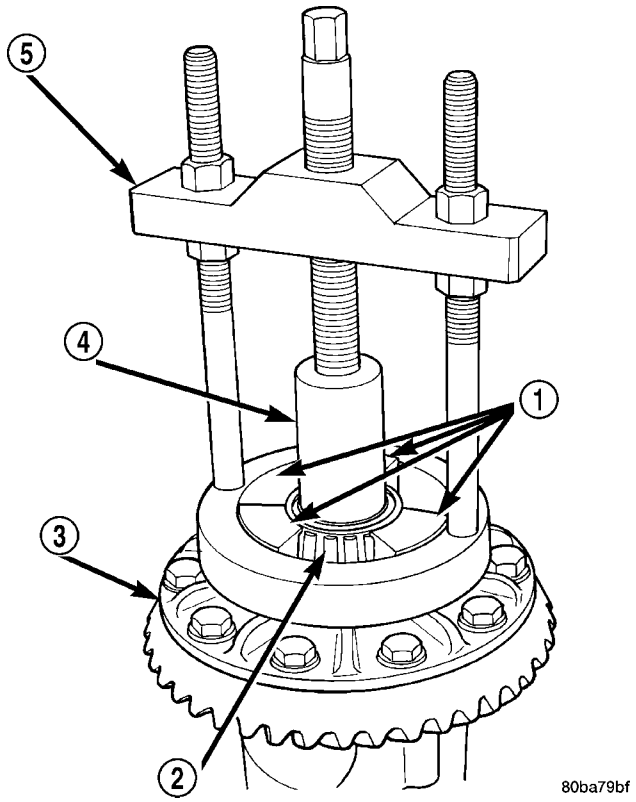

Fig. 85 DIFFERENTIAL CASE BEARING

1 - ADAPTERS
2 - BEARING
3 - DIFFERENTIAL
4 - PLUG
5 - PULLER

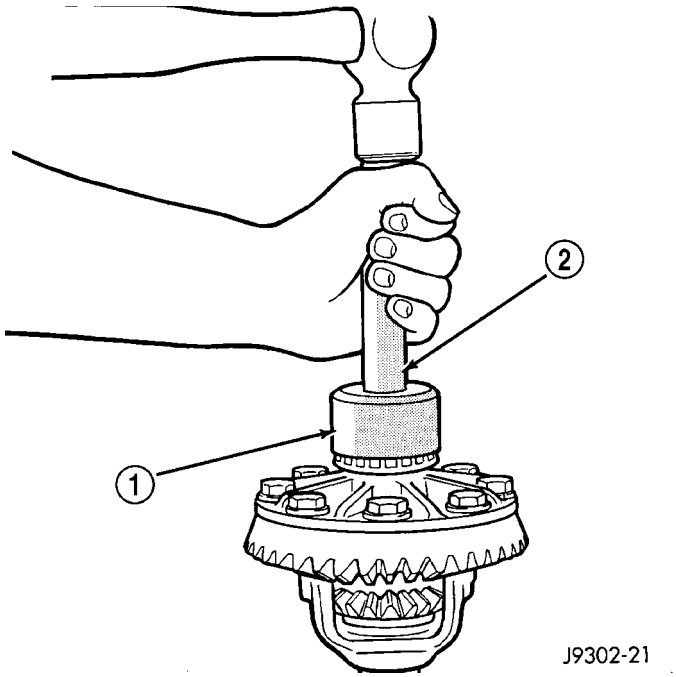

Fig. 86 DIFFERENTIAL SIDE BEARING

1 - INSTALLER
2 - HANDLE