PINION GEAR/RING GEAR/ TONE RING

REMOVAL

NOTE: The ring gear and pinion are serviced as a matched set. Never replace one gear without replacing the other matched gear.

(1) With vehicle in neutral, position vehicle on hoist.
(2) Remove differential assembly from axle housing.
(3) Place differential case in a vise with soft metal jaw.
(4) Remove bolts holding ring gear to differential case.
(5) Driver ring gear off the differential case with a dead-blow hammer (Fig. 87).

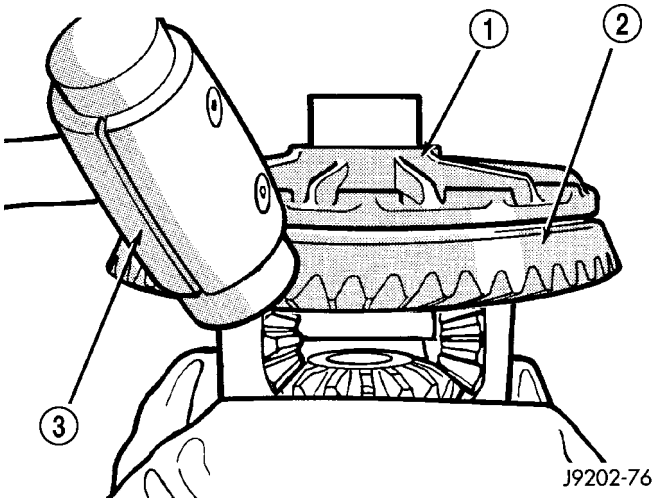


Fig. 87 RING GEAR

1 - CASE
2 - RING GEAR
3 - DEAD-BLOW HAMMER

(6) Using Spanner Wrench 6958 to hold yoke, remove the pinion nut and washer (Fig. 88).
(7) Remove pinion yoke from pinion shaft with Remover C-452 and Flange Wrench C-3281 (Fig. 89).

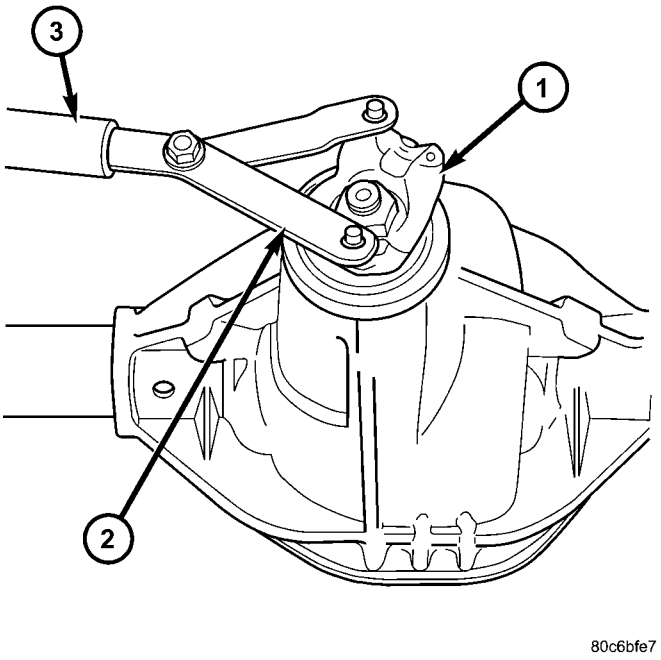


Fig. 88 YOKE SPANNER WRENCH

1 - PINION YOKE
2 - SPANNER WRENCH
3 - PIPE

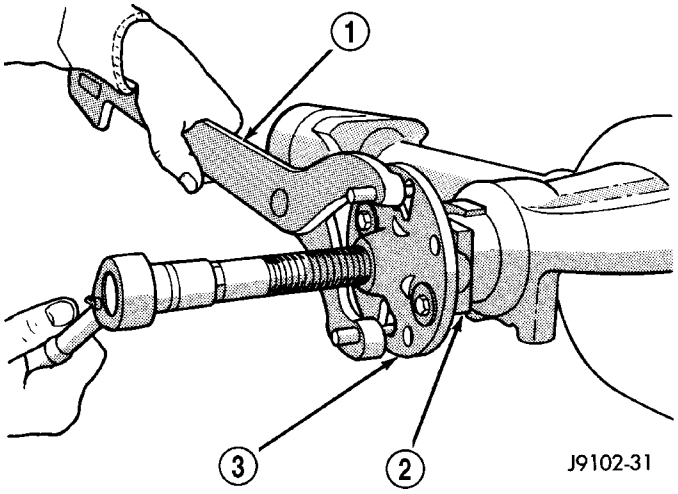


Fig. 89 PINION YOKE REMOVER

1 - REMOVER
2 - PINION YOKE
3 - FLANGE WRENCH