PINION GEAR/RING GEAR/TONE RING (Continued)

(8) Remove pinion gear from the housing (Fig. 90).

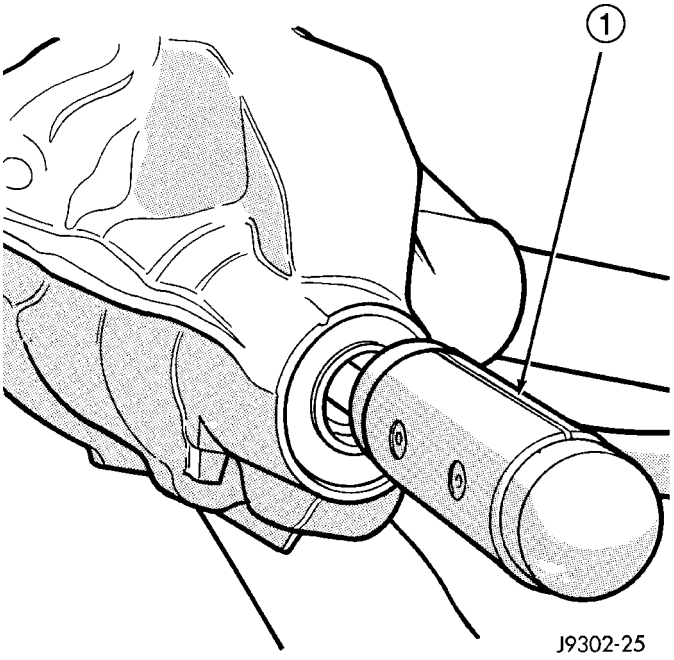


Fig. 90 PINION GEAR

1 - DEAD-BLOW HAMMER

(9) Remove front pinion bearing cup, bearing and pinion seal with Remover D-147 and Handle C-4171 (Fig. 91).

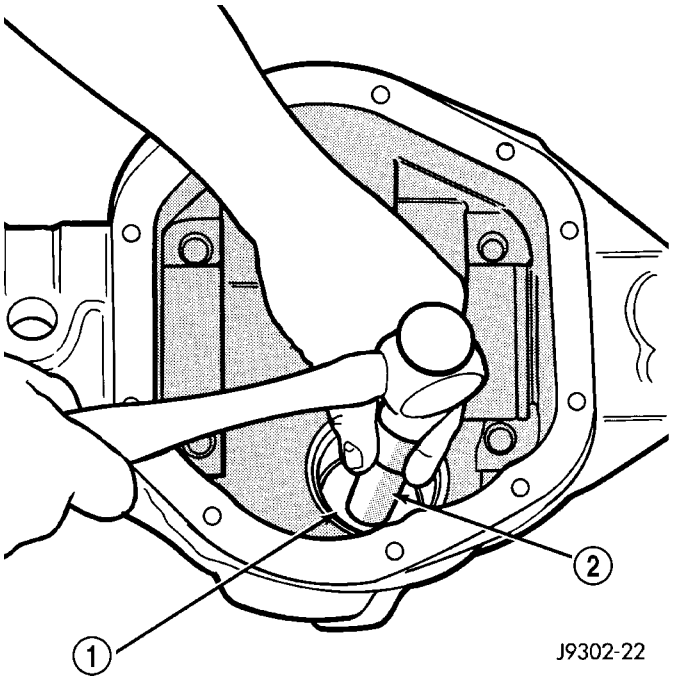


Fig. 91 FRONT BEARING CUP

1 - REMOVER
2 - HANDLE

(10) Remove rear pinion bearing cup from axle housing with remover D-148 and Handle C-4171 (Fig. 92).

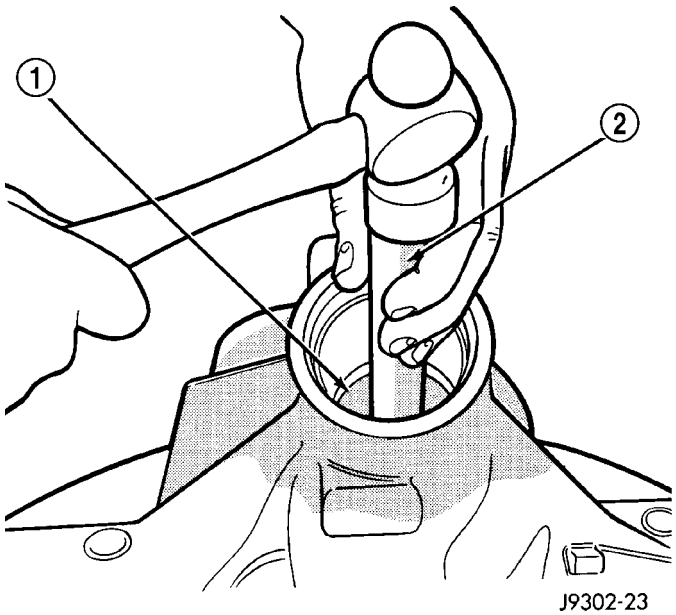


Fig. 92 REAR BEARING CUP

1 - DRIVER
2 - HANDLE

(11) Remove rear pinion bearing from the pinion with Puller/Press C-293-PA and Adapters C-293-39 (Fig. 93).

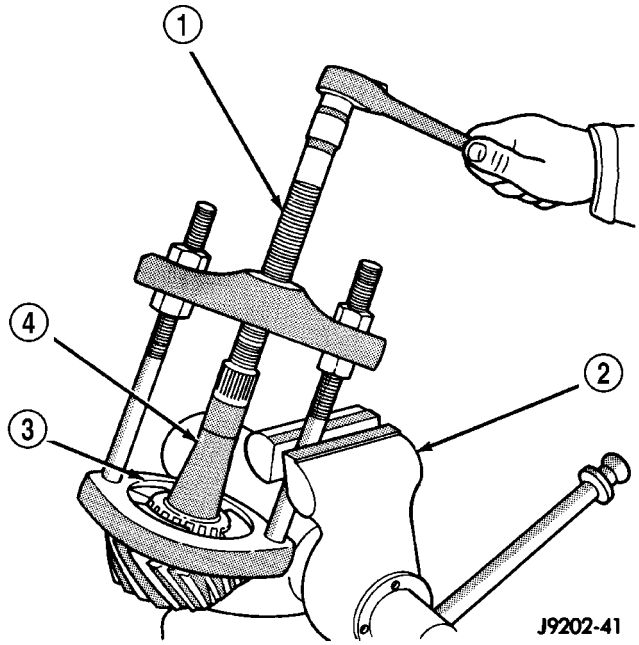


Fig. 93 REAR PINION BEARING

1 - PULLER
2 - VISE
3 - ADAPTERS
4 - PINION GEAR SHAFT