PINION GEAR/RING GEAR/TONE RING (Continued)

(12) Remove and record pinion depth shims from the pinion gear shaft.

INSTALLATION

NOTE: Pinion depth shims are placed between the rear pinion bearing and pinion gear head to achieve proper ring and pinion gear mesh. If the ring and pinion gears are reused, the original pinion depth shim can be used. Refer to Adjustments (Pinion Gear Depth) to select the proper shim thickness.

(1) Install pinion depth shim in rear pinion bearing cup bore.

(2) Apply Mopar Door Ease or equivalent lubricant to the outside surface of pinion bearing cups. Install rear bearing cup with Installer D-145 and Handle C-4171 (Fig. 94) and verify cup is seated.

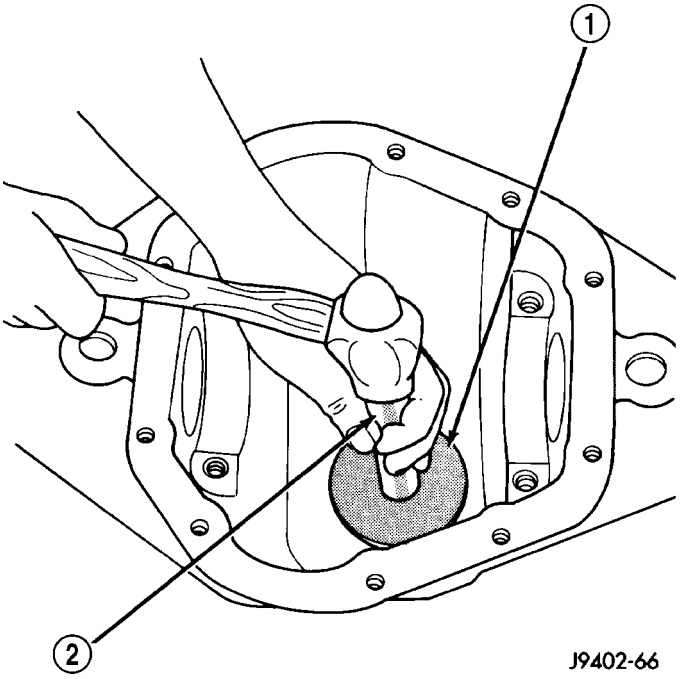

Fig. 94 REAR BEARING CUP

1 - INSTALLER
2 - HANDLE

(3) Install front bearing cup with Installer D-144 and Handle C-4171 (Fig. 95) and verify cup is seated.

(4) Install front pinion bearing and oil slinger, if equipped.

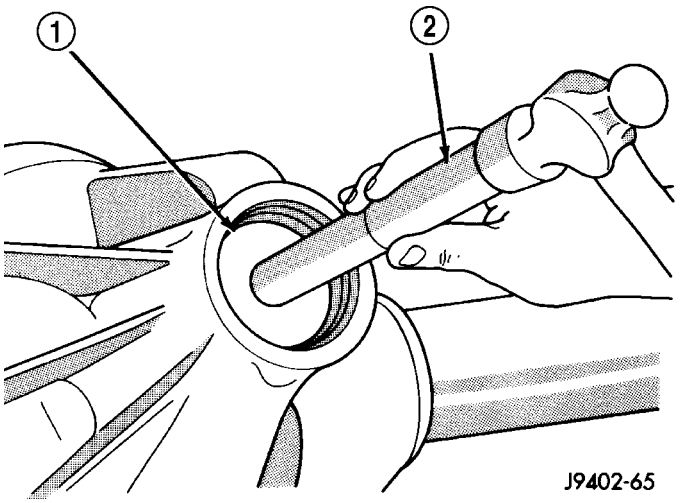

Fig. 95 FRONT BEARING CUP

1 - INSTALLER
2 - HANDLE

(5) Apply a light coating of gear lubricant on the lip of pinion seal. Install seal with Installer 8681 (Fig. 96).

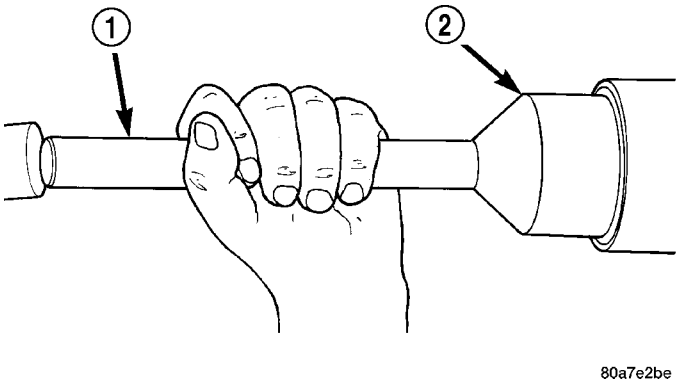

Fig. 96 PINION SEAL INSTALLER

1 - HANDLE
2 - INSTALLER